



**ELECTRONIC
TERMINATIONS**

PART OF ROLAND GROUP



NSN

We manufacture and stock a large number of products for military use

ELECTRONIC TERMINATIONS LIMITED,
NSN,DESCRIPTION

0559-99-193-5243,"INSULATION SLEEVING,ELECTRICAL"

5950-99-529-0146,TRANSDUCTOR

0625-99-752-2147,VALVE

0671-99-414-6775,"WASHER,FLAT"

1005-12-185-5905,BUSH

1005-12-185-5911,SEAR

1015-99-963-7866,CONTACT BLOCK

1072-99-533-5710,

1072-99-533-5711,15 AMP SOCKET

1220-99-521-3075,CONTACT ASSY ELECTRICAL

1260-99-525-4897,954-10470

1260-99-531-6939,"18-3/8""LG WITH SOCKET"

1285-99-900-0218,"CONNECTOR,RADIO FREQUENCY"

1420-99-954-9259,"CABLE ASSEMBLY,RADIO
FREQUENCY,BRANCHED"

1420-99-954-9263,"CABLE ASSEMBLY,RADIO
FREQUENCY,BRANCHED"

1430-99-001-3234,"WIRING HARNESS,BRANCHED"

1430-99-001-3240,"WIRING HARNESS,BRANCHED"

1430-99-001-3244," WIRING HARNESS,BRANCHED"

5945-99-932-6296,

5945-99-948-9156,RELAY ASSEMBLY

5945-99-953-6782,

5945-99-963-0144,SOLENOID

5950-99-038-6786," INDUCTOR,RADIO FREQUENCY"

5950-99-413-2637,LOADING COIL UNIT

5950-99-529-0146,TRANSDUCTOR

5950-99-632-3140,

5950-99-633-9473,TRANSFORMER POWER STEP UP

5950-99-638-4097,

5950-99-639-1798,CHOKE

5950-99-639-1801,CHOKE

5950-99-639-1802,CHOKE

5950-99-714-4908,

5950-99-714-4917,TRANSFORMER R.F.

5950-99-714-4923,TRANSFORMER R.F.

5950-99-714-4924,TRANSFORMER R.F.

5950-99-719-5573,CHOKE

5950-99-900-5710,TRANSFORMER UNIT

5950-99-956-8633,

5960-00-355-9580,

5960-01-029-0503,VALVE



1430-99-001-3581,"CABLE ASSEMBLY,RADIO FREQUENCY"
1430-99-001-3587,"WIRING HARNESS,BRANCHED"
1430-99-001-3589,"WIRING HARNESS,BRANCHED"
1430-99-001-3621,"WIRING HARNESS,BRANCHED"
1430-99-001-3644,"WIRING HARNESS,BRANCHED"
1430-99-001-3656,"WIRING HARNESS,BRANCHED"
1430-99-001-3657,"WIRING HARNESS,BRANCHED"
1430-99-001-3658,"WIRING HARNESS,BRANCHED"
1430-99-001-3676,"WIRING HARNESS,BRANCHED"
1430-99-112-7984,SIMILAR TO B/50/78155
1430-99-112-9784,"INSERT AND SHELL,ELECTRICAL PLUG-SOCKET"
1430-99-222-2066,"CABLE ASSEMBLY,RADIO FREQUENCY"
1430-99-539-9796,"CABLE ASSEMBLY,SPECIAL PURPOSE,ELECTRICAL,BRANCHED"
1430-99-539-9797,"CABLE ASSEMBLY,SPECIAL PURPOSE,ELECTRICAL,BRANCHED"
1430-99-618-6448,WIRING HARNESS
1430-99-618-8281,"OSCILLATOR,RADIO FREQUENCY"
1430-99-630-3201,WIRING HARNESS
1430-99-913-6588,"CABLE ASSEMBLY,RADIO FREQUENCY"
1430-99-913-6591,"CABLE ASSEMBLY,RADIO FREQUENCY"
1430-99-913-7450,"CABLE ASSEMBLY,RADIO FREQUENCY"
1430-99-913-7542,"CABLE ASSEMBLY,RADIO FREQUENCY"
1430-99-913-9182,"CABLE ASSEMBLY,RADIO FREQUENCY"
1430-99-913-9183,"CABLE ASSEMBLY,RADIO FREQUENCY"
1430-99-913-9183,"CABLE ASSEMBLY,RADIO"
1430-99-946-5066,"CABLE ASSEMBLY,RADIO FREQUENCY"
1430-99-946-6654,BRASS EHT SKT PANEL R/A UR65
1430-99-946-6655,BRASS PLUG R/A PANEL UR65
1430-99-947-8400,"CABLE ASSEMBLY,RADIO FREQUENCY"
1430-99-947-8402,"CABLE ASSEMBLY,RADIO FREQUENCY"
1430-99-948-6448,"CABLE ASSEMBLY,RADIO FREQUENCY"
1430-99-948-6628,"CABLE ASSEMBLY,RADIO FREQUENCY"
1430-99-954-4758,"CABLE ASSEMBLY,RADIO FREQUENCY"
1650-99-142-0373,"JERRIK FILTER ADAPTOR
1650-99-525-0982,CABLE ASSEMBLY
1650-99-905-4784,MOTOR
1680-99-104-8573,CABLE ASSY PLUG ELECTRICAL
1680-99-194-6454,"PANEL,INDICATING,LIGHT TRANSMITTING"
1680-99-418-5321,"CONNECTOR,INTERCOMM"
1680-99-471-1114,CONNECTOR
1730-99-469-3096,
2510-99-653-4520,GENERATOR CAPACITOR BOX
2590-99-739-6092,MINI MODULE
2590-99-739-7467,"CABLE AND CONDUIT ASSEMBLY,ELECTRICAL"
2590-99-744-9237,WIRING HARNESS
2590-99-758-6608,CONNECTOR
2590-99-762-4217,COVER
2590-99-766-3523,WIRING HARNESS
2590-99-775-2613,WIRING HARNESS
2590-99-777-6039,"WIRING HARNESS,BRANCHED"
2590-99-786-1380,"WIRING HARNESS,BRANCHED"
2590-99-791-9528,"CABLE ASSEMBLY,POWER,ELECTRICAL"
2590-99-796-6203,"CABLE ASSEMBLY,POWER,ELECTRICAL"
2590-99-802-3443,"CABLE ASSEMBLY,SPECIAL PURPOSE,ELECTRICAL"
2590-99-804-2203,WIRING HARNESS
2590-99-806-1541,"CABLE ASSEMBLY,SPECIAL PURPOSE,ELECTRICAL"
2590-99-809-9546,"CABLE ASSEMBLY,POWER,ELECTRICAL"
2590-99-813-9704,"WIRING HARNESS,BRANCHED"
2590-99-813-9705,WIRING HARNESS
5960-32-013-8864,
5960-99-000-0005,ELECTRONIC VALVE
5960-99-000-0455,VALVE ELECTRONIC
5960-99-037-2304,VALVE ELECTRONICS
5960-99-037-3112,
5960-99-037-4131,DIODE CV8836
5960-99-118-0159,MAGNETRON
5960-99-118-0680,
5960-99-118-0734,
5960-99-118-0735,
5960-99-118-1008,
5960-99-118-2085,
5960-99-118-8791,
5960-99-932-5191,
5960-99-948-2417,
5961-00-057-2308,
5961-00-722-1480,
5961-00-879-3089,TRANSISTOR
5961-00-913-5195,TRANSISTOR
5961-00-947-1166,
5961-01-045-7473,TRANSISTOR
5961-17-047-6411,"SEMICONDUCTOR DEVICE,DIODE"
5961-17-053-3359,"SEMICONDUCTOR DEVICE,DIODE"
5961-17-053-3360,"SEMICONDUCTOR DEVICE,DIODE"
5961-17-053-3664,"SEMICONDUCTOR DEVICE,DIODE"
5961-17-053-4540,"SEMICONDUCTOR DEVICE,DIODE"
5961-99-037-4225,
5961-99-037-5056,TRANSISTOR
5961-99-037-5095,ZENER
5961-99-037-5192,DIODE
5961-99-038-0769,
5961-99-038-2844,TRANSISTOR
5961-99-118-0256,
5961-99-118-1940,TRANSISTOR
5961-99-118-2712,
5961-99-118-2980,DIODE
5961-99-118-3609,
5961-99-118-4753,
5961-99-118-5917,TRANSISTOR
5961-99-118-6676,TRANSISTOR
5961-99-118-6990,TRANSISTOR
5961-99-627-0521,
5961-99-627-2857,
5961-99-627-3651,TRANSISTOR
5961-99-627-6737,TRANSISTOR
5961-99-650-8302,
5961-99-782-2628,TRANSISTOR
5961-99-954-4454,TRANSISITOR PAD
5961-99-970-9040,
5961-AF-001-8923,
5962-01-026-2487,"MICROCIRCUIT,DIGITAL"
5962-01-037-6408,"MICROCIRCUIT,DIGITAL"
5962-01-050-5507,
5962-01-051-3615,"MICROCIRCUIT,DIGITAL"
5962-01-063-1966,"MICROCIRCUIT,DIGITAL"
5962-01-067-4980,"MICROCIRCUIT,DIGITAL"
5962-01-069-9683,"MICROCIRCUIT,DIGITAL"
5962-01-111-1023,MICROCIRCUIT DIGITAL
5962-01-114-1573,INTEGRATED CIRCUIT
5962-01-326-6072,"MICROCIRCUIT,DIGITAL"
5962-32-011-5180,INTEGRATED CUT
5962-32-062-3853,INTEGRATED CIRCUIT
5962-99-038-1403,MICRO CIRCUIT
5962-99-118-1290,"INTEG CIRCUIT, HALF SHIFT REGISTER"
5962-99-398-6606,

2590-99-813-9706,WIRING HARNESS
 2590-99-815-6019,15FT 46MTH
 2590-99-815-6147,"CABLE ASSEMBLY,SPECIAL
 PURPOSE,ELECTRICAL,BRANCHED"
 2590-99-815-8020,"CABLE
 ASSEMBLY,INTERVEHICLE,ELECTRICAL"
 2590-99-815-8021,"CABLE
 ASSEMBLY,INTERVEHICLE,ELECTRICAL"
 2590-99-816-8034,"WIRING HARNESS,BRANCHED"
 2590-99-817-0826,WIRING HARNESS
 2590-99-818-6273,WIRING HARNESS
 2590-99-818-6638,WIRING HARNESS
 2590-99-818-6640,"LEAD,ELECTRICAL"
 2590-99-818-7792,"CABLE ASSEMBLY,POWER,ELECTRICAL"
 2590-99-818-7793,"CABLE ASSEMBLY,POWER,ELECTRICAL"
 2590-99-818-7795,"CABLE ASSEMBLY,POWER,ELECTRICAL"
 2590-99-818-7797,"CABLE ASSEMBLY,POWER,ELECTRICAL"
 2590-99-818-7798,"CABLE ASSEMBLY,POWER,ELECTRICAL"
 2590-99-818-7800,WIRING HARNESS
 2590-99-818-7802,"CABLE ASSEMBLY,POWER,ELECTRICAL"
 2590-99-818-7803,"CABLE ASSEMBLY,POWER,ELECTRICAL"
 2590-99-818-7806,WIRING HARNESS
 2590-99-822-6501,"LEAD AND CONDUIT
 ASSEMBLY,ELECTRICAL"
 2590-99-827-2361,"WIRING HARNESS,BRANCHED"
 2590-99-828-3661,"CABLE ASSEMBLY,POWER,ELECTRICAL"
 2590-99-828-8847,WIRING HARNESS
 2590-99-833-5091,WIRING HARNESS
 2590-99-850-1504,LEAD ANTENNA
 2590-99-881-9435,WIRING HARNESS
 2590-99-910-9945,WIRING HARNESS
 2815-99-526-1450,SHAFT SHOULDERED
 2840-99-700-1132,ADAPTOR TERMINATION
 2920-99-786-8567,VOLTAGE REGULATOR
 2920-99-881-4051,"CABLE ASSEMBLY,SPECIAL
 PURPOSE,ELECTRICAL"
 3010-12-158-8937,INSERT
 3020-99-313-4102,PULLEY GROOVE
 3040-99-001-6364,CONNECTOR LINK
 3040-99-289-8460,
 3040-99-526-7098,SHAFT SHOULDERED
 3120-99-804-1599,BEARING SLEEVE
 3460-99-954-2396,"SOCKET,TAPER SHANK TOOL"
 4020-99-661-5544,ROPE FIBROUS 50FT
 4130-99-770-3121,FILTER AIR CONDITIONING
 4140-99-971-7590,IMPELLER
 4320-00-369-9911,
 4320-00-538-1594,RING WEARING
 4320-01-219-3109,RING WEARING
 4320-66-063-8310,
 4320-99-288-0649,IMPELLER SEE 4320-99-554-0650
 4320-99-288-0661,IMPELLER
 4320-99-288-0673,WEAR RING
 4320-99-288-0675,RING
 4320-99-288-0679,
 4320-99-288-0681,
 4320-99-288-2799,
 4320-99-289-8462,WEAR RING
 4320-99-289-8465,
 4320-99-369-9924,IMPELLER
 4320-99-524-3236,RING WEARING
 4320-99-524-3754,"IMPELLER,PUMP,CENTRIFUGAL"
 4320-99-524-3757,"PUMP,CENTRIFUGAL"
 4320-99-524-8381,RING
 4320-99-524-8382,RING WEARING
 5962-99-626-9710,
 5962-99-627-7440,
 5962-99-644-3474,
 5962-99-659-9232,MICROCIRCUIT
 5962-99-726-3483,MICROCIRCUIT
 5962-99-779-2642,MICROCIRCUIT DIGITAL
 5962-99-782-4709,"MICROCIRCUIT,DIGITAL"
 5965-01-127-3890,"MILITARY STANDARD HEADSET, ELECT."
 5965-99-103-6540,
 5965-99-103-7016,
 5965-99-107-5503,
 5965-99-107-5504,
 5965-99-107-5505,
 5965-99-117-5044,
 5965-99-223-9890,
 5965-99-470-9849,
 5965-99-620-5667,SEE 661-6093
 5965-99-631-0659,PRESSURE SLEEVE
 5965-99-649-8522,
 5965-99-653-9027,CONNECT. APPLICABLE TO MK1V HELMET
 5965-99-738-0245,
 5965-99-745-1298,ACTUATOR ASSEMBLY
 5965-99-911-6834,MICROPHONE MAGNETIC
 5965-99-932-4159,
 5965-99-932-4159,
 5965-99-949-1798,
 5965-99-949-1832,
 5965-99-951-3811,
 5965-99-952-2292,
 5965-99-955-3503,
 5965-99-970-2835,"HEADBAND, HEADSET"
 5965-99-970-9439,
 5965-99-999-2773,
 5970-32-051-6001,
 5970-99-008-0819,"PINK 5'" LENGTHS"
 5970-99-101-6515,
 5970-99-110-6627,
 5970-99-111-0150,SLEEVE
 5970-99-134-5311,WASHER
 5970-99-140-8370,
 5970-99-434-2051,SLVING H/S 1/4
 5970-99-434-2121,SLEEVING H/S 1/8 RED
 5970-99-434-2135,
 5970-99-434-2143,HEATSHRINK
 5970-99-434-6281,
 5970-99-434-6376,
 5970-99-434-6694,
 5970-99-444-5302,"PARTS SET,STANDOFF INSULATOR"
 5970-99-466-7183,
 5970-99-520-6757,"INSULATION SLEEVING,ELECTRICAL"
 5970-99-522-9610,"INSULATOR,PLATE"
 5970-99-531-8258,"INSULATION
 SLEEVING,ELECTRICAL,SPECIAL PURPOSE"
 5970-99-531-8260,"INSULATION
 SLEEVING,ELECTRICAL,SPECIAL PURPOSE"
 5970-99-531-8263,"INSULATION
 SLEEVING,ELECTRICAL,SPECIAL PURPOSE"
 5970-99-537-0746,"INSULATOR,STANDOFF"
 5970-99-539-6744,"INSULATION SHEET,ELECTRICAL"
 5970-99-541-7200,"TAPE,GLASS"
 5970-99-545-0313,"INSULATION SHEET,ELECTRICAL"
 5970-99-545-0314,"INSULATION SHEET,ELECTRICAL"
 5970-99-545-0320,"INSULATION SHEET,ELECTRICAL"
 5970-99-545-0321,"INSULATION SHEET,ELECTRICAL"
 5970-99-545-0323,"INSULATION SHEET,ELECTRICAL"

4320-99-524-8384,IMPELLER
 4320-99-526-7100,RING WEARING
 4320-99-526-7110,"RING,WEARING"
 4320-99-526-7112,JOINT RING
 4320-99-526-7113," PUMP,CENTRIFUGAL"
 4320-99-526-7959,RING
 4320-99-526-8756,"IMPELLER,PUMP,CENTRIFUGAL"
 4320-99-528-4260,RING THROWER
 4320-99-528-4273,RING WEAR VOLUTE & COVER
 4320-99-528-5120,EXTENSION SHAFT
 4320-99-532-2763,IMPELLER
 4320-99-532-3679,PUMP CENTRIFUGAL
 4320-99-538-0153,RING WEARING
 4320-99-538-0154,RING WEARING
 4320-99-538-0157,IMPELLER NUT
 4320-99-554-0648,RING WEARING
 4320-99-554-0650,"IMPELLER,PUMP,CENTRIFUGAL"
 4320-99-759-0768,IMPELLER
 4320-99-763-8071,RING WEARING
 4320-99-818-8050,PUMP DIAPHRAGM
 4320-99-818-8051,PUMP DIAPHRAGM
 4320-99-818-8052,HANDLE
 4330-99-526-7101,IMPELLER PUMP CENTRIFUGAL
 4350-99-525-3627,PRESSURE ATOMISING
 4440-99-624-3007,PLUG MOUNTING ASSEMBLY
 4510-99-208-6380,NPA7599 ITEM 2 & C61211
 4510-99-208-6384,SHAFT SS316S16
 4510-99-208-6385,BEARING
 4510-99-208-6556,"PLUG 3/8"" BSPT"
 4510-99-208-6557,"5/8"" KEY 3/16"" X 3/16""
 4730-99-288-0692,UNION PIPE COUPLING COMPLETE
 4730-99-500-2481,CONNECTOR
 4730-99-520-7127,CLAMP
 4730-99-730-1437,"STRAINER ELEMENT,SEDIMENT"
 4730-99-778-8407,RESISTOR BLOCK
 4730-99-795-1934,CLAMP
 4730-99-795-9313,CLAMP
 4820-99-217-9408,SHAFT
 4920-99-468-8471,WIRING HARNESS
 4920-99-468-8569,CONNECTOR
 4920-99-948-4751,"CABLE ASSEMBLY,SPECIAL PURPOSE,ELECTRICAL"
 4920-99-948-4752,"CABLE ASSEMBLY,RADIO FREQUENCY"
 4920-99-948-4764,"CABLE ASSEMBLY,SPECIAL PURPOSE,ELECTRICAL"
 4920-99-948-4765,"CABLE ASSEMBLY,SPECIAL PURPOSE,ELECTRICAL"
 4920-99-948-4766,"CABLE ASSEMBLY,SPECIAL PURPOSE,ELECTRICAL"
 4920-99-948-4885,"CABLE ASSEMBLY,SPECIAL PURPOSE,ELECTRICAL"
 4930-99-288-0666,REPLACEMENT PART S8477
 5120-99-288-0659,TUBE SPANNER
 5120-99-622-5392,"WRENCH,SPANNER"
 5120-99-722-1356,SETTING ADAPTOR
 5120-99-846-5026,SETTING ADAPTOR
 5120-99-944-4578,"DRIFT,DRILL"
 5130-99-470-6221,"HAMMER,ELECTRIC,PORTABLE"
 5305-99-133-3484,GRUB SCREW
 5305-99-288-0647,PARAFUSO SCREW
 5305-99-524-8375,SCREW
 5305-99-647-8680,"SCREW,SHOULDER"
 5305-99-948-0347,"SCREW ASSEMBLY,EXTERNALLY
 5305-99-948-0350,630/2/07875/001
 5970-99-580-6007,SLEEVE BINDING 3MMX1 YELLOW
 5970-99-618-0296,
 5970-99-630-7962,INSULATOR
 5970-99-639-0250,
 5970-99-805-0021,INSULATOR BUSHING
 5970-99-901-1025,
 5970-99-901-3283,
 5970-99-901-8032,SLEEVE
 5970-99-902-2557,"INSULATION SLEEVING,ELECTRICAL"
 5970-99-910-7066,
 5970-99-913-3791,
 5970-99-913-3792,
 5970-99-913-3793,
 5970-99-914-4495,"FUSE,CARTRIDGE"
 5970-99-942-4829,MS4 100G TUBES
 5970-99-943-5008,"TERMINAL,POST"
 5970-99-944-2766,INSULATION SLEEVING ELECT. PTFE PINK
 5970-99-951-2847,INSULATOR STANDOFF NYLON
 5970-99-955-7463,INSULATOR LINE CHELTON 14-13
 5970-99-999-0876,
 5970-AF-500-2144,
 5975-99-103-7482,
 5975-99-103-9057,"ADAPTOR,CABLE GLAND"
 5975-99-103-9058,
 5975-99-103-9059,
 5975-99-103-9060,
 5975-99-103-9061,"RETAINER,ELECTRICAL"
 5975-99-105-7758,CABLE NIPPLE INSULATOR
 5975-99-107-2303,SLEEVE MARKED D/SA 80101/166
 5975-99-222-0867,CONDUIT
 5975-99-222-0868,CONDUIT
 5975-99-222-6776,"CLAMP,LOOP"
 5975-99-449-1503,BUNGS
 5975-99-521-2849,CABLE & GLAND ASSEMBLY
 5975-99-521-2850,
 5975-99-522-1502,"RETAINER,ELECTRONIC CIRCUIT PANEL"
 5975-99-523-1693,
 5975-99-523-1693,
 5975-99-523-3889,"CABLE AND GLAND ASSEMBLY,SINGLE PAIR"
 5975-99-527-4575,TERMINAL BOX
 5975-99-527-6346,"RETAINER,ELECTRONIC CIRCUIT PANEL"
 5975-99-529-4024,CONDUIT BOX
 5975-99-529-5800,"STUD,CABLE SUPPORT"
 5975-99-529-5801,"STUD,CABLE SUPPORT"
 5975-99-531-5003,STUFFING TUBE
 5975-99-630-6950,
 5975-99-630-6951,
 5975-99-630-6952,
 5975-99-635-7567,
 5975-99-657-7025,MOUNTING BASE
 5975-99-740-0087,"MOUNT,TELESCOPIC,ELECTRICAL EQUIPMENT"
 5975-99-740-0089,"MOUNT,TELESCOPIC,ELECTRICAL EQUIPMENT"
 5975-99-805-6457,
 5975-99-831-5285,CABLE & GLAND ASSEMBLY
 5975-99-900-4456," PACKING NUT,CABLE GLAND"
 5975-99-900-4468," PACKING NUT,CABLE GLAND"
 5975-99-914-9681,
 5975-99-940-2247,
 5975-99-940-2248,
 5975-99-940-2249,RUBBER CABLE GLAND
 5975-99-945-0056,
 5977-99-408-1263,"BRUSH SET,ELECTRICAL CONTACT"

5305-99-948-0352,630/2/07793 P221200
5310-00-400-5355,NUT DIFFUSER
5310-99-134-4764,WASHER
5310-99-288-0637,SEE EMO-PLW30
5310-99-288-0654,WASHER
5310-99-288-0663,
5310-99-288-0678,
5310-99-288-0684,WASHER
5310-99-526-7099,NUT PLAIN CAP
5310-99-526-7957,"NUT,PLAIN,CAP"
5310-99-526-7960,WASHER
5310-99-526-8758,NUT PLAIN CAP
5310-99-534-8212,"NUT,PLAIN,CAP"
5310-99-538-0156,NUT PLAIN CAP
5310-99-653-0882,"WASHER,FLAT"
5310-99-664-4031,WASHER
5310-99-746-4991,WASHER FLAT
5310-99-931-7840,"DRILL,MASONRY,ROTARY DRIVEN"
5315-00-536-4310,PIN DRIVE PUMP
5315-99-288-0648,CHAVETA (KEY)
5315-99-288-0656,
5315-99-288-0689,"KEY 5/16""SQ. X 63MM IR/E"
5315-99-288-0690,KEY
5315-99-524-3755,KEY MACHINE
5315-99-524-3756,KEY MACHINE
5315-99-524-8386,"KEY,MACHINE"
5315-99-524-8387,"KEY,MACHINE"
5315-99-526-7107,"KEY, MACHINE"
5325-99-797-0336,GROMMET
5330-00-400-3017,SEAL
5330-00-400-3018,SEAL RING RETAINING
5330-00-400-3020,JOINT KLINGERIT
5330-99-131-4581,GASKET
5330-99-134-4764,WASHER FLAT
5330-99-134-4904,GASKET
5330-99-134-4904, GASKET
5330-99-288-0639,RING APA8338-11
5330-99-288-0640,SEE NR6632
5330-99-288-0652,GASKET
5330-99-288-0665,
5330-99-288-0682,JOINT KLINGERIT 500
5330-99-288-0683,GASKET
5330-99-451-3112,GASKET
5330-99-524-4581,"STRAINER ELEMENT,SEDIMENT"
5330-99-524-8380,GASKET
5330-99-526-7102,GASKET
5330-99-526-7103,GASKET
5330-99-526-7112,JOINT RING
5330-99-526-8757,GASKET (JOINT RING)
5330-99-526-8759,GASKET
5330-99-539-1934,SEAL
5330-99-624-1532,GASKET ASSEMBLY
5330-99-720-9953,SEAL
5330-99-720-9953,"SEAL,RUBBER SPECIAL SHAPED SECTION"
5330-99-852-2627,
5330-99-906-7879,GASKET
5330-99-942-9526,GASKET
5330-99-952-2278,"RING,SEALING,TOROIDAL"
5340-00-103-7291,"CLAMP,LOOP"
5340-99-051-9992,SHAFT
5340-99-103-7287,"CLAMP,LOOP"
5340-99-103-7288,"CLAMP,LOOP"
5340-99-103-7297,"CLAMP,LOOP"
5340-99-105-9394,"CLAMP,LOOP"
5340-99-109-1005,"CLAMP,LOOP"
5977-99-442-8808,"BRUSH,ELECTRICAL CONTACT"
5977-99-444-5525,"BRUSH,ELECTRICAL CONTACT"
5977-99-444-5593,"BRUSH,ELECTRICAL CONTACT"
5977-99-444-5754,"BRUSH,ELECTRICAL CONTACT"
5977-99-444-5760,"BRUSH,ELECTRICAL CONTACT"
5977-99-444-5779,"BRUSH,ELECTRICAL CONTACT"
5977-99-523-9881,"BRUSH,ELECTRICAL CONTACT"
5977-99-525-7005,"BRUSH,ELECTRICAL CONTACT"
5985-01-038-8011,ATTENUATOR SUB ASSEMBLY
5985-99-420-6962,PULLEY
5985-99-420-6965,"BODY,AERIAL CONTACT ASSEMBLY"
5985-99-421-6575,"BOOM,ANTENNA"
5985-99-421-6575,"BOOM,ANTENNA"
5985-99-421-6583,ANTENNA ELEMENT
5985-99-464-1181,DUMMY LOAD ELECTRICAL
5985-99-527-5849,WAVEGUIDE ASSY
5985-99-620-8029,"CASE,ANTENNA"
5985-99-620-9535,"CENTRE JUNCTION,DIPOLE"
5985-99-631-5633,SPIGOT ASSEMBLY
5985-99-633-2515,COUPLER DIRECTIONAL
5985-99-633-6240,ANTENNA ELEMENT
5985-99-637-0810,"BRACKET SUPPORT,ANTENNA MOUNTING"
5985-99-637-0810,"BRACKET SUPPORT,ANT"
5985-99-645-0295,ANTENNA PEDESTAL SUBASSEMBLY
5985-99-658-9723,ANTENNA ELEMENT
5985-99-721-0467,WAVEGUIDE ASSEMBLY
5985-99-822-2108,WAVEGUIDE ASSEMBLY
5985-99-944-4556,"CABLE ASSEMBLY,SPECIAL PURPOSE,ELECTRICAL"
5990-99-924-5239,ZEROING RING
5990-99-924-5240,ZEROING RING
5990-99-924-5240,
5990-99-924-5241,ZEROING RING
5990-99-924-5241,
5990-99-924-5242,ZEROING RING
5990-99-972-6675,SYNCHRO RECEIVER
5990-99-972-7667,ZEROING CIRCLIP
5990-99-972-7667,
5990-99-972-7669,ZEROING CIRCLIP
5990-99-972-7669,
5995-12-151-4066,
5995-12-151-4069,
5995-12-151-4497,
5995-14-390-3878,"CONNECTOR,FREE,ELECTRICAL"
5995-99-001-1230,"CABLE ASSEMBLY,RADIO FREQUENCY"
5995-99-102-4725,"CABLE ASSEMBLY,SPECIAL PURPOSE,ELECTRICAL"
5995-99-102-4786,"CABLE ASSEMBLY,SPECIAL PURPOSE,ELECTRICAL"
5995-99-102-4795,"CABLE ASSEMBLY,SPECIAL PURPOSE,ELECTRICAL"
5995-99-103-7025,"CABLE ASSEMBLY,SPEC"
5995-99-103-7198,"CABLE ASSEMBLY,SPECIAL PURPOSE,ELECTRICAL"
5995-99-103-7199,"CABLE ASSEMBLY,SPECIAL PURPOSE,ELECTRICAL"
5995-99-103-9155,"CABLE ASSEMBLY,SPECIAL PURPOSE,ELECTRICAL"
5995-99-104-0085,"CABLE ASSEMBLY,SPECIAL PURPOSE,ELECTRICAL"
5995-99-104-2567,"LEAD,ELECTRICAL"
5995-99-104-3720,
5995-99-104-3842,"CABLE ASSEMBLY,SPECIAL PURPOSE,ELECTRICAL"

5340-99-137-0588,CABLE TIE
5340-99-223-1766,"CLAMP,LOOP"
5340-99-223-1767,"CLAMP,LOOP"
5340-99-223-1768,"CLAMP,LOOP"
534099-409-8523,"CLAMP,LOOP"
5340-99-434-5963,"CLAMP,LOOP"
5340-99-434-5964,"CLAMP,LOOP"
5340-99-434-5965,"CLAMP,LOOP"
5340-99-434-5969,"CLAMP,LOOP"
5340-99-434-5974,"CLAMP,LOOP"
5340-99-434-5975,"CLAMP,LOOP"
5340-99-434-5980,"CLAMP,LOOP"
5340-99-434-5982,"CLAMP,LOOP"
5340-99-434-5984,"CLAMP,LOOP"
5340-99-434-6751,"CLAMP,LOOP"
5340-99-434-6752,"CLAMP,LOOP"
5340-99-434-6753,
5340-99-434-6753,"CLAMP,LOOP"
5340-99-434-6754,"CLAMP,LOOP"
5340-99-434-6755,"CLAMP,LOOP"
5340-99-434-6756,"CLAMP,LOOP"
5340-99-434-6757,"CLAMP,LOOP"
5340-99-434-6758,"CLAMP,LOOP"
5340-99-434-6760,"CLAMP,LOOP"
5340-99-529-1412,NON MAGNETIC
5340-99-529-1413,NON MAGNETIC
5340-99-529-1414,NON MAGNETIC
5340-99-529-1415,NON MAGNETIC
5340-99-530-6832,"CLAMP,LOOP"
5340-99-541-2546,MOUNT RESILIENT
5340-99-541-2553,MOUNT RESILIENT
5340-99-543-1976,EXTRACTOR TOOL
5340-99-573-5846,"CLAMP,LOOP"
5340-99-618-5109,"CLAMP,LOOP"
5340-99-622-5200,CLIP
5340-99-631-4306,COLLAR ASSEMBLY
5340-99-647-0155,"CLAMP,LOOP"
5340-99-655-5548,"CLAMP,LOOP"
5340-99-655-5548,"CLAMP,LOOP"
5340-99-657-7630,"CLAMP,LOOP"
5340-99-657-7631,"CLAMP,LOOP"
5340-99-657-7632,"CLAMP,LOOP"
5340-99-657-7633,"CLAMP,LOOP"
5340-99-658-7376,"CLAMP,LOOP"
5340-99-713-5032,"CLAMP,LOOP"
5340-99-720-9946,LEAF BUTT HINGE
5340-99-720-9947,LEAF BUTT HINGE
5340-99-720-9948,LEAF BUTT HINGE
5340-99-720-9949,LEAF BUTT HINGE
5340-99-720-9950,LEAF BUTT HINGE
5340-99-720-9951,LEAF BUTT HINGE
5340-99-720-9952,HINGE
5340-99-759-5393,BUFFER
5340-99-805-0925,CLAMP LOOP
5340-99-913-8894,
5340-99-914-4249,"CLAMP,LOOP"
5340-99-923-5847,SHOCK MOUNTING AN CRTEC DOR
5340-99-923-5856,SHOCK MOUNTING AMORTECEDOR
5340-99-933-3090,STRAP LINE
5340-99-940-0698,"CLAMP,LOOP"
5340-99-940-0859,CLIP ELECTRICAL
5340-99-945-3590,
5340-99-945-3968,"CLAMP,LOOP"
5340-99-950-9612,
5340-99-952-9242,
5995-99-104-3880,"CABLE ASSEMBLY,SPECIAL PURPOSE,ELECTRICAL"
5995-99-104-3881,"CABLE ASSEMBLY,SPECIAL PURPOSE,ELECTRICAL"
5995-99-104-3920,"CABLE ASSEMBLY,SPECIAL PURPOSE,ELECTRICAL"
5995-99-104-4393,
5995-99-104-5620,"CABLE ASSEMBLY,SPECIAL PURPOSE,ELECTRICAL"
5995-99-104-5638,"CABLE ASSEMBLY,SPECIAL PURPOSE,ELECTRICAL"
5995-99-105-3423,"CABLE ASSEMBLY,SPECIAL PURPOSE,ELECTRICAL"
5995-99-105-6015,"CABLE ASSEMBLY,SPECIAL PURPOSE,ELECTRICAL"
5995-99-105-8192,"CABLE ASSEMBLY,SPECIAL PURPOSE,ELECTRICAL"
5995-99-105-8196,"CABLE ASSEMBLY,SPECIAL PURPOSE,ELECTRICAL"
5995-99-105-8198,"CABLE ASSEMBLY,SPECIAL PURPOSE,ELECTRICAL"
5995-99-105-8199,"CABLE ASSEMBLY,SPECIAL PURPOSE,ELECTRICAL"
5995-99-105-8200,"CABLE ASSEMBLY,SPECIAL PURPOSE,ELECTRICAL"
5995-99-105-8251,"CABLE ASSEMBLY,SPECIAL PURPOSE,ELECTRICAL"
5995-99-106-1067,"CABLE ASSEMBLY,SPECIAL PURPOSE,ELECTRICAL"
5995-99-106-3587,"LEAD,ELECTRICAL"
5995-99-106-3589,"LEAD,ELECTRICAL"
5995-99-106-3957,"LEAD,ELECTRICAL"
5995-99-106-3958,"CABLE ASSEMBLY,SPECIAL PURPOSE,ELECTRICAL"
5995-99-106-3959,"CABLE ASSEMBLY,SPECIAL PURPOSE,ELECTRICAL"
5995-99-106-3973,"CABLE ASSEMBLY,SPECIAL PURPOSE,ELECTRICAL"
5995-99-106-3974,"CABLE ASSEMBLY,SPECIAL PURPOSE,ELECTRICAL"
5995-99-106-3975,"CABLE ASSEMBLY,SPECIAL PURPOSE,ELECTRICAL"
5995-99-106-3976,"CABLE ASSEMBLY,SPECIAL PURPOSE,ELECTRICAL"
5995-99-106-3977,"CABLE ASSEMBLY,SPECIAL PURPOSE,ELECTRICAL"
5995-99-106-3978,"CABLE ASSEMBLY,SPECIAL PURPOSE,ELECTRICAL"
5995-99-106-3981,"CABLE ASSEMBLY,SPECIAL PURPOSE,ELECTRICAL"
5995-99-106-5847,"CABLE ASSEMBLY,SPECIAL PURPOSE,ELECTRICAL"
5995-99-106-7500,"CABLE ASSEMBLY,SPECIAL PURPOSE,ELECTRICAL"
5995-99-106-7798,"CABLE ASSEMBLY,SPECIAL PURPOSE,ELECTRICAL"
5995-99-106-7814,"CABLE ASSEMBLY,SPECIAL PURPOSE,ELECTRICAL"
5995-99-106-7816,"CABLE ASSEMBLY,SPECIAL PURPOSE,ELECTRICAL"
5995-99-106-7817,"CABLE ASSEMBLY,SPECIAL PURPOSE,ELECTRICAL"
5995-99-106-7818,"CABLE ASSEMBLY,SPECIAL PURPOSE,ELECTRICAL"
5995-99-106-7820,"CABLE ASSEMBLY,SPECIAL

5340-99-955-7440,"CLAMP,LOOP"
5340-99-972-6794,CLAMP SET RIM
5340-99-972-6794,CLAMPIN RING SET
5340-99-972-6795,CLAMP SET RIM
5340-99-972-6795,
5340-99-972-6796,CLAMP SET RIM
5340-99-972-6796,
5340-99-972-6797,CLAMP SET RIM
5340-99-972-6797,
5340-99-972-6798,CLAMP SET RIM
5340-99-972-6798,
5340-99-972-6799,CLAMP SET RIM
5340-99-972-6799,
5340-99-972-6800,
5340-99-972-7673,ZEROING RING
5345-99-520-3706,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5355-99-580-0124,CAP (BLACK)
5355-99-622-8172,KNOB
5355-99-624-7811,SHAFT GRIPBLK WAS5355-99-955-2412
5355-99-779-8604,SHAFT LOCK
5355-99-913-5783,SHAFT LOCK BLACK
5355-99-955-2412,SEE 5355-99-624-7811
5365-99-942-8000,"PLUG,SCREWED"
5365-99-954-6338,"SPACER,SLEEVE"
5805-99-193-3082,"CABLE ASSEMBLY,SPECIAL
PURPOSE,ELECTRICAL"
5805-99-193-3097,"SWITCH,UNIT,TELEPHONE"
5810-99-102-2440,"CORD ASSEMBLY,ELECTRICAL"
5810-99-647-8688,CIRCUIT CARD ASSEMBLY
5810-99-794-8154,"PLATE, CONTACT"
5820-99-101-9805,"CABLE ASSEMBLY,RADI"
5820-99-102-9055,ANTENNA ELEMENT
5820-99-106-8679,"CABLE ASSEMBLY,SPECIAL
PURPOSE,ELECTRICAL"
5820-99-106-8700,ANTENNA
5820-99-111-5808,"CABLE ASSEMBLY-SWITCH,ELECTRICAL"
5820-99-117-7440,ANTENNA WIRE
5820-99-193-0850,"CABLE ASSEMBLY,SPECIAL
PURPOSE,ELECTRICAL"
5820-99-195-8567," CABLE ASSEMBLY,RADIO FREQUENCY"
5820-99-418-8463,SEE 508/1/13372
5820-99-420-6881,NUT
5820-99-420-7647,STAY PLATE AND STAY ASSEMBLY
5820-99-427-7326,MUFF COUPLING
5820-99-427-7450,HEADSET SOCKET BOX
5820-99-520-6901,SERVO MECHANISM
5820-99-523-5767,AMPLIFIER OSCILLATOR
5820-99-529-7929,SPRING CLIP SEE 508/2/11636
5820-99-580-6806,"CABLE ASSEMBLY,SPECIAL
PURPOSE,ELECTRICAL"
5820-99-620-0061,EQUIPMENT MOUNTING BAR RH
5820-99-620-0062,EQUIPMENT MOUNTING BAR LH
5820-99-621-9017,MAST ASSEMBLY
5820-99-622-0142,BASE UPPER ASSEMBLY
5820-99-622-5207,SOCKET ASSEMBLY
5820-99-622-7458,PANEL FRONT
5820-99-622-7513,BLOCK ASSEMBLY
5820-99-625-4747,PLATE SUPPORT
5820-99-630-8998,CHASSIS
5820-99-633-3990,"CENTRE JUNCTION,DIPOLE"
5820-99-642-0019,BATTERY VENT INSTALLATION
5820-99-642-0021,CONNECTION BOX ASSEMBLY
5820-99-642-2953,INST KIT UK/PRC 351/2 IN SPARTAN
5820-99-642-3965,INST KIT UK/PRC 353 IN SPARTAN
5820-99-645-0253,METER RADIO FREQ. LEVEL
PURPOSE,ELECTRICAL"
5995-99-106-7822,"CABLE ASSEMBLY,SPECIAL
PURPOSE,ELECTRICAL"
5995-99-106-7823,"CABLE ASSEMBLY,SPECIAL
PURPOSE,ELECTRICAL"
5995-99-106-7825,"CABLE ASSEMBLY,SPECIAL
PURPOSE,ELECTRICAL"
5995-99-106-7828,"CABLE ASSEMBLY,SPECIAL
PURPOSE,ELECTRICAL"
5995-99-106-7829,"CABLE ASSEMBLY,SPECIAL
PURPOSE,ELECTRICAL"
5995-99-106-7830,"CABLE ASSEMBLY,SPECIAL
PURPOSE,ELECTRICAL"
5995-99-106-7831,"CABLE ASSEMBLY,SPECIAL
PURPOSE,ELECTRICAL"
5995-99-106-7832,"CABLE ASSEMBLY,SPECIAL
PURPOSE,ELECTRICAL"
5995-99-106-7833,"CABLE ASSEMBLY,SPECIAL
PURPOSE,ELECTRICAL"
5995-99-106-7835,"CABLE ASSEMBLY,SPECIAL
PURPOSE,ELECTRICAL"
5995-99-106-7836,"CABLE ASSEMBLY,SPECIAL
PURPOSE,ELECTRICAL"
5995-99-106-7837,"CABLE ASSEMBLY,SPECIAL
PURPOSE,ELECTRICAL"
5995-99-106-7838,"CABLE ASSEMBLY,SPECIAL
PURPOSE,ELECTRICAL"
5995-99-106-8126,"CABLE ASSEMBLY,SPECIAL
PURPOSE,ELECTRICAL"
5995-99-106-8127,"CABLE ASSEMBLY,SPECIAL
PURPOSE,ELECTRICAL"
5995-99-106-8128,"CABLE ASSEMBLY,SPECIAL
PURPOSE,ELECTRICAL"
5995-99-106-8548,"CABLE ASSEMBLY,SPECIAL
PURPOSE,ELECTRICAL"
5995-99-106-9122,Wiring Harness
5995-99-106-9429,Wiring Harness
5995-99-106-9769,Wiring Harness
5995-99-106-9770,Wiring Harness
5995-99-107-9928,Wiring Harness
5995-99-109-2956,WIRING HARNESS
5995-99-110-4736," CABLE ASSEMBLY,POWER,ELECTRICAL"
5995-99-110-7853," CABLE ASSEMBLY,POWER,ELECTRICAL"
5995-99-110-8210," CABLE ASSEMBLY,TELEPHONE"
5995-99-111-5386,CONNECTOR ASSEMBLY
5995-99-111-7816,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5995-99-112-1077,
5995-99-112-1398,"CABLE ASSEMBLY,RADIO FREQUENCY"
5995-99-112-1399,"CABLE ASSEMBLY,RADIO FREQUENCY"
5995-99-112-1400,"CABLE ASSEMBLY,RADIO FREQUENCY"
5995-99-112-1401,"CABLE ASSEMBLY,RADIO FREQUENCY"
5995-99-112-1402,"CABLE ASSEMBLY,RADIO FREQUENCY"
5995-99-112-1403,"CABLE ASSEMBLY,RADIO FREQUENCY"
5995-99-112-1404,"CABLE ASSEMBLY,RADIO FREQUENCY"
5995-99-112-2956,"CABLE ASSEMBLY,COMPOSITE"
5995-99-112-2981,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5995-99-112-6509,"LEAD,ELECTRICAL"
5995-99-112-6511,"LEAD,ELECTRICAL"
5995-99-112-6512,"LEAD,ELECTRICAL"
5995-99-112-6514,"LEAD,ELECTRICAL"
5995-99-112-6515,"LEAD,ELECTRICAL"
5995-99-112-7125,TYPE 10041
5995-99-112-7837,WIRING HARNESS
5995-99-112-7838,WIRING HARNESS
5995-99-112-7839,WIRING HARNESS

5820-99-645-0429,DISTRIBUTION BOX ASSY
5820-99-645-7712,INST. KIT UK/PRC 351/2
5820-99-647-7531,CLAMP ASSEMBLY
5820-99-647-9573,JUNCTION BOX REMOTE ALARM
5820-99-650-4279,CIRCUIT CARD ASSEMBLY
5820-99-652-3170,INPUT ANTENNA ASSEMBLY
5820-99-652-6097,SPINDLE ASSEMBLY
5820-99-653-4365,PANEL FRONT
5820-99-732-7058,MOD KIT FOR FERRET/CLANSMAN
5820-99-734-1340,CONNECTOR
5820-99-781-7805,INSTALL. KIT FERRET SCOUT CAR
5820-99-900-9578,INTERCONNECTING BOX TERMINAL UNIT
5820-99-901-7448,"WIRING HARNESS,BRANCHED"
5820-99-901-7449,"WIRING HARNESS,BRANCHED"
5820-99-949-0293,"CONNECTOR,AERIAL,FLEXIBLE"
5820-99-949-1788,BASE AND BELTING ASSEMBLY
5820-99-965-6408,INST. KIT UK/VRC 321 IN SULTAN
5820-99-965-6988,INST. KIT UK/VRC 353 IN SULTAN
5820-99-965-7925,INST. KIT
5820-99-965-7928,INST. KIT UK/VRC 353 IN SAMSON
5820-99-965-7929,INST. KIT UK/VRC 353 IN SAMARITAN
5820-99-966-3968,INST. KIT IBRU IN FV432 TO CES 45045
5820-99-966-3974,"INSTALLATION KIT,ELECTRONIC EQUIPMENT"
5821-99-001-3421,"CABLE ASSEMBLY,POWER,ELECTRICAL,BRANCHED"
5821-99-115-7441,CIRCUIT CARD ASSEMBLY
5821-99-194-0858,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5821-99-194-0981,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5821-99-194-9464,"CABLE ASSEMBLY,SPECIAL PURPOSE,ELECTRICAL"
5821-99-194-9465,"CABLE ASSEMBLY,SPECIAL PURPOSE,ELECTRICAL"
5821-99-194-9466,"CABLE ASSEMBLY,SPECIAL PURPOSE,ELECTRICAL"
5821-99-194-9467,"CABLE ASSEMBLY,SPECIAL PURPOSE,ELECTRICAL"
5821-99-194-9468,"CABLE ASSEMBLY,SPECIAL PURPOSE,ELECTRICAL"
5821-99-194-9469,"CABLE ASSEMBLY,SPECIAL PURPOSE,ELECTRICAL"
5821-99-194-9470,"CABLE ASSEMBLY,SPECIAL PURPOSE,ELECTRICAL"
5821-99-194-9471,"CABLE ASSEMBLY,SPECIAL PURPOSE,ELECTRICAL,BRANCHED"
5821-99-194-9472,"CABLE ASSEMBLY,SPECIAL PURPOSE,ELECTRICAL"
5821-99-194-9473,"CABLE ASSEMBLY,RADIO FREQUENCY"
5821-99-194-9474,"CABLE ASSEMBLY,RADIO FREQUENCY"
5821-99-194-9475,"CABLE ASSEMBLY,RADIO FREQUENCY"
5821-99-194-9476,"CABLE ASSEMBLY,RADIO FREQUENCY"
5821-99-194-9477,"CABLE ASSEMBLY,RADIO FREQUENCY"
5821-99-194-9478,"CABLE ASSEMBLY,RADIO FREQUENCY"
5821-99-194-9479,"CABLE ASSEMBLY,SPECIAL PURPOSE,ELECTRICAL"
5821-99-194-9484,"CABLE ASSEMBLY,SPECIAL PURPOSE,ELECTRICAL"
5821-99-194-9485,"CABLE ASSEMBLY,SPECIAL PURPOSE,ELECTRICAL"
5821-99-194-9486,"CABLE ASSEMBLY,SPECIAL PURPOSE,ELECTRICAL"
5821-99-194-9487,"CABLE ASSEMBLY,SPECIAL PURPOSE,ELECTRICAL"
5821-99-222-0284,"CABLE ASSEMBLY,POWER,ELECTRICAL,BRANCHED"
5995-99-112-7840,WIRING HARNESS
5995-99-112-7841,WIRING HARNESS
5995-99-112-7882,WIRING HARNESS
5995-99-112-8541,"WIRING HARNESS,BRANCHED"
5995-99-112-8581,"WIRING HARNESS,BRANCHED"
5995-99-112-8582,"WIRING HARNESS,BRANCHED"
5995-99-112-8621,"WIRING HARNESS,BRANCHED"
5995-99-112-8622,"WIRING HARNESS,BRANCHED"
5995-99-112-8985,WIRING HARNESS
5995-99-112-9027,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5995-99-114-6054,"LEAD,ELECTRICAL"
5995-99-115-7030,WIRING HARNESS
5995-99-115-7520,WIRING HARNESS
5995-99-117-7435,WIRING HARNESS
5995-99-117-7437,WIRING HARNESS
5995-99-117-7630,"CABLE ASSEMBLY,RADIO FREQUENCY"
5995-99-117-7631,"CABLE ASSEMBLY,RADIO FREQUENCY"
5995-99-117-9867,"CABLE ASSEMBLY,RADIO FREQUENCY"
5995-99-119-2020,"CABLE ASSEMBLY,RADIO FREQUENCY"
5995-99-119-2021,"CABLE ASSEMBLY,RADIO FREQUENCY"
5995-99-119-2566,"CABLE ASSEMBLY,RADIO FREQUENCY"
5995-99-119-2568,"CABLE ASSEMBLY,RADIO FREQUENCY"
5995-99-119-3013,"CABLE ASSEMBLY,RADIO FREQUENCY"
5995-99-119-3511,"CABLE ASSEMBLY,RADIO FREQUENCY"
5995-99-119-3512,"CABLE ASSEMBLY,RADIO FREQUENCY"
5995-99-119-3513,"CABLE ASSEMBLY,RADIO FREQUENCY"
5995-99-119-3514,"CABLE ASSEMBLY,RADIO FREQUENCY"
5995-99-119-3515,"CABLE ASSEMBLY,RADIO FREQUENCY"
5995-99-119-3516,"CABLE ASSEMBLY,RADIO FREQUENCY"
5995-99-119-3517,"CABLE ASSEMBLY,RADIO FREQUENCY"
5995-99-119-6886,"CABLE ASSEMBLY,RADIO FREQUENCY"
5995-99-119-6888,"CABLE ASSEMBLY,RADIO FREQUENCY"
5995-99-119-6889,"CABLE ASSEMBLY,RADIO FREQUENCY"
5995-99-119-6890,"CABLE ASSEMBLY,RADIO FREQUENCY"
5995-99-119-6891,"CABLE ASSEMBLY,RADIO FREQUENCY"
5995-99-119-6892,"CABLE ASSEMBLY,RADIO FREQUENCY"
5995-99-119-6893,"CABLE ASSEMBLY,RADIO FREQUENCY"
5995-99-119-6894,"CABLE ASSEMBLY,RADIO FREQUENCY"
5995-99-119-6895,"CABLE ASSEMBLY,RADIO FREQUENCY"
5995-99-119-6896,"CABLE ASSEMBLY,RADIO FREQUENCY"
5995-99-119-6897,"CABLE ASSEMBLY,RADIO FREQUENCY"
5995-99-119-6898,"CABLE ASSEMBLY,RADIO FREQUENCY"
5995-99-119-6899,"CABLE ASSEMBLY,RADIO FREQUENCY"
5995-99-119-6900,WIRING HARNESS
5995-99-119-6901,WIRING HARNESS
5995-99-119-6902,WIRING HARNESS
5995-99-119-6903,WIRING HARNESS
5995-99-119-6904,WIRING HARNESS
5995-99-119-6905,WIRING HARNESS
5995-99-119-6906,WIRING HARNESS
5995-99-119-6907,WIRING HARNESS
5995-99-119-6910,WIRING HARNESS
5995-99-119-6911,WIRING HARNESS
5995-99-119-6912,WIRING HARNESS
5995-99-119-6913,WIRING HARNESS
5995-99-119-6914,WIRING HARNESS
5995-99-119-6918,WIRING HARNESS
5995-99-119-6919,WIRING HARNESS
5995-99-119-9306,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5995-99-119-9307,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5995-99-119-9308,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5995-99-119-9309,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5995-99-119-9310,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5995-99-119-9311,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5995-99-119-9312,"CABLE ASSEMBLY,POWER,ELECTRICAL"

5821-99-222-4008,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5821-99-222-6653,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5821-99-222-9452,"CABLE ASSEMBLY,RADIO FREQUENCY"
5821-99-430-9273,WAS 10HA 12106
5821-99-430-9274,SBS 100 WAS 10HA/12107
5821-99-631-6225,AUTO AERIALS SEE 5821-99-778-2434
5821-99-643-9554,COUNTER DRUM ASSEMBLY
5821-99-646-3987,INTERCONNECTING CABLE
5821-99-778-2434,AUTO AERIAL
5821-99-946-1961,"CONVERTER,DIRECT CURRENT"
5825-99-404-3494, PLUGS
5825-99-627-1327,FLANGE
5825-99-956-5779,
5826-99-194-0880,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5826-99-194-5564,
5826-99-194-5567,
5826-99-194-5569,
5826-99-194-5581,
5826-99-194-5583,NAVY
5826-99-194-7440,
5826-99-194-9414,
5826-99-194-9415,
5826-99-194-9416,"CABLE ASSEMBLY,SPECIAL
PURPOSE,ELECTRICAL"
5826-99-194-9417,"CABLE ASSEMBLY,SPECIAL
PURPOSE,ELECTRICAL"
5826-99-194-9418,"CABLE ASSEMBLY,SPECIAL
PURPOSE,ELECTRICAL"
5826-99-194-9420,"CABLE ASSEMBLY,SPECIAL
PURPOSE,ELECTRICAL"
5826-99-194-9421,"CABLE ASSEMBLY,SPECIAL
PURPOSE,ELECTRICAL"
5826-99-194-9422,"CABLE ASSEMBLY,SPECIAL
PURPOSE,ELECTRICAL,BRANCHED"
5826-99-194-9424,"CABLE ASSEMBLY,SPECIAL
PURPOSE,ELECTRICAL"
5826-99-194-9425,"CABLE ASSEMBLY,SPECIAL
PURPOSE,ELECTRICAL"
5826-99-194-9426,"CABLE ASSEMBLY,SPECIAL
PURPOSE,ELECTRICAL"
5826-99-194-9427,"CABLE ASSEMBLY,SPECIAL
PURPOSE,ELECTRICAL,BRANCHED"
5826-99-194-9428,"CABLE ASSEMBLY,SPECIAL
PURPOSE,ELECTRICAL"
5826-99-194-9429,"CABLE ASSEMBLY,SPECIAL
PURPOSE,ELECTRICAL"
5826-99-194-9430,"CABLE ASSEMBLY,SPECIAL
PURPOSE,ELECTRICAL"
5826-99-194-9432,"CABLE ASSEMBLY,SPECIAL
PURPOSE,ELECTRICAL"
5826-99-194-9459,"CABLE ASSEMBLY,SPECIAL
PURPOSE,ELECTRICAL,BRANCHED"
5826-99-194-9460,"CABLE ASSEMBLY,SPECIAL
PURPOSE,ELECTRICAL,BRANCHED"
5826-99-194-9461,"CABLE ASSEMBLY,SPECIAL
PURPOSE,ELECTRICAL,BRANCHED"
5826-99-194-9462,"CABLE ASSEMBLY,SPECIAL
PURPOSE,ELECTRICAL,BRANCHED"
5826-99-194-9463,"CABLE ASSEMBLY,SPECIAL
PURPOSE,ELECTRICAL,BRANCHED"
5826-99-194-9480,"CABLE ASSEMBLY,SPECIAL
PURPOSE,ELECTRICAL,BRANCHED"
5826-99-194-9481,"CABLE ASSEMBLY,SPECIAL
PURPOSE,ELECTRICAL,BRANCHED"
5826-99-194-9482,"CABLE ASSEMBLY,SPECIAL

5995-99-119-9313,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5995-99-119-9316,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5995-99-119-9317,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5995-99-119-9318,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5995-99-119-9319,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5995-99-119-9321,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5995-99-119-9330,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5995-99-119-9331,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5995-99-119-9332,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5995-99-119-9333,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5995-99-119-9334,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5995-99-119-9335,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5995-99-119-9336,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5995-99-119-9337,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5995-99-119-9338,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5995-99-119-9339,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5995-99-119-9340,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5995-99-119-9341,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5995-99-119-9342,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5995-99-142-1040,"CABLE ASSEMBLY,RADIO FREQUENCY"
5995-99-193-0602,"CABLE ASSEMBLY,RADIO FREQUENCY"
5995-99-193-3080,"CABLE ASSEMBLY,RADIO FREQUENCY"
5995-99-193-3085,"CABLE ASSEMBLY,RADIO FREQUENCY"
5995-99-193-3387,"CABLE ASSEMBLY,SPECIAL
PURPOSE,ELECTRICAL"
5995-99-193-3398,"CABLE ASSEMBLY,SPECIAL
PURPOSE,ELECTRICAL"
5995-99-193-3399,"CABLE ASSEMBLY,SPECIAL
PURPOSE,ELECTRICAL"
5995-99-193-3400,"CABLE ASSEMBLY,SPECIAL
PURPOSE,ELECTRICAL"
5995-99-193-3401,"CABLE ASSEMBLY,SPECIAL
PURPOSE,ELECTRICAL"
5995-99-193-3402,"CABLE ASSEMBLY,SPECIAL
PURPOSE,ELECTRICAL"
5995-99-193-3616,"CABLE ASSEMBLY,SPECIAL
PURPOSE,ELECTRICAL"
5995-99-193-3751,"CABLE ASSEMBLY,TELEPHONE"
5995-99-193-3862,"CABLE ASSEMBLY,SPECIAL
PURPOSE,ELECTRICAL"
5995-99-193-3863,"CABLE ASSEMBLY,SPECIAL
PURPOSE,ELECTRICAL"
5995-99-193-3866,"CABLE ASSEMBLY,SPECIAL
PURPOSE,ELECTRICAL"
5995-99-193-4212,"CABLE ASSEMBLY,SPECIAL
PURPOSE,ELECTRICAL"
5995-99-193-4213,"CABLE ASSEMBLY,SPECIAL
PURPOSE,ELECTRICAL"
5995-99-193-4217,"CABLE ASSEMBLY,SPECIAL
PURPOSE,ELECTRICAL"
5995-99-193-4236,"CABLE ASSEMBLY,SPECIAL
PURPOSE,ELECTRICAL"
5995-99-193-4237,"CABLE ASSEMBLY,SPECIAL
PURPOSE,ELECTRICAL"
5995-99-193-4978,"CABLE ASSEMBLY,SPECIAL
PURPOSE,ELECTRICAL"
5995-99-193-5648,"CABLE ASSEMBLY,SPECIAL
PURPOSE,ELECTRICAL"
5995-99-193-5683,"CABLE ASSEMBLY,SPECIAL
PURPOSE,ELECTRICAL"
5995-99-193-5684,"CABLE ASSEMBLY,SPECIAL
PURPOSE,ELECTRICAL"
5995-99-193-5800,"CABLE ASSEMBLY,SPECIAL
PURPOSE,ELECTRICAL"
5995-99-193-5803,"CABLE ASSEMBLY,SPECIAL

PURPOSE,ELECTRICAL”
5826-99-194-9483,”CABLE ASSEMBLY,SPECIAL
PURPOSE,ELECTRICAL,BRANCHED”
5826-99-195-7436,”CABLE ASSEMBLY,RADIO FREQUENCY”
5826-99-195-7505,”CABLE ASSEMBLY,RADIO FREQUENCY”
5826-99-195-8771,”CABLE ASSEMBLY,RADIO FREQUENCY”
5826-99-222-0285,”CABLE ASSEMBLY,RADIO FREQUENCY”
5826-99-222-0286,”CABLE ASSEMBLY,RADIO FREQUENCY”
5826-99-222-0287,”CABLE ASSEMBLY,RADIO FREQUENCY”
5826-99-222-0288,”CABLE ASSEMBLY,RADIO FREQUENCY”
5826-99-222-4013,”CABLE ASSEMBLY,RADIO
FREQUENCY,BRANCHED”
5826-99-222-4014,”CABLE
ASSEMBLY,POWER,ELECTRICAL,BRANCHED”
5826-99-222-4024,”CABLE ASSEMBLY,RADIO FREQUENCY”
5826-99-222-6688,”CABLE ASSEMBLY,POWER,ELECTRICAL”
5826-99-222-6689,”CABLE ASSEMBLY,RADIO FREQUENCY”
5826-99-222-6690,”CABLE ASSEMBLY,POWER,ELECTRICAL”
5826-99-222-6692,”CABLE ASSEMBLY,SPECIAL
PURPOSE,ELECTRICAL”
5826-99-222-6693,”CABLE ASSEMBLY,POWER,ELECTRICAL”
5826-99-223-7598,”CABLE ASSEMBLY,POWER,ELECTRICAL”
5826-99-427-7169,”CABLE ASSEMBLY,RADIO FREQUENCY”
5826-99-427-7170,”CABLE ASSEMBLY,RADIO FREQUENCY”
5826-99-428-0400,TYPE 100B
5826-99-430-6892,CONNECTOR
5826-99-624-7561,CIRCUIT CARD ASSEMBLY
5826-99-955-7208,”CABLE ASSEMBLY,RADIO FREQUENCY”
5826-99-955-7209,”CABLE ASSEMBLY,RADIO FREQUENCY”
5826-99-955-7210,”CABLE ASSEMBLY,RADIO FREQUENCY”
5826-99-955-7211,”CABLE ASSEMBLY,RADIO FREQUENCY”
5826-99-955-7227,”CABLE ASSEMBLY,RADIO FREQUENCY”
5826-99-955-7228,”CABLE ASSEMBLY,RADIO FREQUENCY”
5826-99-955-7229,”CABLE ASSEMBLY,RADIO FREQUENCY”
5826-99-955-7230,”CABLE ASSEMBLY,RADIO FREQUENCY”
5826-99-955-7231,”CABLE ASSEMBLY,RADIO FREQUENCY”
5826-99-955-7232,”CABLE ASSEMBLY,RADIO FREQUENCY”
5826-99-955-7233,”CABLE ASSEMBLY,RADIO FREQUENCY”
5826-99-955-7236,WIRING HARNESS
5826-99-955-7237,WIRING HARNESS
5826-99-955-7238,WIRING HARNESS
5826-99-955-7239,WIRING HARNESS
5826-99-955-7240,WIRING HARNESS
5826-99-955-7242,WIRING HARNESS
5826-99-955-7243,WIRING HARNESS
5826-99-955-7244,WIRING HARNESS
5826-99-955-7245,WIRING HARNESS
5826-99-955-7246,WIRING HARNESS
5826-99-955-7247,WIRING HARNESS
5826-99-955-7248,WIRING HARNESS
5826-99-955-7249,WIRING HARNESS
5826-99-955-7250,WIRING HARNESS
5826-99-955-7251,WIRING HARNESS
5826-99-955-7252,WIRING HARNESS
5826-99-955-7254,WIRING HARNESS
5826-99-955-7265,”WIRING HARNESS,BRANCHED”
5826-99-955-7266,”WIRING HARNESS,BRANCHED”
5826-99-955-7267,” WIRING HARNESS,BRANCHED”
5826-99-955-7268,” WIRING HARNESS,BRANCHED”
5826-99-955-7270,” WIRING HARNESS,BRANCHED”
5826-99-955-7271,” WIRING HARNESS,BRANCHED”
5826-99-955-7272,” WIRING HARNESS,BRANCHED”
5826-99-955-7273,” WIRING HARNESS,BRANCHED”
5826-99-955-7275,”WIRING HARNESS,BRANCHED”
5826-99-955-7276,”WIRING HARNESS,BRANCHED”

PURPOSE,ELECTRICAL”
5995-99-193-6487,”CABLE ASSEMBLY,RADIO FREQUENCY”
5995-99-193-6601,”CABLE ASSEMBLY,RADIO FREQUENCY”
5995-99-193-6764,”CABLE ASSEMBLY,RADIO FREQUENCY”
5995-99-193-7376,”CABLE ASSEMBLY,RADIO FREQUENCY”
5995-99-193-7642,”CABLE ASSEMBLY,RADIO FREQUENCY”
5995-99-193-8566,”CABLE ASSEMBLY,RADIO FREQUENCY”
5995-99-193-9328,”CABLE ASSEMBLY,RADIO FREQUENCY”
5995-99-194-4786,”CABLE ASSEMBLY,RADIO FREQUENCY”
5995-99-194-5355,”CABLE ASSEMBLY,RADIO”
5995-99-194-5583,”CABLE ASSEMBLY,RADIO FREQUENCY”
5995-99-194-7782,”CABLE ASSEMBLY,RADIO FREQUENCY”
5995-99-198-3281,”CABLE ASSEMBLY,RADIO FREQUENCY”
5995-99-198-4051,”CABLE ASSEMBLY,RADIO FREQUENCY”
5995-99-220-6799,”CABLE ASSEMBLY,POWER,ELECTRICAL”
5995-99-222-6714,SIGN
5995-99-222-8385,”CABLE ASSEMBLY,RADIO FREQUENCY”
5995-99-222-8386,”CABLE ASSEMBLY,RADIO FREQUENCY”
5995-99-222-8387,”CABLE ASSEMBLY,RADIO FREQUENCY”
5995-99-222-8388,”CABLE ASSEMBLY,RADIO FREQUENCY”
5995-99-223-7912,”CABLE ASSEMBLY,SPECIAL
PURPOSE,ELECTRICAL”
5995-99-223-8338, WIRING HARNESS
5995-99-223-8642, WIRING HARNESS
5995-99-223-8644, WIRING HARNESS
5995-99-223-8645, WIRING HARNESS
5995-99-223-8646, WIRING HARNESS
5995-99-250-9596, WIRING HARNESS
5995-99-327-3982, WIRING HARNESS
5995-99-339-4411,CABLE ASSEMBLY
5995-99-352-3317,
5995-99-404-1640,”CABLE ASSEMBLY,RADIO FREQUENCY”
5995-99-404-3068,”CABLE ASSEMBLY,RADIO FREQUENCY”
5995-99-404-8995,”CABLE ASSEMBLY,RADIO FREQUENCY”
5995-99-404-9376,”CABLE ASSEMBLY,RADIO FREQUENCY”
5995-99-404-9379,”CABLE ASSEMBLY,RADIO FREQUENCY”
5995-99-404-9380,”CABLE ASSEMBLY,RADIO FREQUENCY”
5995-99-404-9411,”CABLE ASSEMBLY,RADIO FREQUENCY”
5995-99-409-6328,”CABLE ASSEMBLY,RADIO FREQUENCY”
5995-99-409-6604,”WIRING HARNESS,BRANCHED”
5995-99-409-6712,”CABLE ASSEMBLY,RADIO FREQUENCY”
5995-99-409-7177, WIRING HARNESS
5995-99-410-1317, WIRING HARNESS
5995-99-410-1337, WIRING HARNESS
5995-99-410-1544,” CABLE ASSEMBLY,COMPOSITE”
5995-99-410-1545,” CABLE ASSEMBLY,COMPOSITE”
5995-99-410-1547,” CABLE ASSEMBLY,COMPOSITE”
5995-99-410-1550,” CABLE ASSEMBLY,COMPOSITE”
5995-99-410-1553,” CABLE ASSEMBLY,COMPOSITE”
5995-99-410-1555,” CABLE ASSEMBLY,COMPOSITE”
5995-99-410-1556,” CABLE ASSEMBLY,COMPOSITE”
5995-99-410-1557,” CABLE ASSEMBLY,COMPOSITE”
5995-99-410-1559,” CABLE ASSEMBLY,COMPOSITE”
5995-99-410-1561,” CABLE ASSEMBLY,COMPOSITE”
5995-99-410-1881,” CABLE ASSEMBLY,COMPOSITE”
5995-99-410-8507,”CABLE ASSEMBLY,POWER,ELECTRICAL”
5995-99-410-8510,”CABLE ASSEMBLY,POWER,ELECTRICAL”
5995-99-410-8566,”CABLE ASSEMBLY,POWER,ELECTRICAL”
5995-99-410-8567,”CABLE ASSEMBLY,POWER,ELECTRICAL”
5995-99-410-8568,”CABLE ASSEMBLY,POWER,ELECTRICAL”
5995-99-410-8570,”CABLE ASSEMBLY,POWER,ELECTRICAL”
5995-99-410-8571,”CABLE ASSEMBLY,POWER,ELECTRICAL”
5995-99-410-8577,”CABLE ASSEMBLY,POWER,ELECTRICAL”
5995-99-410-8690,”CABLE ASSEMBLY,RADIO FREQUENCY”
5995-99-410-8752,”WIRING HARNESS,BRANCHED”

5826-99-955-7277,"WIRING HARNESS,BRANCHED"
5826-99-955-7279,"WIRING HARNESS,BRANCHED"
5826-99-955-7301,"CABLE ASSEMBLY,RADIO FREQUENCY"
5826-99-955-7302,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5826-99-955-7303,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5826-99-955-7304,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5826-99-955-7305,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5826-99-955-7306,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5826-99-955-7307,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5826-99-955-7308,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5826-99-955-7309,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5826-99-955-7310,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5826-99-955-7311,"CABLE ASSEMBLY,RADIO FREQUENCY"
5826-99-955-7312,"CABLE ASSEMBLY,RADIO FREQUENCY"
5826-99-955-7313,"CABLE ASSEMBLY,RADIO FREQUENCY"
5826-99-955-7314,"CABLE ASSEMBLY,RADIO FREQUENCY"
5826-99-955-7315,"CABLE ASSEMBLY,RADIO FREQUENCY"
5826-99-955-7316,"CABLE ASSEMBLY,RADIO FREQUENCY"
5826-99-955-7317,"CABLE ASSEMBLY,RADIO FREQUENCY"
5826-99-955-7318,"CABLE ASSEMBLY,RADIO FREQUENCY"
5826-99-955-7319,"CABLE ASSEMBLY,RADIO FREQUENCY"
5826-99-955-7320,"CABLE ASSEMBLY,RADIO FREQUENCY"
5826-99-955-7333,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5826-99-955-7334,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5826-99-955-7335,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5826-99-955-7336,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5826-99-955-7337,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5826-99-955-7338,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5826-99-955-7339,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5826-99-955-7340,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5826-99-955-7341,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5826-99-955-7344,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5826-99-955-7345,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5826-99-955-7346,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5826-99-955-7347,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5826-99-955-7348,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5826-99-955-7349,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5826-99-955-7350,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5826-99-955-7351,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5826-99-955-7352,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5830-99-631-0074,"CORD ASSEMBLY,ELECTRICAL"
5830-99-954-3777,"ANCHOR,CABLE RETAINING"
5830-99-954-3784,"CLIP,CABLE RETAINING"
5830-99-954-3788,"CABLE ASSEMBLY,SPECIAL PURPOSE
ELECTRICAL"
5831-99-001-3438,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5831-99-194-9431,"CABLE ASSEMBLY,SPECIAL
PURPOSE,ELECTRICAL,BRANCHED"
5831-99-194-9433,"CABLE ASSEMBLY,SPECIAL
PURPOSE,ELECTRICAL"
5831-99-194-9434,"CABLE ASSEMBLY,SPECIAL
PURPOSE,ELECTRICAL"
5831-99-194-9436,"CABLE ASSEMBLY,SPECIAL
PURPOSE,ELECTRICAL"
5831-99-194-9437,"CABLE ASSEMBLY,SPECIAL
PURPOSE,ELECTRICAL"
5831-99-194-9438,"CABLE ASSEMBLY,SPECIAL
PURPOSE,ELECTRICAL"
5831-99-194-9439,"CABLE ASSEMBLY,SPECIAL
PURPOSE,ELECTRICAL"
5831-99-194-9443,"CABLE ASSEMBLY,SPECIAL
PURPOSE,ELECTRICAL"
5831-99-194-9444,"CABLE ASSEMBLY,SPECIAL
PURPOSE,ELECTRICAL"
5831-99-194-9445,"CABLE ASSEMBLY,SPECIAL
PURPOSE,ELECTRICAL"
5995-99-410-8823,"CABLE ASSEMBLY,RADIO FREQUENCY"
5995-99-410-8836,"CABLE ASSEMBLY,RADIO FREQUENCY"
5995-99-410-8837,"CABLE ASSEMBLY,RADIO FREQUENCY"
5995-99-410-8839,"CABLE ASSEMBLY,RADIO FREQUENCY"
5995-99-410-8840,"CABLE ASSEMBLY,RADIO FREQUENCY"
5995-99-410-8841,"CABLE ASSEMBLY,RADIO FREQUENCY"
5995-99-410-8842,"CABLE ASSEMBLY,RADIO FREQUENCY"
5995-99-411-3030,"CABLE ASSEMBLY,SPECIAL
PURPOSE,ELECTRICAL"
5995-99-411-3298,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5995-99-411-3299,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5995-99-411-3300,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5995-99-411-4693,CONNECTOR
5995-99-412-8562,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5995-99-412-8942,CONNECTOR
5995-99-412-9147,CONNECTOR
5995-99-412-9238,"CABLE ASSEMBLY,RADIO FREQUENCY"
5995-99-412-9241,
5995-99-412-9242,"WIRING HARNESS,BRANCHED"
5995-99-412-9243,"WIRING HARNESS,BRANCHED"
5995-99-412-9244,"WIRING HARNESS,BRANCHED"
5995-99-412-9245,"WIRING HARNESS,BRANCHED"
5995-99-412-9246,"WIRING HARNESS,BRANCHED"
5995-99-412-9247,"WIRING HARNESS,BRANCHED"
5995-99-412-9248,"WIRING HARNESS,BRANCHED"
5995-99-412-9249,"WIRING HARNESS,BRANCHED"
5995-99-412-9250,"WIRING HARNESS,BRANCHED"
5995-99-412-9251,"WIRING HARNESS,BRANCHED"
5995-99-412-9252,"WIRING HARNESS,BRANCHED"
5995-99-412-9254,"WIRING HARNESS,BRANCHED"
5995-99-412-9255,"WIRING HARNESS,BRANCHED"
5995-99-412-9256,"WIRING HARNESS,BRANCHED"
5995-99-412-9257,"WIRING HARNESS,BRANCHED"
5995-99-412-9258,"WIRING HARNESS,BRANCHED"
5995-99-412-9259,"WIRING HARNESS,BRANCHED"
5995-99-412-9374,"CABLE ASSEMBLY,RADIO FREQUENCY"
5995-99-412-9545,"CABLE ASSEMBLY,RADIO FREQUENCY"
5995-99-413-4346,"CABLE ASSEMBLY,RADIO FREQUENCY"
5995-99-413-4348,"CABLE ASSEMBLY,RADIO FREQUENCY"
5995-99-414-4258,"CABLE ASSEMBLY,RADIO FREQUENCY"
5995-99-415-2290,"CABLE ASSEMBLY,RADIO FREQUENCY"
5995-99-415-2291,"CABLE ASSEMBLY,RADIO FREQUENCY"
5995-99-415-3010,"WIRING HARNESS,BRANCHED"
5995-99-415-3075,"CABLE ASSEMBLY,SPECIAL
PURPOSE,ELECTRICAL"
5995-99-415-3079,"CABLE ASSEMBLY,SPECIAL
PURPOSE,ELECTRICAL"
5995-99-416-0281,"CABLE ASSEMBLY,SPECIAL
PURPOSE,ELECTRICAL"
5995-99-416-0346,"CABLE ASSEMBLY,SPECIAL
PURPOSE,ELECTRICAL"
5995-99-416-0348,"CABLE ASSEMBLY,SPECIAL
PURPOSE,ELECTRICAL"
5995-99-418-7941,"LEAD,TEST"
5995-99-418-9408,CABLE ASSEMBLY
5995-99-418-9414,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5995-99-418-9415,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5995-99-419-0075,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5995-99-419-0188,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5995-99-419-0499,"CABLE ASSEMBLY,RADIO FREQUENCY"
5995-99-419-2214,"CABLE ASSEMBLY,SPECIAL PURPOSE
ELECTRICAL"
5995-99-419-2216,"CABLE ASSEMBLY,SPECIAL PURPOSE
ELECTRICAL"
5995-99-419-3289,"CABLE ASSEMBLY,SPECIAL

PURPOSE,ELECTRICAL”
5831-99-194-9446,” CABLE ASSEMBLY,SPECIAL
PURPOSE,ELECTRICAL”
5831-99-194-9447,” CABLE ASSEMBLY,SPECIAL
PURPOSE,ELECTRICAL”
5831-99-194-9448,” CABLE ASSEMBLY,SPECIAL
PURPOSE,ELECTRICAL”
5831-99-194-9450,” CABLE ASSEMBLY,SPECIAL
PURPOSE,ELECTRICAL”
5831-99-194-9451,” CABLE ASSEMBLY,SPECIAL
PURPOSE,ELECTRICAL”
5831-99-194-9452,” CABLE ASSEMBLY,SPECIAL
PURPOSE,ELECTRICAL”
5831-99-194-9454,” CABLE ASSEMBLY,SPECIAL
PURPOSE,ELECTRICAL”
5831-99-194-9455,” CABLE ASSEMBLY,SPECIAL
PURPOSE,ELECTRICAL”
5831-99-194-9456,” CABLE ASSEMBLY,SPECIAL
PURPOSE,ELECTRICAL”
5831-99-222-0283,”CABLE ASSEMBLY,POWER,ELECTRICAL”
5831-99-222-6651,”CABLE ASSEMBLY,POWER,ELECTRICAL”
5831-99-222-6652,”CABLE ASSEMBLY,POWER,ELECTRICAL”
5840-99-195-8967,”CABLE ASSEMBLY,POWER,ELECTRICAL”
5840-99-531-1647,”CABLE ASSEMBLY,RADIO FREQUENCY”
5840-99-621-5487,”CABLE ASSEMBLY,RADIO FREQUENCY”
5840-99-621-5488,”LEAD,ELECTRICAL”
5840-99-626-3141,DUPLXER
5840-99-900-2705,”CABLE
ASSEMBLY,POWER,ELECTRICAL705/1/05388/011”
5840-99-900-3441,”CABLE ASSEMBLY,RADIO FREQUENCY”
5840-99-944-3048,” CABLE
ASSEMBLY,POWER,ELECTRICAL,BRANCHED”
5840-99-953-3059,CABLE ASSEMBLYXRADIO FREQUENCY
5840-99-954-4012,
5840-99-954-9841,” CABLE ASSEMBLY,RADIO FREQUENCY”
5840-99-954-9844,” CABLE ASSEMBLY,RADIO FREQUENCY”
5840-99-954-9845,” CABLE ASSEMBLY,RADIO FREQUENCY”
5840-99-954-9852,” CABLE ASSEMBLY,RADIO FREQUENCY”
5840-99-954-9853,” CABLE ASSEMBLY,RADIO FREQUENCY”
5840-99-970-7364, WIRING HARNESS
5840-99-970-7365, WIRING HARNESS
5840-99-970-7551, WIRING HARNESS
5840-99-971-4941,”CABLE ASSEMBLY,RADIO FREQUENCY”
5841-99-103-7228,
5841-99-103-7229,”PROBE,CASING ”
5841-99-194-0914,”CABLE ASSEMBLY,POWER,ELECTRICAL”
5841-99-194-0915,”CABLE ASSEMBLY,POWER,ELECTRICAL”
5841-99-194-0920,”CABLE ASSEMBLY,POWER,ELECTRICAL”
5841-99-194-0930,”CABLE ASSEMBLY,POWER,ELECTRICAL”
5841-99-194-1023,”CABLE ASSEMBLY,POWER,ELECTRICAL”
5841-99-194-1038,”CABLE ASSEMBLY,POWER,ELECTRICAL”
5841-99-194-2298,”CABLE ASSEMBLY,POWER,ELECTRICAL”
5841-99-194-8366,”CABLE AND CONDUIT
ASSEMBLY,ELECTRICAL”
5841-99-195-7489,”CABLE ASSEMBLY,RADIO FREQUENCY”
5841-99-195-7490,”CABLE ASSEMBLY,RADIO FREQUENCY”
5841-99-195-7494,”CABLE ASSEMBLY,RADIO FREQUENCY”
5841-99-195-7643,”CABLE ASSEMBLY,POWER,ELECTRICAL”
5841-99-195-7670,”CABLE ASSEMBLY,POWER,ELECTRICAL”
5841-99-195-8661,”CABLE ASSEMBLY,POWER,ELECTRICAL”
5841-99-195-8668,”CABLE ASSEMBLY,RADIO FREQUENCY”
5841-99-222-8383,”CABLE ASSEMBLY,RADIO FREQUENCY”
5841-99-430-8545,CONNECTOR
5841-99-621-8703,”CABLE ASSEMBLY,SPECIAL PURPOSE
ELECTRICAL”

PURPOSE,ELECTRICAL”
5995-99-419-3596,”CABLE ASSEMBLY,SPECIAL
PURPOSE,ELECTRICAL”
5995-99-420-6044,”CABLE ASSEMBLY,SPECIAL
PURPOSE,ELECTRICAL”
5995-99-420-7979,”CABLE ASSEMBLY,SPECIAL
PURPOSE,ELECTRICAL”
5995-99-420-7992,”CABLE ASSEMBLY,SPECIAL
PURPOSE,ELECTRICAL”
5995-99-421-5109,”CABLE ASSEMBLY,SPECIAL
PURPOSE,ELECTRICAL”
5995-99-430-8531,”CABLE ASSEMBLY,SPECIAL
PURPOSE,ELECTRICAL”
5995-99-441-8241,”CABLE ASSEMBLY,SPECIAL
PURPOSE,ELECTRICAL”
5995-99-441-8243,SEE HS1596
5995-99-441-8976,
5995-99-444-4315,”CABLE ASSEMBLY,RADIO FREQUENCY”
5995-99-446-0606,”CABLE ASSEMBLY,RADIO FREQUENCY”
5995-99-446-5575,”CABLE ASSEMBLY,RADIO FREQUENCY”
5995-99-446-5675,”CORD
ASSEMBLY,ELECTRICAL,BRANCHED”
5995-99-451-2308,”CONNECTOR,RECEPTACLE,ELECTRICAL”
5995-99-455-8329,”CONNECTOR,FLEXIBLE”
5995-99-455-8330,”CONNECTOR,FLEXIBLE”
5995-99-460-6992,CONNECTOR ASSEMBLY
5995-99-460-7066,CONNECTOR ASSEMBLY
5995-99-460-7087,CONNECTOR ASSEMBLY
5995-99-460-7088,CONNECTOR ASSEMBLY
5995-99-460-7097,CABLE ASSEMBLY
5995-99-460-7127,CABLE ASSEMBLY
5995-99-460-7212,”CORD ASSEMBLY,EXTENSIBLE”
5995-99-460-7218,”CORD ASSEMBLY,EXTENSIBLE”
5995-99-460-7219,”CORD ASSEMBLY,EXTENSIBLE”
5995-99-460-7220,”CORD ASSEMBLY,EXTENSIBLE”
5995-99-460-7225,”CORD ASSEMBLY,EXTENSIBLE”
5995-99-462-4315,”CORD ASSEMBLY,ELECTRICAL”
5995-99-462-4316,”CORD ASSEMBLY,ELECTRICAL”
5995-99-468-2503,CONDUCTOR
5995-99-469-1613,CONNECTOR
5995-99-469-3700,CONNECTOR
5995-99-469-3701,CONNECTOR
5995-99-469-3702,CONNECTOR
5995-99-469-4628,CONNECTOR
5995-99-469-4634,CONNECTOR
5995-99-469-8104,”CABLE ASSEMBLY,RADIO FREQUENCY”
5995-99-469-8184,”CABLE ASSEMBLY,RADIO FREQUENCY”
5995-99-469-9431,”CABLE ASSEMBLY,RADIO FREQUENCY”
5995-99-469-9440,”CABLE ASSEMBLY,RADIO FREQUENCY”
5995-99-469-9442,”CABLE ASSEMBLY,RADIO FREQUENCY”
5995-99-469-9457,
5995-99-469-9458,CONNECTOR
5995-99-469-9459,CONNECTOR
5995-99-469-9484,” CABLE ASSEMBLY,RADIO FREQUENCY”
5995-99-469-9931,CONNECTOR
5995-99-469-9933, CONNECTOR
5995-99-470-0337,”CABLE ASSEMBLY,RADIO FREQUENCY”
5995-99-470-1746,CABLE ASSEMBLY
5995-99-470-1747,CABLE ASSEMBLY
5995-99-470-1748,CABLE ASSEMBLY
5995-99-470-1749,CABLE ASSEMBLY
5995-99-470-1769,CABLE ASSEMBLY
5995-99-470-1770,CABLE ASSEMBLY
5995-99-470-1771,CABLE ASSEMBLY
5995-99-470-1776,CABLE ASSEMBLY

5841-99-639-9876,COVER ASSEMBLY
5841-99-643-2905,COVER ASSEMBLY
5841-99-710-0124,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5841-99-717-8566,SEISISTOR ASSY
5841-99-778-8744,BOLT
5841-99-944-2732,"WIRING HARNESS,BRANCHED"
5841-99-948-5506,
5841-99-948-5512,
5841-99-948-5513,
5841-99-948-5543,"CABLE ASSEMBLY,SPECIAL
PURPOSE,ELECTRICAL,BRANCHED"
5841-99-948-8058,"LEAD,ELECTRICAL"
5841-99-952-3528,"CABLE ASSEMBLY,RADIO FREQUENCY"
5841-99-953-0552,PREVIOUSLY 10HA/16281
5841-99-953-0553,CABLE ASSEMBLYXRADIO FREQUENCY
5841-99-953-3434,"LEAD,ELECTRICAL"
5841-99-953-3435,
5841-99-953-3436,
5841-99-953-7611,CABLE ASSEMBLYXRADIO FREQUENCY
5841-99-953-7616,CABLE ASSEMBLYXRADIO FREQUENCY
5841-99-953-7618,CABLE ASSEMBLYXRADIO FREQUENCY
5841-99-953-7988,CABLE ASSEMBLYXRADIO FREQUENCY
5841-99-954-4330,"CONTACT,ELECTRICAL"
5841-99-954-8599,"CABLE ASSEMBLY,RADIO FREQUENCY"
5841-99-954-8600,"CABLE ASSEMBLY,RADIO FREQUENCY"
5845-99-418-7397,SBS66 130/14.104 2CZ111898
5845-99-418-7406,130/14.105
5845-99-418-7939,"CABLE ASSEMBLY,RADIO FREQUENCY"
5845-99-541-8995,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5845-99-954-3542,
5854-99-520-6851,TRANSDUCER
5895-99-001-3483,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5895-99-001-4859,"CABLE ASSEMBLY,RADIO FREQUENCY"
5895-99-107-9853,"CABLE ASSEMBLY,SPECIAL
PURPOSE,ELECTRICAL,BRANCHED"
5895-99-195-7444,
5895-99-195-7459,"CABLE ASSEMBLY,RADIO FREQUENCY"
5895-99-222-6698,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5895-99-222-6700,WIRING HARNESS
5895-99-222-6701,WIRING HARNESS
5895-99-222-6702,WIRING HARNESS
5895-99-222-6703,CABLE ASSEMBLY
5895-99-222-6704,CABLE ASSEMBLY
5895-99-222-6705,CABLE ASSEMBLY
5895-99-222-6706,CABLE ASSEMBLY
5895-99-222-6707,CABLE ASSEMBLY
5895-99-222-6708,CABLE ASSEMBLY
5895-99-222-6709,CABLE ASSEMBLY
5895-99-222-6710,CABLE ASSEMBLY
5895-99-222-6712,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5895-99-222-6713,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5895-99-412-9289,"CABLE ASSEMBLY,RADIO FREQUENCY"
5895-99-724-5816,MOD KIT
5895-99-728-5186,MOD KIT
5895-99-728-5187,MOD KIT
5895-99-728-5188,MOD KIT
5895-99-728-6136,MOD KIT
5895-99-799-1005,SCREEN COWL
5895-99-953-3481,"CABLE ASSEMBLY,RADIO-FREQUENCY"
5895-99-955-4101,"CABLE ASSEMBLY,RADIO FREQUENCY"
5905-00-688-4568,RESISTOR
5905-01-021-1002,"RESISTOR,VARIABLE,NONWIRE
WOUND,NONPRECISION"
5905-01-053-6493,"RESISTOR,VARIABLE,WIRE
WOUND,NONPRECISION"
5995-99-470-1777,CABLE ASSEMBLY
5995-99-470-1778,CABLE ASSEMBLY
5995-99-470-3038,"CABLE ASSEMBLY,RADIO FREQUENCY"
5995-99-470-3082,"WIRING HARNESS,BRANCHED"
5995-99-470-3955,CONNECTOR
5995-99-470-3963,CONNECTOR
5995-99-470-3972,CONNECTOR
5995-99-470-4758,WIRING HARNESS
5995-99-470-4763,CONNECTOR
5995-99-470-4792, CONNECTOR
5995-99-470-4850,WAS 10HA/14423
5995-99-470-4852,CONNECTOR
5995-99-470-4876, CONNECTOR
5995-99-470-4885, CONNECTOR
5995-99-470-4887, CONNECTOR
5995-99-470-4895, CONNECTOR
5995-99-470-4896, CONNECTOR
5995-99-470-4898, CONNECTOR
5995-99-470-4899, CONNECTOR
5995-99-470-4901, CONNECTOR
5995-99-470-4902, CONNECTOR
5995-99-470-4906, CONNECTOR
5995-99-470-4949,CONNECTOR
5995-99-470-5494,CONNECTOR
5995-99-470-5502,CONNECTOR
5995-99-470-5503,CONNECTOR
5995-99-470-5504,CONNECTOR
5995-99-470-5505,CONNECTOR
5995-99-470-5506,CONNECTOR
5995-99-470-5507,CONNECTOR
5995-99-470-5508,CONNECTOR
5995-99-470-5509,CONNECTOR
5995-99-470-5510,CONNECTOR
5995-99-470-5511,CONNECTOR
5995-99-470-5512,CONNECTOR
5995-99-470-5600,CONNECTOR
5995-99-470-5670,CONNECTOR
5995-99-470-5756,CONNECTOR
5995-99-470-5757,CONNECTOR
5995-99-470-5758,CONNECTOR
5995-99-470-5765,CONNECTOR
5995-99-470-5800,CONNECTOR
5995-99-470-5801,CONNECTOR
5995-99-470-5806,CONNECTOR
5995-99-470-5808,CONNECTOR
5995-99-470-5809,CONNECTOR
5995-99-470-5810,CONNECTOR
5995-99-470-6901,CONNECTOR
5995-99-470-7213,CONNECTOR
5995-99-470-8461,CONNECTOR
5995-99-495-8521,CONNECTOR
5995-99-513-7873,CABLE ASSEMBLY
5995-99-519-8487,CONNECTOR
5995-99-520-0899,CABLE ASSY RF
5995-99-523-7018,CABLE ASSEMBLY
5995-99-523-7019,CABLE ASSEMBLY
5995-99-523-7020,CABLE ASSEMBLY
5995-99-523-8114,"CABLE ASSEMBLY,RADIO FREQUENCY"
5995-99-523-8115,"CABLE ASSEMBLY,RADIO FREQUENCY"
5995-99-525-5434,CORD ASSY ELECTRICAL TWO CORE
5995-99-527-9243,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5995-99-529-6276,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5995-99-529-7314,CABLE RADIO ASSEMBLY
5995-99-531-4234,"CABLE ASSEMBLY,RADIO"
5995-99-539-6616,"CABLE ASSEMBLY,POWER,ELECTRICAL"

5905-32-003-2940,RESISTOR
5905-32-003-2950,RESISTOR
5905-32-003-2985,RESISTOR
5905-32-003-2988,RESISTOR
5905-32-003-4242,RESISTOR
5905-32-010-8318,RES VAR ASSY
5905-32-021-1060,
5905-32-026-7456,RESISTOR
5905-32-051-5321,RESISTOR
5905-32-062-3788,RESISTOR PACK
5905-99-003-2947,RESISTOR
5905-99-013-3620,"RESISTOR,FIXED,COMPOSITION"
5905-99-013-6189,RESISTOR
5905-99-013-6237,
5905-99-013-6290,"RESISTOR,FIXED,FILM"
5905-99-013-6306,"RESISTOR,FIXED,FILM"
5905-99-013-6322,"RESISTOR,FIXED,FILM"
5905-99-013-6354,"RESISTOR,FIXED,FILM"
5905-99-013-6365,"RESISTOR,FIXED,FILM"
5905-99-013-6366,"RESISTOR,FIXED,FILM"
5905-99-013-6384,"RESISTOR,FIXED,FILM"
5905-99-013-6386,"RESISTOR,FIXED,FILM"
5905-99-013-6388,"RESISTOR,FIXED,FILM"
5905-99-013-6450,RESISTOR
5905-99-014-0501,RESISTOR
5905-99-014-0517,"RESISTOR,FIXED,WIREWOUND"
5905-99-015-8875,
5905-99-024-2097,"RESISTOR FIXED, WIRE WOUND"
5905-99-103-8208,
5905-99-105-2312,RESISTOR
5905-99-193-1175,RHEOSTAT TYPE 120A ZENITH
5905-99-442-8671,"RESISTOR,VARIABLE,WIREWOUND"
5905-99-741-0813,RESISTOR ASSY
5905-99-742-1588,RESISTOR
5905-99-755-5439,"RESISTOR,VARIABLE"
5905-99-760-9665,VARIABLE RESISTOR
5905-99-914-1944,RESISTOR
5910-00-098-9242,RESISTOR
5910-01-078-8492,RESISTOR
5910-32-013-9666,RESISTOR
5910-32-013-9944,RESISTOR
5910-32-015-4361,RESISTOR
5910-32-060-2296,CAPACITOR
5910-32-062-3789,CAPACITOR
5910-66-099-2639,CAPACITOR
5910-99-013-0235,RESISTOR
5910-99-014-3239,RESISTOR
5910-99-014-3260,RESISTOR
5910-99-015-3900,"CAPACITOR,FIXED,CERAMIC DIELECTRIC"
5910-99-015-8883,"CAPACITOR,FIXED,ELECTROLYTIC"
5910-99-015-8903,CAPACITOR
5910-99-016-0046,CAP VAR 3.5-21.5PF
5910-99-017-2407,"CAPACITOR,FIXED,ELECTROLYTIC"
5910-99-017-2409,"CAPACITOR,FIXED,ELECTROLYTIC"
5910-99-017-2450,"CAPACITOR,FIXED,ELECTROLYTIC"
5910-99-115-7557,RESISTOR
5910-99-119-5048,CAPACITOR
5910-99-527-8100,CAPACITOR
5910-99-618-0436,RESISTOR
5910-99-624-8105,CAPACITOR INO/2.5 160V
5910-99-714-6278,CAPACITOR
5910-99-778-2570,RESISTOR
5910-99-846-1966,"CAPACITOR,FIXED,METALLIZED,PAPER-
STIC DIELECTRIC"
5910-99-900-5078,RESISTOR
5995-99-543-1296,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5995-99-547-2381,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5995-99-580-0899,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5995-99-610-4314,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5995-99-618-7447,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5995-99-618-9010,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5995-99-618-9397,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5995-99-619-3111,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5995-99-620-2352,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5995-99-620-4074,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5995-99-620-4778,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5995-99-620-8044,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5995-99-620-8045,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5995-99-620-8059,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5995-99-620-8457,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5995-99-620-8493,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5995-99-620-8669,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5995-99-620-8762,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5995-99-620-8764,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5995-99-620-8766,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5995-99-620-8981,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5995-99-620-9125,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5995-99-620-9126,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5995-99-621-2090,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5995-99-621-5055,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5995-99-622-3129,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5995-99-622-3667,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5995-99-622-3668,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5995-99-622-3669,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5995-99-622-3670,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5995-99-622-3671,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5995-99-622-3672,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5995-99-622-8525,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5995-99-622-8986,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5995-99-622-9754,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5995-99-624-1043,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5995-99-624-2878,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5995-99-624-2881,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5995-99-624-2882,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5995-99-624-2883,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5995-99-624-2884,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5995-99-624-5966,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5995-99-624-7438,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5995-99-624-7439,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5995-99-624-7440,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5995-99-624-7731,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5995-99-624-9844,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5995-99-625-6364,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5995-99-626-7688,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5995-99-630-4015,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5995-99-630-6519,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5995-99-630-6520,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5995-99-630-6539,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5995-99-630-6540,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5995-99-630-6540,"CABLE ASSEMBLY,POWER"
5995-99-630-6541,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5995-99-630-6544,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5995-99-630-6545,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5995-99-630-6548,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5995-99-630-7996,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5995-99-633-6104,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5995-99-633-6427,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5995-99-634-9491,"CORD ASSEMBLY,ELECTRICAL"
5995-99-635-7448,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5995-99-637-0739,"CABLE ASSEMBLY,POWER,ELECTRICAL"

5910-99-914-7404,CAPACITOR
5910-99-933-0161,RESISTOR
5910-99-956-9476,RESISTOR
5910-99-999-4092,CAPACITOR
5915-99-220-6800,RESISTOR
5915-99-622-5003,FILTER BANDPASS FC568CBB
5915-99-627-2874,"FILTER,LOW PASS"
5915-99-658-1439,FILTER
5920-32-062-3790,"FUSE 3/8AMP, 3AG. SLOW-BLOW"
5920-99-001-2988,FUSELINK CARTRIDGE
5920-99-011-9127,FUSE 50A
5920-99-011-9926,1.25X1.25 CARTRIDGE CERAMIC
5920-99-012-0231,DEF 64 FUSE HOLDER
5920-99-014-9569,"FUSE LINK,CARTRIDGE"
5920-99-014-9570,"FUSE LINK,CARTRIDGE"
5920-99-014-9571,FUSE
5920-99-014-9572,"FUSE LINK,CARTRIDGE"
5920-99-014-9573,"FUSE LINK,CARTRIDGE"
5920-99-014-9574,"FUSE LINK,CARTRIDGE"
5920-99-014-9575,"FUSE LINK,CARTRIDGE"
5920-99-014-9576,"FUSE LINK,CARTRIDGE"
5920-99-014-9577,"FUSE LINK,CARTRIDGE"
5920-99-014-9578,"FUSE LINK,CARTRIDGE"
5920-99-014-9579,"FUSE LINK,CARTRIDGE"
5920-99-014-9580,"FUSE LINK,CARTRIDGE"
5920-99-014-9581,FUSE
5920-99-059-0110,FUSE LINK
5920-99-059-0111,FUSE LINK
5920-99-059-0121,FUSE LINK
5920-99-059-0123,FUSELINK
5920-99-059-0124,FUSELINK
5920-99-059-0143,FUSE 3AMP
5920-99-101-0502,PACKING PIECE
5920-99-102-4526,FUSE
5920-99-104-3043,FUSE ELECT. AS2.5
5920-99-104-3045,FUSE AS15
5920-99-104-3046,FUSELINK AS20
5920-99-104-7722,FUSE LINK
5920-99-104-9572,FUSE (BESWICK)
5920-99-105-7260,"FUSE LINK,CARTRIDGE"
5920-99-105-7261,"FUSE LINK,CARTRIDGE"
5920-99-107-7637,"FUSE LINK,CARTRIDGE"
5920-99-108-2057, FUSEHOLDER
5920-99-114-0491,
5920-99-119-9010,"DISCHARGER, ELECTROSTATIC"
5920-99-142-1044,SEE 5920-99-011-9926
5920-99-193-9696,"FUSE LINK,CARTRIDGE"
5920-99-252-4608,"FUSE LINK,CARTRIDGE"
5920-99-432-7398,"FUSE LINK,CARTRIDGE"
5920-99-442-7924,5920-99-442-7924
5920-99-444-4937,"FUSE LINK,CARTRIDGE"
5920-99-444-4939,"FUSE,CARTRIDGE"
5920-99-444-4991,Fuse Link
5920-99-444-4992,FUSE LINK
5920-99-444-4994,"CAP,FUSEHOLDER"
5920-99-444-4995,"CARRIER,FUSE LINK"
5920-99-444-4995,FUSE CARRIER
5920-99-444-5413,DRG FOLDER
5920-99-444-5444,DRG FOLDER
5920-99-444-5472,DRG FOLDER
5920-99-452-3396,FUSE CARRIER
5920-99-456-1482,FUSE PANEL
5920-99-469-5448,Fuse
5920-99-469-5448,FUSE
5920-99-520-4679,"FUSE LINK,CARTRIDGE"
5995-99-638-0251,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5995-99-638-3172,"CABLE ASSEMBLY,SPECIAL PURPOSE,ELECTRICAL"
5995-99-638-3172,"CABLE ASSEMBLY,SPEC"
5995-99-639-5722,CABLE ASSEMBLY
5995-99-643-1052,"CABLE ASSEMBLY,SPECIAL PURPOSE,ELECTRICAL"
5995-99-645-0206,"CABLE ASSEMBLY,SPECIAL PURPOSE,ELECTRICAL"
5995-99-645-0243,"CABLE ASSEMBLY,SPECIAL PURPOSE,ELECTRICAL"
5995-99-645-0250,LEAD ELECTRICAL
5995-99-645-0421,"CABLE ASSEMBLY,SPECIAL PURPOSE,ELECTRICAL"
5995-99-645-0422,"CABLE ASSEMBLY,SPECIAL PURPOSE,ELECTRICAL"
5995-99-646-3268,WIRING HARNESS
5995-99-647-9569,"CABLE ASSEMBLY,SPECIAL PURPOSE,ELECTRICAL"
5995-99-647-9570,"CABLE ASSEMBLY,SPECIAL PURPOSE,ELECTRICAL"
5995-99-647-9711,F/1 PLUG
5995-99-647-9712,PLUG & SOCKET
5995-99-647-9713,F/1 PLUG & SOCKET
5995-99-647-9714,F/1 PLUG & SOCKET
5995-99-647-9715,F/1 PLUG ETC
5995-99-647-9716,F/1 PLUG & CAP
5995-99-647-9717,F/1 SOCKET & CAP
5995-99-647-9718,F/1 SOCKET & CAP
5995-99-647-9719,F/1 PLUG & CAP
5995-99-647-9720,F/1 SOCKET & CAP
5995-99-647-9721,F/1 SOCKET & CAP
5995-99-647-9722,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5995-99-647-9723,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5995-99-647-9724,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5995-99-647-9725,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5995-99-652-2489,WIRING HARNESS
5995-99-652-7671,"CABLE ASSEMBLY,RADIO,FREQUENCY"
5995-99-652-7672,"CABLE ASSEMBLY,RADIO,FREQUENCY"
5995-99-652-7735,"CABLE ASSEMBLY,SPECIAL PURPOSE,ELECTRICAL"
5995-99-652-7735,
5995-99-652-7736,"CABLE ASSEMBLY,SPECIAL PURPOSE,ELECTRICAL"
5995-99-652-7737,"CABLE ASSEMBLY,SPECIAL PURPOSE,ELECTRICAL"
5995-99-652-7738,"CABLE ASSEMBLY,SPECIAL PURPOSE,ELECTRICAL"
5995-99-652-7739,"CABLE ASSEMBLY,SPECIAL PURPOSE,ELECTRICAL"
5995-99-653-0491,"CORD ASSEMBLY,ELECTRICAL"
5995-99-653-3815,"CABLE ASSEMBLY,RADIO,FREQUENCY"
5995-99-653-4902,"LEAD,ELECTRICAL"
5995-99-653-6401,CABLE ASSEMBLY
5995-99-653-6405,"CABLE ASSEMBLY,SPECIAL PURPOSE,ELECTRICAL"
5995-99-653-6411,"CABLE ASSEMBLY,SPECIAL PURPOSE,ELECTRICAL,BRANCHED"
5995-99-654-0913,"CABLE ASSEMBLY,SPECIAL PURPOSE,ELECTRICAL"
5995-99-658-1406,"LEAD,ELECTRICAL"
5995-99-658-1407,"LEAD,ELECTRICAL"
5995-99-658-1408,CABLE ASSY LEAD ELECTRICAL
5995-99-658-9890,CABLE ASSY POWER ELECTRICAL
5995-99-660-9096,"CABLE ASSEMBLY,SPECIAL

5920-99-527-3719,FUSE 45AMP
5920-99-527-7913,FUSELINK CARRIER 'O'
5920-99-545-0464,"FUSE,CARTRIDGE"
5920-99-545-0464,"FUSE,CARTRIDGE"
5920-99-624-6460," FUSE LINK,CARTRIDGE"
5920-99-638-7373,"FUSEHOLDER,RECEPTACLE"
5920-99-638-9623,
5920-99-646-1914,FUSEHOLDER
5920-99-646-1914,FUSE HOLDER
5920-99-651-6882," FUSE,CARTRIDGE"
5920-99-653-4909,Fuse Link Assy
5920-99-659-7572,"FUSE LINK,CARTRIDGE"
5920-99-710-9010,"FUSE,CARTRIDGE"
5920-99-741-7148,"Fuse, Cartridge"
5920-99-741-7149,"Fuse, Cartridge"
5920-99-741-7159,FUSELINK CARTRIDGE 10AMP BS88 PT2
5920-99-741-7161,"FUSE,CARTRIDGE"
5920-99-741-7163,FUSE WITH CARTRIDGE
5920-99-743-1088,
5920-99-743-3183,CONVERSION KIT FUSE HOLDER 20A S/PR
5920-99-743-3184,FUSE HOLDER BASE
5920-99-743-3185,FUSE HOLDER CARRIER
5920-99-750-7296,"FUSE,CARTRIDGE"
5920-99-755-4262,
5920-99-770-1679,"FUSE,CARTRIDGE"
5920-99-782-5893,FUSE
5920-99-858-3099,FUSE
5920-99-900-7290,"Fuse, Indicator Alarm"
5920-99-915-2570,FUSE LINK CARTRIDGE
5920-99-923-4050,FUSE LINK CARTRIDGE
5920-99-923-7285,BASE ELEC FUSE BASE UNIT & HOLDER
5920-99-940-1623,HRC FUSE
5920-99-940-1628,"Fuse, Cartridge"
5920-99-940-2085,
5920-99-952-4690,FUSELINK
5920-99-954-8371,
5920-99-970-6855,2.5 FUSE AST
5920-99-970-6857,AST 5 FUSELINK CARTRIDGE
5920-99-970-7019,SUPERSEDED BY 5920-99-442-7924
5920-99-970-7020,FUST AST15
5920-99-971-8191,FUSE AS10
5920-99-971-8192,FUSE AS5
5920-99-972-7910,FUSE
5925-99-783-4324,
5925-99-970-0668,
5930-00-410-1601,"SWITCH,TOGGLE"
5930-00-581-8157,
5930-00-681-4727,"SWITCH,TOGGLE"
5930-00-842-0609,"ADAPTER,SWITCH ACTUATOR"
5930-01-214-8543," SWITCH,PRESSURE"
5930-01-407-4130,SWITCH SENSITIVE
5930-32-015-4939,
5930-32-026-7533,
5930-32-061-9185,
5930-32-062-3791E,SWITCH ROCKER
5930-99-012-4844,HANDLE SWITCH
5930-99-012-4848,HANDLE SWITCH
5930-99-012-4850,HANDLE SWITCH
5930-99-012-4858,SWITCH LEVER
5930-99-012-8713,SWITCH ROTARY
5930-99-050-9543,
5930-99-051-0411," SWITCH,ROTARY"
5930-99-051-0422,"SWITCH,ROTARY"
5930-99-051-0551,SWITCH TOGGLE
5930-99-051-0553,SWITCH TOGGLE
PURPOSE,ELECTRICAL"
5995-99-661-3098,"LEAD,ELECTRICAL"
5995-99-661-8535,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5995-99-665-3650,CABLE ASSEMBLY
5995-99-710-0357," CABLE ASSEMBLY,SPECIAL
PURPOSE,ELECTRICAL"
5995-99-710-0467," CABLE ASSEMBLY,POWER,ELECTRICAL"
5995-99-734-4568,CABLE ASSEMBLY
5995-99-743-9133,"CABLE ASSEMBLY,SPECIAL
PURPOSE,ELECTRICAL"
5995-99-746-7002,CABLE ASSEMBLY
5995-99-749-7161,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5995-99-756-2355,CABLE ASSEMBLY
5995-99-776-5957,WIRING HARNESS
5995-99-780-0835,"CABLE ASSEMBLY SET,ELECTRICAL"
5995-99-781-1555,CABLE ASSEMBLY
5995-99-786-5430,CABLE ASSEMBLY
5995-99-802-1532,WIRING HARNESS
5995-99-802-1674,WIRING HARNESS
5995-99-824-4972,WIRING HARNESS
5995-99-891-6992,CABLE
5995-99-900-6891,"CABLE ASSEMBLY,SPECIAL
PURPOSE,ELECTRICAL"
5995-99-901-0406,"CORD ASSEMBLY,ELECTRICAL"
5995-99-901-2332,"CABLE ASSEMBLY,SPECIAL
PURPOSE,ELECTRICAL"
5995-99-901-3322," CABLE ASSEMBLY,POWER,ELECTRICAL"
5995-99-901-3940,"CABLE ASSEMBLY,SPECIAL
PURPOSE,ELECTRICAL"
5995-99-901-7451,"CABLE ASSEMBLY,RADIO FREQUENCY"
5995-99-901-7452,"CABLE ASSEMBLY,RADIO FREQUENCY"
5995-99-911-8256,"SOCKET,ELECTRICAL"
5995-99-911-8265,"SOCKET,ELECTRICAL"
5995-99-911-8308,CONNECTOR
5995-99-911-8309,CONNECTOR
5995-99-911-8310,CONNECTOR
5995-99-911-8336,CONNECTOR
5995-99-911-8337,CONNECTOR
5995-99-911-8394, CONNECTOR
5995-99-911-8406,"INDUCTOR,RADIO FREQUENCY"
5995-99-913-3929,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5995-99-914-8859,
5995-99-914-8958,
5995-99-914-8960,
5995-99-914-8964,
5995-99-914-8965,
5995-99-915-0983,"CABLE ASSEMBLY,RADIO FREQUENCY"
5995-99-924-2356,"CABLE GLAND,ELECTRICAL WIRE
ASSEMBLY"
5995-99-924-2357,"CABLE GLAND,ELECTRICAL WIRE
ASSEMBLY"
5995-99-932-1798,"CABLE ASSEMBLY,ELECTRICAL
BRANCHED"
5995-99-932-1799,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5995-99-932-1802,"CABLE ASSEMBLY,SPECIAL
PURPOSE,ELECTRICAL"
5995-99-932-1803,"CABLE ASSEMBLY,SPECIAL
PURPOSE,ELECTRICAL"
5995-99-932-1902,"CABLE ASSEMBLY,SPECIAL
PURPOSE,ELECTRICAL"
5995-99-932-1903,"CABLE ASSEMBLY,SPECIAL
PURPOSE,ELECTRICAL"
5995-99-932-1907,"CABLE ASSEMBLY,SPECIAL
PURPOSE,ELECTRICAL"
5995-99-932-1908,"CABLE ASSEMBLY,SPECIAL

5930-99-051-0576," SWITCH, TOGGLE"
5930-99-051-0590,SWITCH LEVER
5930-99-051-0593,SWITCH LEVER
5930-99-108-4480," SWITCH,SENSITIVE"
5930-99-110-4264,SWITCH (KEY) TYPE M
5930-99-110-4850,SWITCH TORQUE 4P DT
5930-99-111-8616," SWITCH, PUSH"
5930-99-111-9797,SWITCH TOGGLE
5930-99-112-3834,SWITCH KEY/LEVER LOCKING
5930-99-113-1901,"SWITCH, TOGGLE"
5930-99-117-2030,"SWITCH, TOGGLE"
5930-99-119-3557,"COVER,ELECTRICAL SWITCH"
5930-99-119-3663,"SWITCH,TOGGLE"
5930-99-128-6670,SCREW ADJUSTING
5930-99-142-2996,SWITCH TOGGLE 15A DP. ST
5930-99-142-2997,SWITCH TOGGLE SP ST
5930-99-147-3645,"SWITCH,ROTARY"
5930-99-195-3338,"SWITCH,PUSH"
5930-99-200-9488,
5930-99-201-4239,"SWITCH, PRESSURE"
5930-99-209-9430,"SWITCH,PUSH BUTTON"
5930-99-212-6007,"SWITCH,LEVER"
5930-99-215-4275," SWITCH,PUSH"
5930-99-242-8719,"HANDLE,SWITCH"
5930-99-251-6122,"SWITCH,SHORT CIRCUIT"
5930-99-300-2744,LIGHT-SWITCH
5930-99-301-8531,SWITCH
5930-99-339-4621,"HANDLE,SWITCH"
5930-99-347-0081,"SWITCH,ROTARY"
5930-99-409-5823,NUT
5930-99-419-5407,SWITCH RATARY WAFER
5930-99-428-3144,SWITCH BOX SBS 74
5930-99-428-3293,SWITCH TOGGLE
5930-99-429-8656,PATTRESS 1 WAY
5930-99-429-8657,PATTRESS
5930-99-429-8842-,"SWITCH, TOGGLE"
5930-99-429-8856,SWITCH
5930-99-434-5339,5A 250V SP. DB. SWITCH
5930-99-435-6212,SWITCH LIMIT
5930-99-436-9618,SWITCH ROTARY
5930-99-440-1431,"COVER,ACCESS"
5930-99-442-8858,"GAUGE,OIL,PRESSURE"
5930-99-444-4902,15A SW/SKT
5930-99-444-4906,5 AMP BRITMAC
5930-99-462-4307,SWITCH BOX
5930-99-519-1359,SWITCH LEVER
5930-99-520-4258,KEY SWITCH
5930-99-522-8213,SWITCH TOGGLE
5930-99-523-1358,SWITCH TOGGLE
5930-99-523-3437,SWITCH ROTARY 5 POLE 4 POSITION
5930-99-523-3497,SWITCH
5930-99-523-3498,SWITCH
5930-99-525-2752,FLASHER UNIT
5930-99-525-3323,SWITCH
5930-99-525-4101,SWITCH THERMOSTATIC
5930-99-525-9454,
5930-99-526-8767,"PARTS KIT,PNEUMATIC ACTUATOR"
5930-99-527-1296,SWITCH
5930-99-527-3929,KEY SWITCH
5930-99-527-8713,SWITCH TOGGLE
5930-99-529-2932,BOX ELECTRICAL SWITCH
5930-99-529-9262,SWITCH ROTARY
5930-99-529-9528,SWITCH HOOK
5930-99-531-7161,SWITCH THERMOSTATIC
5930-99-531-7189,"SWITCH,THERMOSTATIC"
PURPOSE,ELECTRICA"
5995-99-932-1909,"CABLE ASSEMBLY,SPECIAL
PURPOSE,ELECTRICA"
5995-99-932-1910,"CABLE ASSEMBLY,SPECIAL
PURPOSE,ELECTRICA"
5995-99-932-2129,"CABLE ASSEMBLY,SPECIAL
PURPOSE,ELECTRICA"
5995-99-932-3721,"CABLE ASSEMBLY,SPECIAL
PURPOSE,ELECTRICA"
5995-99-932-3722,"CABLE ASSEMBLY,SPECIAL
PURPOSE,ELECTRICA"
5995-99-932-4014,CABLE ASSEMBLY
5995-99-932-4017,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5995-99-932-4037,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5995-99-932-4038,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5995-99-932-4039,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5995-99-932-4040,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5995-99-932-4041,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5995-99-932-4971,"CABLE ASSEMBLY,SPECIAL
PURPOSE,ELECTRICAL"
5995-99-932-5597,CONNECTOR
5995-99-932-5599,CONNECTOR
5995-99-932-5600,CONNECTOR
5995-99-932-5601,CONNECTOR
5995-99-932-5602,
5995-99-932-5603,
5995-99-932-5610,CONNECTOR
5995-99-932-5611,CONNECTOR
5995-99-932-5612,CONNECTOR
5995-99-932-5613,CONNECTOR
5995-99-932-5614,CONNECTOR
5995-99-932-5615,CONNECTOR
5995-99-932-5616,CONNECTOR
5995-99-932-5617,CONNECTOR
5995-99-932-5618,CONNECTOR
5995-99-932-5620,CONNECTOR
5995-99-932-5621,CONNECTOR
5995-99-932-5622,CONNECTOR
5995-99-932-5631,CONNECTOR
5995-99-932-5632,CONNECTOR
5995-99-932-5757,CONNECTOR
5995-99-932-5758,"CABLE ASSEMBLY,SPEC"
5995-99-932-5761,"CABLE ASSEMBLY,SPECIAL
PURPOSE,ELECTRICAL"
5995-99-932-5762,"CABLE ASSEMBLY,SPECIAL
PURPOSE,ELECTRICAL"
5995-99-932-5763,
5995-99-932-5764,
5995-99-932-5765,"CABLE ASSEMBLY,SPECIAL
PURPOSE,ELECTRICAL"
5995-99-932-5767,"CABLE ASSEMBLY,SPECIAL
PURPOSE,ELECTRICAL"
5995-99-932-5784,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5995-99-932-6307,"CABLE ASSEMBLY,RADIO FREQUENCY"
5995-99-932-7566,
5995-99-933-1021,"CABLE ASSEMBLY,SPECIAL
PURPOSE,ELECTRICAL"
5995-99-933-1025,"CABLE ASSEMBLY,SPECIAL
PURPOSE,ELECTRICAL"
5995-99-933-1026,"CABLE ASSEMBLY,SPECIAL
PURPOSE,ELECTRICAL"
5995-99-933-3079,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5995-99-933-3080,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5995-99-933-3081,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5995-99-933-3083,"CABLE ASSEMBLY,POWER,ELECTRICAL"

5930-99-531-7267,SWITCH THERMOSTATIC
5930-99-531-7295,SWITCH THERMOSTATIC
5930-99-531-7301,SWITCH THERMOSTATIC
5930-99-531-7312,SWITCH THERMOSTATIC
5930-99-533-4352,SWITCH TOGGLE
5930-99-534-2144,"SWITCH,SENSITIVE"
5930-99-537-6495,SWITCH ROTARY
5930-99-539-1705,SWITCH SENSITIVE
5930-99-539-2096,SWITCH THERMOSTATIC
5930-99-539-2096,"SWITCH,THERMOSTATIC"
5930-99-539-6505,SWITCH SENSITIVE
5930-99-541-3424,SWITCH THERMOSTATIC
5930-99-541-3425,SWITCH THERMOSTATIC
5930-99-541-3426,SWITCH THERMOSTATIC
5930-99-543-6118,SWITCH SENSITIVE
5930-99-543-8795,SWITCH ROTARY
5930-99-547-3968,SWITCH PLUNGER
5930-99-549-0118,SWITCH ROTARY
5930-99-549-8599,"SWITCH,TOGGLE"
5930-99-564-8551,SWITCH LEVER
5930-99-580-2156,SWITCH SENSITIVE
5930-99-591-4000,"ARM,SWITCH ACTUATOR"
5930-99-611-5450,SWITCH BOX
5930-99-618-6542,"SWITCH, TOGGLE"
5930-99-620-1955,SWITCH ROTARY TYPE 72
5930-99-620-2612,"CONTACT ASSEMBLY,ELECTRICAL"
5930-99-623-4967,CIRCUIT BREAKER
5930-99-628-5716,TIMER
5930-99-628-5717,TIMER
5930-99-628-5718,TIMER
5930-99-630-6254,SWITCH
5930-99-631-3793,"SWITCH, TOGGLE"
5930-99-631-6080,"SWITCH,SENSITIVE"
5930-99-633-6108,SWITCH ASSEMBLY
5930-99-638-8665,SWITCH PUSH BUTTON
5930-99-640-5065,SWITCH PUSH
5930-99-640-5065,"SWITCH,PUSH"
5930-99-644-6077,SWITCH
5930-99-645-0261,SWITCH BOX RADIO FREQ.
5930-99-648-3616,"SWITCH,TOGGLE"
5930-99-648-3617,"SWITCH,TOGGLE"
5930-99-649-0254,SWITCH PUSH
5930-99-652-3146," GUARD,SWITCH"
5930-99-655-3209,SWITCH TOGGLE
5930-99-655-4245,"PLUG,RUBBER"
5930-99-658-3887,SWITCH PUSH D/P 20A
5930-99-714-5784,SWITCH
5930-99-718-6342,"SWITCH,TOGGLE"
5930-99-735-4117,"SWITCH,THERMOSTATIC"
5930-99-737-1045,SWITCH SENSITIVE
5930-99-737-1046,SWITCH SENSITIVE
5930-99-739-5110," SWITCH,TOGGLE"
5930-99-744-1898,SAFETY SW C/W STOPPER & LAZYARD
5930-99-744-6973,SWITCH ROTARY
5930-99-745-5774,"SWITCH,ROTARY"
5930-99-756-7435,"SWITCH,SENSITIVE"
5930-99-758-4807,SWITCH PUSH
5930-99-761-0267,GSON1
5930-99-761-0661,"SWITCH,SENSITIVE"
5930-99-761-9783,SWITCH PUSH BUTTON
5930-99-764-5906,"SWITCH,TOGGLE"
5930-99-783-0384,
5930-99-783-0385,
5930-99-787-9353,SWITCH PUSH
5930-99-790-6719,SWITCH BOX
5995-99-933-3084,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5995-99-940-0491,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5995-99-940-3385,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5995-99-940-3386,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5995-99-940-3387,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5995-99-941-4191,"BOLT,MACHINE"
5995-99-943-2448,"CABLE ASSEMBLY,RADIO FREQUENCY"
5995-99-943-2451,"CABLE ASSEMBLY,RADIO FREQUENCY"
5995-99-943-2452,"CABLE ASSEMBLY,RADIO FREQUENCY"
5995-99-943-2454,"CABLE ASSEMBLY,RADIO FREQUENCY"
5995-99-943-4142,"CABLE ASSEMBLY,RADIO FREQUENCY"
5995-99-943-4144,"CABLE ASSEMBLY,RADIO FREQUENCY"
5995-99-943-4145,"CABLE ASSEMBLY,RADIO FREQUENCY"
5995-99-944-4069,"CABLE ASSEMBLY,RADIO FREQUENCY"
5995-99-945-2373,"CABLE ASSEMBLY,RADIO FREQUENCY"
5995-99-945-5814,"CABLE ASSEMBLY,RADIO FREQUENCY"
5995-99-945-9896,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5995-99-946-5806,"CABLE ASSEMBLY,RADIO"
5995-99-946-5807,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5995-99-946-5808,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5995-99-946-5809,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5995-99-946-5810,
5995-99-946-5811,
5995-99-946-5812,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5995-99-946-5813,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5995-99-946-5814,"CABLE ASSEMBLY,SPEC"
5995-99-948-5662,"CABLE ASSEMBLY,RADIO FREQUENCY"
5995-99-948-8889,"CABLE ASSEMBLY,SPECIAL
PURPOSE,ELECTRICAL"
5995-99-949-1001,"CABLE ASSEMBLY,RADIO
FREQUENCY,BRANCHED"
5995-99-949-1012,"CABLE ASSEMBLY,RADIO
FREQUENCY,BRANCHED"
5995-99-949-1013,"CABLE ASSEMBLY,RADIO
FREQUENCY,BRANCHED"
5995-99-949-1016,"CABLE ASSEMBLY,RADIO
FREQUENCY,BRANCHED"
5995-99-949-1075,"LEAD,ELECTRICAL"
5995-99-949-1905,"CORD ASSEMBLY,ELECTRICAL"
5995-99-949-3242,"CABLE ASSEMBLY,RADIO FREQUENCY"
5995-99-949-5150,"CABLE ASSEMBLY,SPECIAL
PURPOSE,ELECTRICAL"
5995-99-949-5436,"CABLE ASSEMBLY,SPECIAL
PURPOSE,ELECTRICAL"
5995-99-949-6775,
5995-99-949-6859,CABLE ASSEMBLY
5995-99-949-9324,
5995-99-951-4126,"CABLE ASSEMBLY,RADIO FREQUENCY"
5995-99-951-4127,"CABLE ASSEMBLY,RADIO FREQUENCY"
5995-99-951-4242,"CABLE ASSEMBLY,RADIO FREQUENCY"
5995-99-951-4456,"CABLE ASSEMBLY,RADIO FREQUENCY"
5995-99-951-7411,"CABLE ASSEMBLY,TELEPHONE"
5995-99-951-7413,"CABLE ASSEMBLY,TELEPHONE"
5995-99-952-7597,
5995-99-952-9906,ABLE CONDUIT ASSEMBLYXE
5995-99-955-1120,COLOUR CODE BROWN
5995-99-955-1123,CABLE ASSEMBLYXRADIO FREQUENCY
5995-99-955-1439,"CABLE ASSEMBLYXSPECIAL
PURPOSE,ELECTRICAL"
5995-99-955-1440,"CABLE ASSEMBLYXSPECIAL
PURPOSE,ELECTRICAL"
5995-99-955-3255,"CABLE ASSEMBLY,SPECIAL
PURPOSE,ELECTRICAL"
5995-99-955-7342,"CABLE ASSEMBLY,SPECIAL
PURPOSE,ELECTRICAL"

5930-99-798-6284,SAFETY SWITCH/C/WSTOPPER&LAWYARD
5930-99-799-2785,THUMB WHEEL SWITCH
5930-99-801-0438,ROTARY SWITCH KEY OPERATED
5930-99-801-2837,SWITCH BOX
5930-99-804-8955,HORN PUSH SW.
5930-99-826-9139,STARTER
5930-99-828-1065,"SWITCH,SENSITIVE"
5930-99-858-0651,"SWITCH,ROTARY"
5930-99-881-6190,"SWITCH,SENSITIVE"
5930-99-881-7485,SWITCH PUSH
5930-99-920-6670,SWITCH PUSH
5930-99-920-6707,"ADAPTOR,SWITCH ACTUATOR"
5930-99-924-1258,SWITCH TOGGLE
5930-99-932-2408,SWITCH SENSITIVE
5930-99-932-4057,"SWITCH,ROTARY WAFER,POWER OPERATED"
5930-99-943-9043,SWITCH PUSH BUTTON
5930-99-945-7167,"HOLDER,SWITCH THERMOSTAT"
5930-99-946-6341,SWITCH PUSH BUTTON
5930-99-947-7588,SWITCH TOGGLE
5930-99-950-4044,SWITCH ASSEMBLY
5930-99-970-4445,"SWITCH,ROTARY,WAFER"
5930-99-972-7020,SWITCH SENSITIVE PLUNGER TYPE
5930-99-972-9807,"SOCKET,PLUG-IN ELECTRONIC COMPONENTS"
5930-99-998-8763,SWITCH PUSH BUTTON
5930-99-999-5433,"TRANSFORMER,POWER,STEP-UP"
5930-99-999-5493,SWITCH TOGGLE
5935-00-259-3880,"CONNECTOR,RECEPTACLE,ELECTRICAL"
5935-00-454-3976,"CONNECTOR,PLUG,ELEC."
5935-00-567-0128,"CONNECTOR,PLUG,ELECTRICAL"
5935-00-901-8871,"CONNECTOR,PLUG,ELECTRICAL"
5935-01-043-0629Z,CONNECTOR PLUG ELECTRICAL
5935-01-093-7259,PLUG
5935-14-404-2377,PLUG 2 POLE
5935-14-406-8151,"CONNECTOR,FIXED,ELECTRICAL"
5935-14-442-2631,
5935-17-705-7150,
5935-17-705-7342,
5935-32-005-0586,
5935-32-005-0586,
5935-32-011-2048,
5935-32-011-2048,
5935-32-012-2825,SOCKET
5935-66-768-9615,
5935-99-001-2374,"CONNECTOR,PLUG,ELECTRICAL"
5935-99-001-3574,
5935-99-001-6896,CONNECTOR FREE ELECTRICAL
5935-99-011-9116,SHIELD
5935-99-011-9484,
5935-99-011-9806,PLUG FIXED
5935-99-012-0096,"TERMINATION,SHIELD,ELECTRICAL CONNECTOR"
5935-99-012-2826,"CONNECTOR,PLUG,ELECTRICAL"
5935-99-012-2827,SOCKET SR12C
5935-99-012-2831,INNER SLEEVE PATT 12
5935-99-012-2833,INNER SLEEVE PATT 12
5935-99-012-2835,OUTER SLEEVE PATT 12
5935-99-012-2836,OUTER SLEEVE PATT 12
5935-99-012-5690,"PLUG,TIP"
5935-99-012-8829,"CONNECTOR,RECEPTACLE,ELECTRICAL"
5935-99-012-9169,"CONNECTOR,PLUG,ELECTRICAL"
5935-99-012-9199,"CONNECTOR,PLUG,ELECTRICAL"
5935-99-012-9667,"CONNECTOR,FREE,ELECTRICAL"
5935-99-012-9675,"CONNECTOR,RECEPTACLE,ELECTRICAL"
5995-99-955-7343,"CABLE ASSEMBLY,SPECIAL PURPOSE,ELECTRICAL"
5995-99-955-9701,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5995-99-955-9707,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5995-99-956-2094,20-3/8 LONG
5995-99-970-0519,"CABLE ASSEMBLY,SPEC"
5995-99-970-0520,"CABLE ASSEMBLY,RADIO"
5995-99-970-0521,"CABLE ASSEMBLY,SPEC"
5995-99-970-0522,"CABLE ASSEMBLY,SPEC"
5995-99-970-0532,"CABLE ASSEMBLY,SPECIAL PURPOSE,ELECTRICAL"
5995-99-970-8706,
5995-99-970-8707,
5995-99-970-8772,"CABLE ASSEMBLY,RADIO FREQUENCY"
5995-99-970-8774,"CABLE ASSEMBLY,RADIO FREQUENCY"
5995-99-970-8775,"CABLE ASSEMBLY,RADIO FREQUENCY"
5995-99-970-8775,
5995-99-970-8778,"CABLE ASSEMBLY,RADIO FREQUENCY"
5995-99-970-8779,"CABLE ASSEMBLY,RADIO FREQUENCY"
5995-99-970-8781,"CABLE ASSEMBLY,RADIO FREQUENCY"
5995-99-971-8299,SUPERSEDED BY 5935-99-653-8524
5995-99-972-6203,"LEAD,ELECTRICAL"
5995-99-972-6204,BRASS FIXED SOCKET
5995-99-972-8349,"CABLE ASSEMBLY,RADIO FREQUENCY"
5995-99-972-8485,"CABLE ASSEMBLY,RADIO FREQUENCY"
5995-99-972-8537,CABLE ASSEMBLIES
5995-99-972-8745,CONNECTORS
5995-99-972-8746,CONNECTORS
5995-99-972-8747,CONNECTORS
5995-99-972-9065,"LEAD,TEST"
5995-99-972-9066,"LEAD,TEST"
5995-99-972-9194,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5995-99-972-9348,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5995-99-972-9819,"CABLE ASSEMBLY,POWER"
5995-99-972-9820,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5995-99-972-9821,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5995-99-972-9822,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5995-99-972-9823,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5995-99-972-9824,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5995-99-972-9825,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5995-99-972-9826,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5995-99-973-9826,
5995-99-978-0772,CABLE ASSEMBLY
5995-99-978-0773,CABLE ASSEMBLY
5995-99-978-0774,CABLE ASSEMBLY
5995-99-999-3196,"LEAD,ELECTRICAL"
5996-99-914-8961,
5999-14-345-7849,"CONTACT,ELECTRICAL"
5999-14-345-7854,"CONTACT,ELECTRICAL"
5999-32-025-2715,
5999-99-097-0184,"CAP,ELECTRICAL"
5999-99-113-6113,"HANDLE,CARD"
5999-99-117-2033,JUNCTION BOX
5999-99-193-0138,"PLUNGER,DETENT"
5999-99-314-5457,SHIELDING GASKET
5999-99-419-7505,PLUG
5999-99-427-7331,PLUG
5999-99-427-7332,PLUG
5999-99-427-7333,PLUG
5999-99-427-7334,PLUG
5999-99-427-7335,PLUG
5999-99-427-7391,PLUG
5999-99-427-7539,PLUG
5999-99-434-9650,SOCKET-SWITCH ASSEMBLY
5999-99-440-1207,MAGNET

5935-99-012-9840,"CONNECTOR,RECEPTACLE,ELECTRICAL"
5935-99-013-0279,CONNECTOR PLUG ELECTRICAL
5935-99-013-0892,"CONNECTOR,RECEPTACLE,ELECTRICAL"
5935-99-013-1314,PLUG
5935-99-013-1450,SOCKET
5935-99-013-1465,"CONNECTOR,RECEPTACLE,ELECTRICAL"
5935-99-013-1516,SOCKET PATT 104
5935-99-013-1518,SOCKET
5935-99-013-1601,"CONNECTOR,PLUG,ELECTRICAL"
5935-99-013-9188,COVER
5935-99-014-1285,"TERMINATION,SHIELD,ELECTRICAL
CONNECTOR"
5935-99-014-1293,"TERMINATION,SHIELD,ELECTRICAL
CONNECTOR"
5935-99-014-1294,"TERMINATION,SHIELD,ELECTRICAL
CONNECTOR"
5935-99-014-1295,"TERMINATION,SHIELD,ELECTRICAL
CONNECTOR"
5935-99-014-1296,"TERMINATION,SHIELD,ELECTRICAL
CONNECTOR"
5935-99-014-1301,SLEEVE INNER
5935-99-014-1444,CONNECTOR FIXED GEN1A ITEM 10
5935-99-014-1446,GEN1A ITEM 205
5935-99-014-2968,NUT
5935-99-014-2982,CABLE CLAMP
5935-99-014-8897,"CONNECTOR,FIXED,ELECTRICAL"
5935-99-014-9273,OUTLET SET PATT 104
5935-99-014-9290,"MAINTENANCE KIT,ELECTRICAL
CONNECTOR"
5935-99-014-9587,"CONNECTOR,FIXED,ELECTRICAL"
5935-99-015-0222,CONNECTOR PLUG ELECTRICAL
5935-99-015-0253,"CONNECTOR,FREE,ELECTRICAL"
5935-99-015-0255,"CONNECTOR,FREE,ELECTRICAL"
5935-99-015-0262,"CONNECTOR,FREE,ELECTRICAL"
5935-99-015-0282,SOCKET
5935-99-015-0303,CONNECTOR
5935-99-015-0329,"CONNECTOR,FIXED,ELECTRICAL"
5935-99-015-0590,PLUG ELECTRICAL
5935-99-015-0594,AOCKET ELECTRICAL
5935-99-015-0666,"CONNECTOR,FIXED,ELECTRICAL"
5935-99-015-0947,"CONNECTOR,FIXED,ELECTRICAL"
5935-99-015-0997,"CONNECTOR,FIXED,ELECTRICAL"
5935-99-015-1017,"CONNECTOR,FIXED,ELECTRICAL"
5935-99-015-1093,SHEILD
5935-99-015-1104,ELECTRICAL SHEILD
5935-99-015-1232,CONTACT
5935-99-015-1263,GEN1A ITEM 45
5935-99-015-1265,GEN1A ITEM 72
5935-99-015-1266,GEN1A ITEM 144
5935-99-015-1288,TOOL
5935-99-015-1289,TOOL
5935-99-015-1320,CONNECTOR FIXED ELECTRICAL
5935-99-015-1651,10 PAIR COUPLER FREE CABLE
5935-99-015-1652,10 PAIR COUPLER FREE CABLE
5935-99-015-2153,"CONNECTOR,RECEPTACLE,ELECTRICAL"
5935-99-015-2306,CONNECTOR ELECTRICAL
5935-99-015-2307,CONNECTOR
5935-99-015-2414,"CONNECTOR,FREE,ELECTRICAL"
5935-99-015-2522,"CONNECTOR,FREE,ELECTRICAL"
5935-99-015-3008,"CONNECTOR,PLUG,ELECTRICAL"
5935-99-015-3017,CONNECTOR RECEPTACLE ELECTRICAL
5935-99-015-4088,"CONNECTOR,PLUG,ELECTRICAL"
5935-99-015-4196,CONNECTOR
5935-99-015-8503,FILLER PLUG SIZE 20
5935-99-015-8505,FILLER PLUG
5999-99-441-8989,
5999-99-444-4907,SOCKET SWITCH
5999-99-444-4909,SOCKET
5999-99-444-4911,SOCKET
5999-99-444-4912,SOCKET
5999-99-444-4914,SOCKET
5999-99-444-5316,SOCKET
5999-99-444-8278,SOCKET
5999-99-445-5317,SOCKET
5999-99-445-8504,SOCKET
5999-99-455-8506,SOCKET
5999-99-456-1436,
5999-99-461-1828,SOCKET
5999-99-526-5551,PANEL ELECTRONIC CCT
5999-99-527-4681,DELAY UNIT (9 SECOND DELAY)
5999-99-533-4676,SWITCH SOCKET
5999-99-533-4677,15 AMP SOCKET
5999-99-533-4678,
5999-99-533-4679,15 AMP SOCKET
5999-99-595-6088,PARALLEL GROOVE CLAMP
5999-99-624-0297,"CONTACT,ELECTRICAL"
5999-99-631-0645,CONNECTOR ASSEMBLY
5999-99-650-7587,"SHIELDING GASKET,ELECTRONIC"
5999-99-651-7148,"CLI,ELECTRIAL"
5999-99-653-3189,"CLIP,ELECTRICAL"
5999-99-658-9545,RED HANDLE PCB
5999-99-658-9546,WHITE HANDLE PCB
5999-99-658-9547,GREEN HANDLE PCB
5999-99-658-9548,BLACK HANDLE PCB
5999-99-658-9549,GREY HANDLE PCB
5999-99-722-5627,CONTACT
5999-99-744-1528,BLUE HANDLE PCB
5999-99-775-9636,RELAY AND BRACKET ASSEMBLY
5999-99-877-1180,CONNECTOR SWITCH
5999-99-915-0525,CIRCUIT CARD ASSEMBLY
5999-99-947-0175,"CONTACT, ELECTRICAL"
5999-99-971-0161,"CLIP,ELECTRICAL"
6105-99-035-3333,MOTOR
6105-99-035-3340,MOTOR
6105-99-096-0733,MOTOR
6105-99-251-1615,MOTOR
6105-99-373-9283,MOTOR
6105-99-523-7300,MOTOR
6105-99-524-8190,MOTOR
6105-99-554-0668,MOTOR
6105-99-796-8414,MOTOR
6105-99-859-7813,MOTOR
6110-99-033-3451,DISTRIBUTION BOX
6110-99-110-7370,
6110-99-520-7167,CONTROL AMPLIFIER
6110-99-635-7570,
6110-99-645-0255,SISTRIBUTION BOX
6110-99-645-0266,CONTROL BOX GENERATOR SET
6110-99-653-5951,DC CONTROL UNIT
6110-99-943-2444,JUNCTION BOX
6110-99-943-2445,DISTRIBUTION BOX
6115-99-101-9180,GASKET
6115-99-630-8025,
6115-99-630-8424,
6115-99-720-9939,DOOR ASSY
6115-99-720-9940,DOOR ASSY
6115-99-720-9941,DOOR ASSY
6115-99-720-9942,REMOVABLE PANEL
6115-99-733-4542,TERMINAL STRIP
6115-99-786-9487,LAGGING EXHAUST

5935-99-015-9260,"ADAPTOR, CONNECTOR"
5935-99-015-9648,"CONNECTOR,PLUG,ELECTRICAL"
5935-99-017-3316,4 CONTACT FIXED
5935-99-017-3316,CONNECTOR FIXED
5935-99-017-3317,4 CONTACT FREE
5935-99-017-3318,28 CONTACT FIXED
5935-99-017-3319,28 CONTACT FREE
5935-99-032-1975,SEE 932-1975
5935-99-038-5550,CONNECTOR
5935-99-038-5552,CONNECTOR
5935-99-038-5560,CONNECTOR
5935-99-038-5588,"CONNECTOR,FIXED,ELECTRICAL"
5935-99-038-5632," COVER,ELECTRICAL CONNECTOR"
5935-99-038-5639,CAP
5935-99-054-0014,"CONNECTOR,FIXED,ELECTRICAL"
5935-99-054-0015,"ADAPTER,CONNECTOR"
5935-99-054-0069,"SOCKET,ELECTRICAL"
5935-99-054-9013,
5935-99-054-9028,"CONNECTOR,PLUG,ELEC"
5935-99-056-0039,
5935-99-056-0040,
5935-99-056-0041,"PLUG,ELECTRICAL"
5935-99-056-0184,508/1/40009-324
5935-99-056-0760,
5935-99-056-1161,
5935-99-056-1172,LESS PROT. CAP EHT DEMOUNT. FIXED
5935-99-097-0045,
5935-99-097-0068,OUTLET
5935-99-097-0129,"NUT,BUSHING RETAINER,ELEC.CONNECT"
5935-99-097-0180,KNOB
5935-99-100-3769,GEN1A ITEM 308
5935-99-101-0967,"CONNECTOR,PLUG,ELECTRICAL"
5935-99-101-9283,"INSERT,ELECTRICAL SOCKET"
5935-99-102-7111,"CONNECTOR,PLUG,ELECTRICAL"
5935-99-103-2233,"CONNECTOR,FIXED,ELECTRICAL"
5935-99-103-2787,"NUT,COUPLING,ELECTRICAL
CONNECTOR"
5935-99-103-5665,QUAD COUPLER-FREE (CABLE CONNECT)
5935-99-103-5666,"CONNECTOR,RECEPTACLE,ELECTRICAL"
5935-99-103-6518,"CONNECTOR,RECEPTACLE,ELECTRICAL"
5935-99-103-6523,"CONNECTOR,PLUG,ELECTRICAL"
5935-99-103-8486,"PLUG AND SOCKET
ASSEMBLY,ELECTRICAL"
5935-99-103-8487,"BODY,PLUG AND SOCKET"
5935-99-103-9054,"SIDE PLATE,MOUNTING"
5935-99-103-9055,BASE PLATE MOUNTING
5935-99-103-9056,
5935-99-103-9061,"RETAINER,ELECTRICAL PLUG SOCKET"
5935-99-104-7985," PLUG ASSEMBLY,ELECTRICAL"
5935-99-105-4127,INSERT ONLY
5935-99-105-4617,"ADAPTER,CABLE CLAMP TO
CONNECTOR"
5935-99-106-7289,"CONNECTOR,PLUG,ELECTRICAL"
5935-99-106-7382,DUMMY ELECTRICAL SOCKET
5935-99-107-9766,"SOCKET,ELECTRICAL"
5935-99-108-0260,"COVER,ELECTRICAL CONNECTOR"
5935-99-108-0260,"COVER,ELECTRICAL CO"
5935-99-108-2622,"CONNECTOR,PLUG,ELECTRICAL"
5935-99-108-2900,CONNECTOR
5935-99-110-2119,"CONNECTOR,PLUG,ELECTRICAL"
5935-99-110-2218,"CONNECTOR,PLUG,ELECTRICAL"
5935-99-110-2229,SOCKET
5935-99-110-2870,DEMOUNTABLE FREE
5935-99-110-4890,"CONNECTOR,PLUG,ELECTRICAL"
5935-99-110-5040,GEN1A ITEM 233
6115-99-786-9488,LAGGING EXHAUST
6115-99-795-3053,TYSPEED 45 RESILIENT MOUNT
6115-99-795-9311,LAGGING
6115-99-796-1391,LAGGING
6130-99-105-6182,"LEAD,SECONDARY BATTERY"
6130-99-105-6183,"LEAD,SECONDARY BATTERY"
6130-99-105-6241,"LEAD,SECONDARY BATTERY"
6130-99-105-6242,"LEAD,SECONDARY BATTERY"
6130-99-105-6243,"LEAD,SECONDARY BATTERY"
6130-99-624-3012,FRONT PANEL INSERT ASSEMBLY
6130-99-652-5459,"STRIP,RETAINING"
6130-99-652-5461,SLIDE
6130-99-778-2316,POWER SUPPLY
6140-99-117-1004,"LEAD,ELECTRICAL"
6140-99-308-1474,CABLE ASSEMBLY
6140-99-355-5003,CABLE ASSEMBLY
6140-99-375-0396,CABLE ASSEMBLY
6140-99-815-5071,BATTERY
6140-99-818-4830,"LEAD,SECONDARY BATTERY"
6140-99-837-6621,CABLE ASSEMBLY
6145-99-000-5797, BACKPLANE ASSEMBLY
6145-99-014-9533,"CABLE,RADIO,FREQUENCY"
6145-99-014-9548,"CABLE,RADIO,FREQUENCY"
6145-99-015-1449,"WIRE,ELECTRICAL"
6145-99-015-1521,WIRE TYPE A WHT/GR TRACER 7/02PTFE
6145-99-038-2657,SINGLE CORE RUBBER CABLE
6145-99-038-3986,"CABLE,SPECIAL PURPOSE,ELECTRICAL"
6145-99-117-7511,WIRING HARNESS
6145-99-117-7512,CABLE SUBASSEMBLY
6145-99-193-4442,"WIRE,ELECTRICAL MINYVIN 18"
6145-99-220-6314,CABLE
6145-99-223-8058,"CABLE ASSEMBLY,POWER,ELECTRICAL"
6145-99-446-6385,"CABLE,SPECIAL PURPOSE,ELECTRICAL"
6145-99-446-6387,"WIRE,ELECTRICAL"
6145-99-446-6389,"WIRE,ELECTRICAL"
6145-99-446-6441,"WIRE,ELECTRICAL"
6145-99-446-6444,"WIRE,ELECTRICAL"
6145-99-469-7987,CABLE EQUIPMENT
6145-99-513-6587,"CABLE,SPECIAL PURPOSE,ELECTRICAL"
6145-99-521-6989,CABLE
6145-99-521-8408,CABLE
6145-99-522-7857,CABLE
6145-99-522-7859,CABLE
6145-99-522-7860,CABLE
6145-99-551-1205,"CABLE,SPECIAL PURPOSE,ELECTRICAL"
6145-99-620-8590,CABLE 4A 20F
6145-99-646-9170,"CABLE,ELECTRICAL"
6145-99-648-0826,CONNECTOR
6145-99-649-6975,"CABLE,RADIO FREQUENCY"
6145-99-651-5024," WIRE,ELECTRICAL"
6145-99-652-7211,"CABLE,SPECIAL PURPOSE,ELECTRICAL"
6145-99-653-0062,"CABLE,SPECIAL PURPOSE,ELECTRICAL"
6145-99-653-3289,"CABLE,SPECIAL PURPOSE,ELECTRICAL"
6145-99-656-1935,"CABLE,SPECIAL PURPOSE ELECTRICAL"
6145-99-659-4483," WIRE,ELECTRICAL"
6145-99-659-4489,"WIRE,ELECTRICAL"
6145-99-708-9784,CABLE
6145-99-756-5673,CABLE
6145-99-771-5861,CABLE
6145-99-784-5143,"WIRE,ELECTRICAL"
6145-99-789-1344,CABLE REEL
6145-99-917-0933,"WIRE,ELECTRICAL"
6150-99-105-6319,"CABLE ASSEMBLY,POWER,ELECTRICAL"
6150-99-222-1962,LEAD ELECTRICAL
6150-99-256-9840,CABLE ASSEMBLY

5935-99-110-6521,TNC 50-12 ELBOW
5935-99-110-9925,
5935-99-112-3414,"CONNECTOR,RECEPTACLE,ELECTRICAL"
5935-99-112-5832,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5935-99-114-8289,"CONNECTOR,FREE,ELECTRICAL"
5935-99-115-8296,"CONNECTOR,FIXED,ELECTRICAL"
5935-99-115-9824,SOCKET RELAY
5935-99-116-9317,ACCESSORY SET
5935-99-117-2032,GEN1A ITEM 143
5935-99-117-4666,"CONNECTOR,FIXED,ELECTRICAL"
5935-99-117-7717,"CONNECTOR,FIXED,ELECTRICAL"
5935-99-119-2789,"ADAPTOR,ELECTRICAL PLUG TO PLUG"
5935-99-119-5147,GEN1A ITEM 16
5935-99-142-3075,5935-99-142-3075
5935-99-142-5427,"SOCKET,ELECTRICAL"
5935-99-142-8010,5935-99-142-8010
5935-99-193-1683,COVER
5935-99-193-2631,"PLUG,ELECTRICAL"
5935-99-193-3508,ADAPTOR CABLE
5935-99-193-4573,"ADAPTER,CONNECTOR"
5935-99-193-6680,GEN1A ITEM 324
5935-99-194-6078,"CONNECTOR,FREE,ELECTRICAL"
5935-99-194-7025,"CONNECTOR,RECEPTACLE,ELECTRICAL"
5935-99-194-7781,11A/A24110
5935-99-195-4084,SOCKET
5935-99-198-4805,CABLE CLAMP
5935-99-198-7345,GEN1A ITEM 270
5935-99-198-9484,SOCKET
5935-99-199-0184,"CONNECTOR,RECEPTACLE,ELECTRICAL"
5935-99-209-3896,"PLUG,TIP"
5935-99-212-1307,"PLUG,FIXED"
5935-99-220-7819,"CONNECTOR,FIXED,ELECTRICAL"
5935-99-220-7838,"CONNECTOR,RECEPTACLE,ELECTRICAL"
5935-99-222-6563,"CONTACT,ELECTRICAL"
5935-99-222-9281,"CONNECTOR,PLUG,ELECTRICAL"
5935-99-223-0992,OUTLET
5935-99-223-4529,"CONNECTOR
BODY,RECEPTACLE,ELECTRICAL"
5935-99-223-6565,GEN1A ITEM 406
5935-99-223-7666,
5935-99-223-8968,
5935-99-225-5200,
5935-99-227-8581,R/A SKT (LIGHTING KIT ITEM)
5935-99-244-3042,"CONNECTOR,FIXED,ELECTRICAL"
5935-99-251-0665,"CONNECTOR,RECEPTACLE,ELECTRICAL"
5935-99-253-5815,"CONNECTOR,FREE,ELECTRICAL"
5935-99-254-2977,GEN1A ITEM 223
5935-99-254-2979,GEN1A ITEM 306
5935-99-254-2994,GEN1A ITEM 73
5935-99-254-2995,GEN1A ITEM 111
5935-99-254-2996,GEN1A ITEM 198
5935-99-254-2997,GEN1A ITEM 99
5935-99-254-2998,GEN1A ITEM 93
5935-99-254-3000,SLEEVE ELECT LISTING 2393
5935-99-254-3009,GEN1A ITEM 163
5935-99-254-3011,SLEEVE ELECTRICAL
5935-99-254-3012,SLEEVE ELECTRICAL LISTING 2392
5935-99-254-3014,GEN1A ITEM 202
5935-99-254-3016,GEN1A ITEM 18
5935-99-254-3017,GEN1A ITEM 17
5935-99-254-3018,GEN1A ITEM 38
5935-99-254-3019,GEN1A ITEM 24
5935-99-255-3042,
5935-99-256-5705,"WINDOW,MARINE"
5935-99-257-3168,"CONNECTOR,FIXED,ELECTRICAL"
6150-99-308-1474,CABLE ASSEMBLY
6150-99-355-5003,CABLE ASSEMBLY
6150-99-373-9855,"CABLE ASSEMBLY,POWER,ELECTRICAL"
6150-99-375-0396,CABLE ASSEMBLY
6150-99-409-4428,MOTOR
6150-99-470-3068,"CABLE ASSEMBLY,POWER,ELECTRICAL"
6150-99-470-3068,"CABLE ASSEMBLY,POWER,ELECTRICAL"
6150-99-495-9855,MOTOR
6150-99-517-8930,"CABLE ASSEMBLY,POWER,ELECTRICAL"
6150-99-524-6059,MOTOR
6150-99-524-8189,MOTOR
6150-99-524-8191,MOTOR
6150-99-525-0961,CABLE ASSEMBLY
6150-99-525-0962,CABLE ASSEMBLY
6150-99-525-0963,CABLE ASSEMBLY
6150-99-525-0964,CABLE ASSEMBLY
6150-99-525-0965,CABLE ASSEMBLY
6150-99-525-0965,CABLE ASSEMBLY
6150-99-525-0966,CABLE ASSEMBLY
6150-99-525-0967,CABLE ASSEMBLY
6150-99-525-0968,CABLE ASSEMBLY
6150-99-525-0969,CABLE ASSEMBLY
6150-99-525-0970,CABLE ASSEMBLY
6150-99-525-0971,CABLE ASSEMBLY
6150-99-525-0972,CABLE ASSEMBLY
6150-99-525-0973,CABLE ASSEMBLY
6150-99-525-0974,CABLE ASSEMBLY
6150-99-525-0975,CABLE ASSEMBLY
6150-99-525-0976,CABLE ASSEMBLY
6150-99-525-0977,CABLE ASSEMBLY
6150-99-525-0978,CABLE ASSEMBLY
6150-99-525-0979,CABLE ASSEMBLY
6150-99-525-0980,CABLE ASSEMBLY
6150-99-525-0981,CABLE ASSEMBLY
6150-99-525-0983,CABLE ASSEMBLY
6150-99-525-0984,CABLE ASSEMBLY
6150-99-525-0984,CABLE ASSEMBLY
6150-99-525-1845,MOTOR
6150-99-525-5995,MOTOR
6150-99-525-7224,CABLE ASSEMBLY
6150-99-525-8774,CABLE ASSEMBLY
6150-99-526.3668,MOTOR
6150-99-527-9409,MOTOR
6150-99-528-1283,MOTOR
6150-99-528-4533,MOTOR
6150-99-528-8001,MOTOR
6150-99-528-9239,MOTOR
6150-99-529-5689,CABLE ASSEMBLY
6150-99-529-5690,CABLE ASSEMBLY
6150-99-532-9569,MOTOR
6150-99-534-7158,MOTOR
6150-99-534-7569,MOTOR
6150-99-538-1080,MOTOR
6150-99-538-7324,MOTOR
6150-99-547-5812,CABLE ASSEMBLY
6150-99-547-8512,CABLE ASSEMBLY
6150-99-548-6515,MOTOR
6150-99-645-0258,SHOCK PROTECTION UNIT
6150-99-645-9232,CABLE ASSEMBLY _MAINS LEAD
6150-99-775-8739,MOTOR
6150-99-779-8151,MOTOR
6150-99-786-3039,CABLE ASSEMBLY
6150-99-786-3490,ELECTRICAL LEAD ASSEMBLY
6150-99-786-5430,CABLE ASSEMBLY
6150-99-792-9850,MOTOR

5935-99-300-6739,"CONNECTOR,RECEPTACLE,ELECTRICAL"
5935-99-327-4024,"LIGHTING KIT ITEM, PANEL SOCKET"
5935-99-328-8646,"PLUG FREE STRAIGHT, LIGHTING KIT"
5935-99-341-1030," ADAPTER,CABLE CLAMP TO
CONNECTOR"
5935-99-341-1030,"ADAPTER,CABLE CLAMP TO
CONNECTOR"
5935-99-356-7247,"CONNECTOR,FREE,ELECTRICAL"
5935-99-383-3627,"CONNECTOR,FIXED,ELECTRICAL"
5935-99-390-3878,
5935-99-419-7486,PLUG
5935-99-419-7499,"CONNECTOR,FIXED,ELECTRICAL"
5935-99-419-7500,GEN1A
5935-99-419-7501,"PLUG,ELECTRICAL"
5935-99-419-7502,SOCKET GEN1A
5935-99-419-7503,CONTROL BOX SOCKET
5935-99-419-7550,"PLUG,ELECTRICAL"
5935-99-419-7555,GEN1A ITEM 350
5935-99-419-7560,GEN1A ITEM 180
5935-99-419-7573,SBS 11
5935-99-419-7574,
5935-99-419-7575,SBS 13
5935-99-419-7597,
5935-99-419-7610,GEN1A ITEM 117
5935-99-427-7273,"CONNECTOR,FIXED,ELECTRICAL"
5935-99-427-7280,
5935-99-427-7288,PLUG ELECTRICAL
5935-99-427-7289,15 AMP PLUG
5935-99-427-7296,ADAPTOR
5935-99-427-7301,
5935-99-427-7302,
5935-99-427-7308,
5935-99-427-7309,CONNECTOR
5935-99-427-7312,
5935-99-427-7326,MUFF COUPLING
5935-99-427-7331,PLUG
5935-99-427-7332,PLUG
5935-99-427-7333,PLUG GEN1A ITEM 23
5935-99-427-7334,PLUG
5935-99-427-7335,PLUG
5935-99-427-7337,
5935-99-427-7340,SOCKET
5935-99-427-7341,GEN1A ITEM 359
5935-99-427-7348,SOCKET
5935-99-427-7349,
5935-99-427-7359,EMERGENCY PLUG 180A RED PH. 1
5935-99-427-7360,EMERGENCY PLUG 180A YELLOW PH. 2
5935-99-427-7361,EMERGENCY PLUG 180A BLUE PH. 3
5935-99-427-7365,GEN1A ITEM 97
5935-99-427-7389,
5935-99-427-7390,DEE 61334
5935-99-427-7391,15 AMP PLUG
5935-99-427-7392,15 AMP SOCKET
5935-99-427-7393,PLUG GEN1A ITEM 23
5935-99-427-7409,GEN1A ITEM 81
5935-99-427-7413,
5935-99-427-7416,SOCKET 180A 440VAC RED PHASE
5935-99-427-7418,SOCKET
5935-99-427-7422,
5935-99-427-7423,AMENITY SOCKET
5935-99-427-7425,GEN1A ITEM 87
5935-99-427-7426,GEN1A ITEM 35
5935-99-427-7427,PLUG
5935-99-427-7428,GEN1A ITEM 161
5935-99-427-7449,SOCKET BOX
6150-99-835-6124,"LEAD,ELECTRICAL"
6150-99-837-6621,CABLE ASSEMBLY
6150-99-900-5698,"CABLE ASSEMBLY,POWER,ELECTRICAL"
6150-99-900-5699,"CABLE ASSEMBLY,POWER,ELECTRICAL"
6150-99-900-5702,"CABLE ASSEMBLY,POWER,ELECTRICAL"
6150-99-900-5705,"CABLE ASSEMBLY,POWER,ELECTRICAL"
6150-99-901-4833,"CABLE ASSEMBLY,POWER,ELECTRICAL"
6150-99-901-5502,"LEAD,ELECTRICAL"
6150-99-930-2858,"CABLE ASSEMBLY,POWER,ELECTRICAL"
6150-99-930-2859,CABLE ASSEMBLY AND REEL
6150-99-940-6861,CABLE ASSEMBLY POWER ELECTRICAL
6150-99-959-0552,CABLE ASSEMBLY POWER ELECTRICAL
6150-99-99-4310,
6150-99-999-2782," CABLE ASSEMBLY,POWER,ELECTRICAL"
6150-99-999-2783," CABLE ASSEMBLY,POWER,ELECTRICAL"
6150-99-999-4072,"CABLE ASSEMBLY,POWER,ELECTRICAL"
6150-99-999-4080," CABLE ASSEMBLY,POWER,ELECTRICAL"
6150-99-999-4306,"CABLE ASSEMBLY,POWER,ELECTRICAL"
6150-99-999-4307,"CABLE ASSEMBLY,POWER,ELECTRICAL"
6150-99-999-4309,"CABLE ASSEMBLY,POWER,ELECTRICAL"
6150-99-999-4310,"CABLE ASSEMBLY,POWER,ELECTRICAL"
6150-99-999-4311,"CABLE ASSEMBLY,POWER,ELECTRICAL"
6150-99-999-4431,"CABLE ASSEMBLY,POWER,ELECTRICAL"
6150-99-999-4432,"CABLE ASSEMBLY,POWER"
6150-99-999-4433,"CABLE ASSEMBLY,POWER"
6150-99-999-4434,"CABLE ASSEMBLY,POWER,ELECTRICAL"
6150-99-999-4435,"CABLE ASSEMBLY,POWER,ELECTRICAL"
6150-99-999-4436,"CABLE ASSEMBLY,POWER,ELECTRICAL"
6150-99-999-4438,
6150-99-999-4778,"CABLE ASSEMBLY,POWER,ELECTRICAL"
6150-99-999-4780,"CABLE ASSEMBLY,POWER,ELECTRICAL"
6150-99-999-4782,
6150-99-999-8158,"CABLE ASSEMBLY,POWER,ELECTRICAL"
6150-99-999-8159,"CABLE ASSEMBLY,POWER,ELECTRICAL"
6210-99-108-5876,COWL
6210-99-451-6176,CONICAL LAMP SHADE
6210-99-972-7855,LIGHT INDICATOR
6220-99-770-4057,LIGHT WARNING VEHICLE
6230-99-450-9210,"CABLE ASSEMBLY,POWER,ELECTRICAL"
6230-99-450-9239,SBS C145
6230-99-451-2868,SBS144
6230-99-451-2869,SBS C139
6230-99-451-2870,SBS C140
6230-99-451-2871,SBS C141
6230-99-451-2872,SBS C142
6230-99-452-3317," LIGHTING SET,BATTERY OPERATED"
6230-99-452-3378,SBS C143
6230-99-549-1196,LIGHT DISTRESS MARKER
6230-99-637-0362,"CABLE,POWER,ELECTRICAL"
6230-99-637-9257,"CABLE ASSEMBLY,POWER,ELECTRICAL"
6230-99-661-5114,"LIGHT SET,GENERAL ILLUMINATION"
6230-99-900-5677,LIGHT SET GEN ILLUMINATION
PENTHOUSE
6230-99-900-5707,CASE LIGHT SET
6230-99-910-5033, FLASHLIGHT
6230-99-942-4378,LIGHT EXTENSION
6230-99-942-7874,LIGHT EXTENSION
6230-99-949-6381,"ADAPTOR,LIGHT FILTER"
6240-99-966-4378,LAMP FIL 25W
6240-99-995-1146,LAMP FIL.
6240-99-995-1229,LAMP EL1100
6240-99-995-1273,LAMP INCANDESCENT
6240-99-996-4389,LAMP FIL. 240V 25W CAP STYLE BCB22
6250-99-451-2867,CARRIER LAMPSHADE
6250-99-549-7048,LAMPHOLDER FESTOON BC C/W SLEEVE

5935-99-427-7455,GEN1A ITEM 25
5935-99-427-7456,
5935-99-427-7458,
5935-99-427-7459,
5935-99-427-7475,
5935-99-427-7488,508/1/11601 WIS6856/C
5935-99-427-7489,
5935-99-427-7505,PLUG
5935-99-427-7514,SIMILAR TO 972-9195
5935-99-427-7515,SIMILAR TO 972-9196
5935-99-427-7516,SBS 17
5935-99-428-3159,PLUG
5935-99-430-7001,
5935-99-430-8663,2 CONTACT JACK PLUG RED
5935-99-430-9219,
5935-99-433-4042,SOCKET
5935-99-433-4087,"CONNECTOR,RECEPTACLE,ELECTRICAL"
5935-99-433-4208,GEN1A ITEM 399
5935-99-433-4246,CONNECTOR FIXED ELECTRICAL
5935-99-434-0974,
5935-99-434-1069,CONNECTOR
5935-99-434-9774,
5935-99-435-6211,SOCKET
5935-99-437-1128,
5935-99-438-0063,
5935-99-444-1828,SWITCH SOCKET
5935-99-444-4908,SOCKET-SWITCH
5935-99-444-4909,SWITCH SOCKET
5935-99-444-4910,SWITCH SOCKET
5935-99-444-4911,SWITCH SOCKET
5935-99-444-4912,SWITCH SOCKET
5935-99-444-4914,SWITCH SOCKET
5935-99-444-4915,CONNECTOR-SWITCH
5935-99-444-4915,SWITCH SOCKET
5935-99-444-5316,15 AMP SOCKET
5935-99-444-5317,15 AMP SOCKET
5935-99-444-8278,SWITCH SOCKET
5935-99-445-5890,"SHIELD,ELECTRICAL CONNECTOR"
5935-99-445-8504,15 AMP SOCKET
5935-99-445-8505,CONNECTOR-SWITCH
5935-99-445-8505,15 AMP SOCKET
5935-99-445-8506,15 AMP SOCKET
5935-99-446-9823,
5935-99-447-7263,PLUG ASSEMBLY
5935-99-447-7266,SOCKET UNIT 115V
5935-99-449-1406,
5935-99-450-0076,
5935-99-450-0082,
5935-99-450-0083,
5935-99-450-0126,
5935-99-450-0172,PLUG ELECTRICAL
5935-99-450-9327,
5935-99-450-9446,
5935-99-451-2298,"CONNECTOR FREE, ELECTRICAL"
5935-99-451-2333,
5935-99-451-6192,PRICKTHROUGH ADAPTOR
5935-99-456-1484,5AMP SW/SKT COVER ONLY BRITMAC
5935-99-456-1486,COVER FOR 15SO/SL1 SW/SKT
5935-99-462-2818,"CONNECTOR,RECEPTACLE,ELECTRICAL"
5935-99-462-4116,"PLUG,WATERTIGHT"
5935-99-463-7992,SOCKET
5935-99-467-8059,COVER ETL/6781-20
5935-99-469-8099,CONNECTOR
5935-99-469-8101,CONNECTOR
5935-99-470-0444,CONNECTOR
6250-99-942-8343,LAMPHOLDER + 5MCABLE & 13A PLUG
6625-99-001-5180,"CABLE ASSEMBLY,POWER,ELECTRICAL"
6625-99-001-5353,"CABLE ASSEMBLY,POWER,ELECTRICAL"
6625-99-103-1663,"CABLE ASSEMBLY,RADIO FREQUENCY"
6625-99-104-2573,"LEAD,TEST"
6625-99-104-4580,TERMINATING PAD
6625-99-105-1489,COVER
6625-99-105-2136," CABLE ASSEMBLY,SPECIAL
PURPOSE,ELECTRICAL"
6625-99-105-5525,ADAPTOR TEST SRBF BODY
6625-99-114-6142,"CABLE ASSEMBLY,POWER,ELECTRICAL"
6625-99-114-6143,"CABLE ASSEMBLY,POWER,ELECTRICAL"
6625-99-114-6143,CABLE ASSEMBLY
6625-99-115-5931,WIRING HARNESS
6625-99-115-5933,WIRING HARNESS
6625-99-115-5935,WIRING HARNESS
6625-99-119-6915,"LEAD,TEST"
6625-99-119-6916,"LEAD,TEST"
6625-99-119-6917,"LEAD,TEST"
6625-99-119-7202,"LEAD,TEST"
6625-99-193-4171,"CABLE ASSEMBLY,RADIO FREQUENCY"
6625-99-193-4175,"CABLE ASSEMBLY,SPECIAL
PURPOSE,ELECTRICAL"
6625-99-193-4176,"CABLE ASSEMBLY,RADIO
FREQUENCY,BRANCHED"
6625-99-193-4180,"CABLE ASSEMBLY,POWER,ELECTRICAL"
6625-99-193-4182,"CABLE ASSEMBLY,SPECIAL
PURPOSE,ELECTRICAL"
6625-99-194-9065,"CABLE ASSEMBLY,POWER,ELECTRICAL"
6625-99-222-1334,WIRING HARNESS
6625-99-222-6219,"CABLE ASSEMBLY,POWER,ELECTRICAL"
6625-99-222-6220,"CABLE ASSEMBLY,POWER,ELECTRICAL"
6625-99-416-0343,"CABLE ASSEMBLY,RADIO FREQUENCY"
6625-99-416-0345,"CABLE ASSEMBLY,RADIO FREQUENCY"
6625-99-416-0347,"CABLE ASSEMBLY,RADIO FREQUENCY"
6625-99-416-0349,"CABLE ASSEMBLY,RADIO FREQUENCY"
6625-99-416-0350,"CABLE ASSEMBLY,RADIO FREQUENCY"
6625-99-416-0351,"CABLE ASSEMBLY,RADIO FREQUENCY"
6625-99-416-0355,"LEAD,TEST"
6625-99-451-2153,"LEAD,TEST"
6625-99-451-4984,"ADAPTOR,TERMINATION,CO-AXIAL"
6625-99-451-9084," CABLE ASSEMBLY,POWER,ELECTRICAL"
6625-99-468-2834,CONNECTOR
6625-99-468-2838,CONNECTOR
6625-99-468-4963,CONNECTOR
6625-99-468-5046,CONNECTOR
6625-99-468-5340,CONNECTOR
6625-99-522-3661,"CABLE
ASSEMBLY,POWER,ELECTRICAL,BRANCHED"
6625-99-531-1073,PANEL TEST ELECTRICAL
6625-99-580-8751,"CABLE ASSEMBLY,SPECIAL
PURPOSE,ELECTRICAL"
6625-99-580-8757,"CABLE AND CONDUIT
ASSEMBLY,ELECTRICAL"
6625-99-619-1013,"CABLE ASSEMBLY,POWER,ELECTRICAL"
6625-99-619-5932,"CABLE ASSEMBLY,POWER,ELECTRICAL"
6625-99-619-5933,WIRING HARNESS
6625-99-619-8521,TEST CABLE
6625-99-620-9768,"CABLE ASSEMBLY,POWER,ELECTRICAL"
6625-99-620-9769,"CABLE ASSEMBLY,POWER,ELECTRICAL"
6625-99-621-1685,CONNECTOR
6625-99-621-8728," CABLE ASSEMBLY,RADIO FREQUENCY"
6625-99-621-8730," CABLE ASSEMBLY,RADIO FREQUENCY"
6625-99-621-8731," CABLE ASSEMBLY,RADIO FREQUENCY"
6625-99-621-8736,"LEAD,TEST"

5935-99-495-6654,JACK TELEPHONE
5935-99-519-3626,CONNECTOR
5935-99-519-3669,"CONNECTOR,PLUG,ELECTRICAL"
5935-99-519-4039,"PLUG,ELECTRICAL"
5935-99-519-4266,SCREW LOCK ASSY
5935-99-519-5154,GEN1A ITEM 105
5935-99-519-5238,CONNECTOR PLUG ELECTRICAL
5935-99-519-6899,CONNECTOR PRINTED CCT
5935-99-519-9810,ADAPTOR
5935-99-519-9818,CONNECTOR
5935-99-519-9821,GEN1A ITEM 286
5935-99-520-2398,SOCKET 180 AMP
5935-99-520-3348,GEN1A ITEM 3
5935-99-520-3349,15 AMP PLUG
5935-99-520-3350,SW/SKT
5935-99-520-3351,15 AMP SOCKET
5935-99-520-3352,GEN1A ITEM 42
5935-99-520-3353,15 AMP SOCKET
5935-99-520-3361,SW/SKT
5935-99-520-3602,"MAINTENANCE KIT,ELECTRICAL
CONNECTOR"
5935-99-520-7597,PLUG 180A RED
5935-99-520-7598,PLUG 180A YELLOW
5935-99-520-7599,PLUG 180A BLUE
5935-99-520-7600,PLUG 400A RED
5935-99-520-7601,PLUG 400A YELLOW
5935-99-520-7602,PLUG 400A BLUE
5935-99-520-7603,SOCKET 180A RED
5935-99-520-7604,SOCKET 180A YELLOW
5935-99-520-7605,SOCKET 180A BLUE
5935-99-520-7606,SOCKET 400A RED
5935-99-520-7607,SOCKET 400A YELLOW
5935-99-520-7608,SOCKET 400A BLUE
5935-99-520-8442,GEN1A ITEM 152
5935-99-520-8447," ADAPTER,CONNECTOR"
5935-99-521-1358,PLUG ELECTRICAL
5935-99-521-2604,SOCKET
5935-99-522-3791,CONNECTOR
5935-99-522-8927,SHIELD
5935-99-523-3569,CONNECTOR RECEPTACLE ELECTRICAL
5935-99-523-3570,"CONNECTOR,RECEPTACLE,ELECTRICAL"
5935-99-523-6049,"CONNECTOR,PLUG,ELECTRICAL"
5935-99-523-8313,SBS97
5935-99-523-8696,SAFETY CAP
5935-99-523-9904,SOCKET T90 NICKEL PLATED
5935-99-525-0120," CONNECTOR,PLUG,ELECTRICAL"
5935-99-525-5240,"TERMINAL,LUG"
5935-99-525-6015,GEN1A ITEM 34
5935-99-525-6016,GEN1A ITEM 43
5935-99-525-6152,CONNECTOR
5935-99-526-7855,PLUG
5935-99-527-3414,13A SOCKET
5935-99-527-3417,PLUG
5935-99-527-4138,15 AMP SOCKET
5935-99-527-5016,"SOCKET,ELECTRICAL"
5935-99-527-7130,GEN1A ITEM 48
5935-99-527-7604,GEN1A ITEM 361
5935-99-527-8837,SOCKET/SWITCH
5935-99-529-3667,GEN1A ITEM 4
5935-99-531-2221,GEN1A ITEM 96
5935-99-531-4758,GEN1A ITEM 19
5935-99-531-5094,"COVER,ELECTRICAL CONNECTOR"
5935-99-531-5095,COVER
5935-99-531-6239,GEN1A ITEM 39
5935-99-531-6240,GEN1A ITEM 54
6625-99-621-8737,"LEAD,TEST"
6625-99-621-8740,"LEAD,TEST"
6625-99-621-8742,"LEAD,TEST"
6625-99-621-8745,"CABLE ASSEMBLY,POWE"
6625-99-622-5124,"ADAPTOR TEST,CONNECTOR"
6625-99-622-5469,"CABLE ASSEMBLY,POWER,ELECTRICAL"
6625-99-630-6289,"PANEL,PRINTED CIRCUIT"
6625-99-630-6290,"PANEL,PRINTED CIRCUIT"
6625-99-630-6291,"PANEL,PRINTED CIRCUIT"
6625-99-637-9513,"CABLE ASSEMBLY,POWER,ELECTRICAL"
6625-99-643-0873,ADJUST LEVEL ASSEMBLY
6625-99-645-0154,"CABLE ASSEMBLY,RADIO FREQUENCY"
6625-99-652-1993, TEST PLUG ASSEMBLY
6625-99-656-1053,R.F. LOAD ASSEMBLY
6625-99-765-2927," WIRING HARNESS,BRANCHED"
6625-99-772-3838,"ADAPTOR,TEST"
6625-99-786-8530,INDICATOR
6625-99-914-2602,"LEAD,ELECTRICAL"
6625-99-914-2603,"CABLE ASSEMBLY,RADIO FREQUENCY"
6625-99-914-2604,"CABLE ASSEMBLY,RADIO FREQUENCY"
6625-99-943-3486,"LEAD,TEST"
6625-99-943-4146,CONNECTOR SETS
6625-99-944-4289,"CABLE ASSEMBLY,RADIO FREQUENCY"
6625-99-944-4327," CABLE ASSEMBLY,RADIO FREQUENCY"
6625-99-944-4330,"CABLE ASSEMBLY,RADIO FREQUENCY"
6625-99-947-8374,"LEAD,TEST"
6625-99-947-8376,"CABLE ASSEMBLY,RADIO
FREQUENCY,BRANCHED"
6625-99-947-8378,"CABLE ASSEMBLY,RADIO
FREQUENCY,BRANCHED"
6625-99-951-9676,
6625-99-952-8846,STK NO. CHANGED SEE 954-3845
6625-99-953-5417,"CABLE ASSEMBLY,RADIO FREQUENCY"
6625-99-954-3845,CABLE ASSEMBLYXRADIO FREQUENCY
6625-99-954-4797," CABLE ASSEMBLYXSPECIAL
PURPOSE,ELECTRICAL"
6625-99-956-1467,
6625-99-999-9801,"LEAD,TEST"
6630-99-722-8058,SALINOMETER PROBE
6640-99-996-1112,GLOW LAMP 6V
6645-99-838-9522,TIME METER STIRRUP TYPE
6650-99-220-6807,MAGNIFIER
6665-99-965-6336,PROBE EXTENSION ADAPTOR
6680-99-658-2421,FLOWMETER
6680-99-755-0712,TRANSMITTER
6685-99-523-0033,SUCTION GAUGE
6685-99-523-0042,MANOMETRO
7330-99-823-2344,VENT TOP
8040-01-422-3958,ADHESIVE GLUE 40ML
8130-99-923-2344,CABLE ASSEMBLY
8140-99-964-4216,COVER ASSEMBLY
8415-99-256-6115,STRAP CHIN
8415-99-256-6116,STRAP EAR SHELL
9330-99-649-5998,TUBE PLASTICS SPIRAL WRAP
9330-99-794-1413,UO415 STRIP
9905-99-115-5795,"PLATE,IDENTIFICATION"
9905-99-622-8684,PLATE
9999-99-526-7102,GASKET
9999-99-526-7106,KEY MACHINE
9999-99-526-7107,KEY MACHINE
9999-99-526-7109,"RING,WEARING"
9999-99-526-7110,"RING,WEARING"

5935-99-531-7342,"CONNECTOR,FIXED,ELECTRICAL"
5935-99-531-9889,JACK SOCKET
5935-99-533-0775,GEN1A ITEM 135
5935-99-533-0822,SOCKET
5935-99-533-4680,15 AMP SOCKET
5935-99-533-6098,PLUG
5935-99-533-6795,RECEPTACLE
5935-99-534-6977,SOCKET WATERTIGHT
5935-99-534-7107,
5935-99-537-6824,CONNECTOR
5935-99-537-7645,SOCKET
5935-99-537-8234,"CONNECTOR,PLUG,ELECTRICAL"
5935-99-537-8874,"CONNECTOR,PRINTED CIRCUIT"
5935-99-541-0146,CONNECTOR PRINTED CIRCUIT
5935-99-541-6817,GEN1A ITEM 153
5935-99-541-7216,"CONNECTOR BODY,FREE,ELECTRICAL"
5935-99-543-0921,"CONNECTOR,FREE,ELECTRICAL"
5935-99-543-1320,"CONNECTOR,PLUG,ELECTRICAL"
5935-99-543-1321,CONN. FREE ELECT. 1 CONT 440V 180ABL
5935-99-543-1323,CONNECTOR
5935-99-543-1324,CM29141 GEN1A
5935-99-543-1325,CONNECTOR
5935-99-543-1326,"CONNECTOR,RECEPTACLE,ELECTRICAL"
5935-99-543-1327,"CONNECTOR,RECEPTACLE,ELECTRICAL"
5935-99-543-1328,"CONNECTOR,FIXED,ELECTRICAL"
5935-99-543-1333,CONNECTOR 180A
5935-99-543-1334,CONN. EMER. BULKHEAD TERM180A YLW
5935-99-543-1335,CONN. EMER. BULKHEAD TERM180A BL
5935-99-543-1336,"CONNECTOR,FIXED,ELECTRICAL"
5935-99-543-1337,"CONNECTOR,FIXED,ELECTRICAL"
5935-99-543-1338,"CONNECTOR,FIXED,ELECTRICAL"
5935-99-543-1339,ADAPTOR
5935-99-543-1342,"ADAPTOR,ELECTRICAL,SOCKET TO
SOCKET"
5935-99-543-1669,ADAPTOR
5935-99-543-5543,"CONNECTOR,FIXED,ELECTRICAL"
5935-99-545-1371,SOCKET RAZOR
5935-99-545-2026,"CONNECTOR,FIXED,ELECTRICAL"
5935-99-547-5303,"CONNECTOR,FIXED,ELECTRICAL"
5935-99-549-2665,SOCKET BOX
5935-99-561-5372,SHAVER SOCKET
5935-99-562-7332,"COVER,ELECTRICAL CONNECTOR"
5935-99-573-1663,"CONNECTOR,PLUG,ELECTRICAL"
5935-99-580-1104,"CONNECTOR,RECEPTACLE,ELECTRICAL"
5935-99-580-1105,"CONNECTOR,RECEPTACLE,ELECTRICAL"
5935-99-580-1521,"CONNECTOR,RECEPTACLE,ELECTRICAL"
5935-99-580-1652,"CONNECTOR,RECEPTACLE,ELECTRICAL"
5935-99-580-1653,"CONNECTOR,RECEPTACLE,ELECTRICAL"
5935-99-580-2417,"CONNECTOR,RECEPTACLE,ELECTRICAL"
5935-99-580-3577,"CONNECTOR,RECEPTACLE,ELECTRICAL"
5935-99-580-3636,"CONNECTOR,PLUG,ELECTRICAL"
5935-99-580-3660,"CONNECTOR,RECEPTACLE,ELECTRICAL"
5935-99-580-3661,"CONNECTOR,RECEPTACLE,ELECTRICAL"
5935-99-580-3662,"CONNECTOR,RECEPTACLE,ELECTRICAL"
5935-99-580-3663,"CONNECTOR,RECEPTACLE,ELECTRICAL"
5935-99-580-3675,"CONNECTOR,PLUG,ELECTRICAL"
5935-99-580-3680,"CONNECTOR,RECEPTACLE,ELECTRICAL"
5935-99-580-3681,"CONNECTOR,RECEPTACLE,ELECTRICAL"
5935-99-580-3682,"CONNECTOR,RECEPTACLE,ELECTRICAL"
5935-99-580-3683,"CONNECTOR,RECEPTACLE,ELECTRICAL"
5935-99-580-9339,"CONNECTOR,RECEPTACLE,ELECTRICAL"
5935-99-580-9602,"CONTACT,ELECTRICAL"
5935-99-588-1334,"ADAPTOR,SHIELD"
5935-99-591-2177,CABLE CLAMP ASSY
5935-99-608-2311,"INSERT,ELECTRICAL CONNECTOR"

5935-99-618-2506,"CONNECTOR,PLUG,ELECTRICAL"
5935-99-618-8698,"CONNECTOR,PLUG,ELECTRICAL"
5935-99-618-8699,"PLUG,ELECTRICAL"
5935-99-618-8700,PANEL UNIT PLUG
5935-99-618-8701,PANEL UNIT SOCKET 5X50A
5935-99-620-4302,"CONNECTOR,RECEPTACLE,ELECTRICAL"
5935-99-620-5866,SOCKET
5935-99-621-6578,"CABLE ASSEMBLY,POWER,ELECTRICAL"
5935-99-624-6493," WIRING HARNESS,BRANCHED"
5935-99-624-8011,CONNECTOR
5935-99-624-9516,"RETAINER,ELECTRICAL PLUG-SOCKET"
5935-99-626-2813,JACK TIP RED 4MM SKT RED
5935-99-626-3094,PLUG & SKT ASSY
5935-99-626-4930,"PLUG,ELECTRICAL"
5935-99-626-5069,JACKSCREW ASSEMBLY KIT
5935-99-627-7426,SEE 419-7560 & 427-7425
5935-99-630-3483,PLUG
5935-99-632-3532,PLUG ELECTRICAL
5935-99-632-6744,"CONNECTOR,FIXED,ELECTRICAL"
5935-99-633-5451," CONNECTOR,RECEPTACLE,ELECTRICAL"
5935-99-633-9684,INSULATION-PIERCING CONNECTOR
5935-99-634-3104,GUITAR JACK
5935-99-634-6892,PLUG ASSEMBLY
5935-99-634-8697,PLUG
5935-99-635-6434,DUMMY ELECTRICAL PLUG
5935-99-635-8558,GEN1A ITEM 85
5935-99-636-1993,"CONNECTOR,FREE,ELECTRICAL"
5935-99-636-2223,
5935-99-636-2944,
5935-99-637-0344,28 WAY CAP
5935-99-637-0345,CAP 4 CONTACT FIXED FREE 229-261
5935-99-637-9532,
5935-99-638-6607,
5935-99-639-1273,"CONNECTOR,FREE,ELECTRICAL"
5935-99-642-6558,"CLAMP,CABLE,ELECTRICAL CONNECTOR"
5935-99-643-0610,"CLAMP,CABLE,ELECTRICAL PLUG-
SOCKET"
5935-99-643-3906,SKT OUTLET 2 GANG 1 POLE 13A RECT.
5935-99-643-8964,
5935-99-643-9897,PLUG ELECT
5935-99-645-7408,
5935-99-646-0102,
5935-99-647-7554,"CONNECTOR,FIXED,ELECTRICAL"
5935-99-648-9068,CONNECTOR
5935-99-648-9197,CONNECTOR
5935-99-648-9239,CONNECTOR
5935-99-648-9262,CONNECTOR
5935-99-648-9267,
5935-99-648-9603,CONNECTOR FIXED
5935-99-648-9608,CONNECTOR FIXED
5935-99-648-9734,CONNECTOR FIXED
5935-99-649-6491,"JACK,TIP"
5935-99-649-8461,
5935-99-650-1008,"COVER,ELECTRICAL CONNECTOR"
5935-99-651-6271,CONNECTOR
5935-99-651-9651,CONNECTOR
5935-99-652-3609,"JACK,TIP"
5935-99-652-4373,
5935-99-653-2762,"CONNECTOR,FIXED,ELECTRICAL"
5935-99-653-5589,"ADAPTOR,GROOVED WITH SPIN
COUPLING"
5935-99-653-8524,SUPERSEDES 5995-99-971-8299
5935-99-654-6251,CONNECTOR SHIELD
5935-99-654-6284,SHEILD ELECTRICAL CONNECTOR
5935-99-657-2280,

5935-99-658-2902,"CONNECTOR,FREE,ELECTRICAL"
5935-99-659-3812,ELECTRONIC VALVE SOCKET
5935-99-659-4320,
5935-99-661-4714,CONNECTOR FREE ELECTRICAL
5935-99-663-1669,
5935-99-700-4676,"PLUG,END SEAL,ELECTRICAL
CONNECTOR"
5935-99-710-2386,CONNECTOR
5935-99-713-6535,"CONNECTOR,FREE,ELECTRICAL"
5935-99-716-2801,
5935-99-717-2076,SOCKET INSERT ASSY
5935-99-720-3188,"SHIELD,ELECTRICAL CONNECTOR"
5935-99-720-4091,
5935-99-722-2532,LIGHTING KIT ITEM R/A PLUG
5935-99-724-6266,
5935-99-724-8544,GEN1A
5935-99-725-8243,CONNECTOR SWITCH
5935-99-734-4019," CONNECTOR,INTERVEHICLE"
5935-99-737-2114,"CONNECTOR,FIXED,ELECTRICAL"
5935-99-737-7108,"CONNECTOR,PLUG,ELECTRICAL"
5935-99-740-2529,
5935-99-740-2530,
5935-99-740-3512,"CONNECTOR,FIXED,ELECTRICAL"
5935-99-740-7647,"CONNECTOR,RECEPTACLE,ELECTRICAL"
5935-99-742-4481,CONNECTOR
5935-99-743-3555,CONNECTOR
5935-99-749-5801,"ADAPTOR,SHIELD"
5935-99-758-3683,
5935-99-758-9348,CONNECTOR
5935-99-760-5387,CONNECTOR
5935-99-761-0978,COVER PLUG-LIGHTING KIT
5935-99-761-1490,"CONNECTOR,FREE,ELECTRICAL"
5935-99-761-4279,
5935-99-764-8936,4 CONTACT FIXED LESS CAP
5935-99-764-8937,
5935-99-764-8941,4 CONTACT FREE BODY ONLY
5935-99-764-8945,28 WAY GOLD PLATED INSERT
5935-99-766-9316,BULKHEAD JACK
5935-99-770-8007,"CONNECTOR,FREE,ELECTRICAL"
5935-99-776-1435,
5935-99-777-4016,
5935-99-777-5236,"CONNECTOR,FREE,ELECTRICAL"
5935-99-780-0434,SHIELDED ADAPTOR STRAIGHT SHELL S8
5935-99-780-0450,INSULATION SLEEVING ELECTRICAL
5935-99-780-4453,CONNECTOR
5935-99-781-0162,SOCKET
5935-99-781-0182,
5935-99-784-9826,CABLE CLAMP
5935-99-791-9181,CONNECTOR FIXED
5935-99-793-8580,"CONNECTOR,FREE,ELECTRICAL"
5935-99-793-8595,"ADAPTOR, SPIN COUPLING"
5935-99-795-0164,"CONNECTOR,FREE,ELECTRICAL"
5935-99-798-6368,
5935-99-799-1746,SOCKET
5935-99-799-7070,
5935-99-800-1031,GEN1A ITEM 62
5935-99-802-2367,"CONNECTOR,FREE,ELECTRICAL"
5935-99-802-2423,
5935-99-802-2666,"CONNECTOR,FREE,ELECTRICAL"
5935-99-802-6382,"CONNECTOR,FREE,ELECTRICAL"
5935-99-803-1851,GEN1A ITEM 313
5935-99-804-2307,"CONNECTOR,FREE,ELECTRICAL"
5935-99-804-2307,
5935-99-805-0012,CONNECTOR
5935-99-806-3359,

5935-99-807-0590,PLUG 5A 3P
5935-99-809-8706,
5935-99-809-8706,CONNECTOR
5935-99-810-4052,SOCKET STR. FREE
5935-99-811-6016,ADAPTOR SOCKET
5935-99-811-6016,ADAPTOR SOCKET
5935-99-814-9352,"COVER,ELECTRICAL CONNECTOR"
5935-99-818-4531,
5935-99-826-3259,SOCKET ELECTRICAL ASSEMBLED
5935-99-831-8158,LIGHTING KIT PLUG FIXED
5935-99-838-0308,
5935-99-840-0168,CONN. FIXED ELECTRICAL (ASSEMBLY)
5935-99-840-2843,"COVER SOCKET, LIGHTING KIT"
5935-99-841-9500,"CONNECTOR,RECEPTACLE,ELECTRICAL"
5935-99-848-5100,
5935-99-850-0204,NUT OUTER (LIGHTING KIT ITEM)
5935-99-864-8464,
5935-99-874-3323,"CONNECTOR,PLUG,ELECTRICAL"
5935-99-881-3999,"CONNECTOR,FIXED,ELECTRICAL"
5935-99-881-4223,
5935-99-881-9665,"CONNECTOR,FIXED,ELECTRICAL"
5935-99-900-2516,"SEAL,RUBBER STRIP"
5935-99-900-2694,"INSERT,ELECTRICAL SOCKET"
5935-99-900-3495F,"PLUG, ELECTRICAL"
5935-99-900-3540,"COVER,ELECTRICAL CONNECTOR"
5935-99-900-3577,"COVER,ELECTRICAL CONNECTOR"
5935-99-900-4180,"CONNECTOR,PLUG,ELECTRICAL"
5935-99-900-5303,DEMOUNTABLE FIXED
5935-99-900-5349,"b1 SOCKET,ELECTRICAL"
5935-99-900-9574," CONNECTOR,RECEPTACLE,ELECTRICAL"
5935-99-901-6742," CONNECTOR,RECEPTACLE,ELECTRICAL"
5935-99-901-9523,PLUG
5935-99-911-0231,
5935-99-911-4163,BLACK
5935-99-911-6423,
5935-99-911-6425,
5935-99-911-6426,
5935-99-911-6612,"CONNECTOR,RECEPTACLE,ELECTRICAL"
5935-99-911-6614,PLUG
5935-99-911-6889,DUMMY ELECTRICAL PLUG
5935-99-911-6892,"CONNECTOR,FREE,ELECTRICAL"
5935-99-911-6893,"CONNECTOR,FREE,ELECTRICAL"
5935-99-911-6921,"SOCKET,ELECTRONIC "
5935-99-911-6923,"ADAPTOR,PLUG TO SOCKET ELECTRICAL"
5935-99-911-8239,PLUG
5935-99-913-3535,"CONNECTOR,PLUG,ELECTRICAL"
5935-99-913-9044,"JACK ASSEMBLY,TIP"
5935-99-914-3827,JACK TIP
5935-99-914-4740,"CONTACT,ELECTRICAL"
5935-99-914-8763,PLUG L378A/BBLUE
5935-99-914-9362,L378/A4 GREEN
5935-99-915-0026,"TERMINAL,STUD"
5935-99-918-3404,"PLATE,RETAINING,ELECTRICAL
CONNECTOR"
5935-99-920-9110,SBS 25
5935-99-920-9163,SBS 26
5935-99-923-5576,CONNECTOR
5935-99-923-7728,
5935-99-924-3669,PLUG
5935-99-924-3670,15 AMP PLUG
5935-99-924-5765,
5935-99-924-5873,"ADAPTOR,CONNECTOR"
5935-99-924-7019,SOCKET
5935-99-924-7023,"CONNECTOR,PLUG,ELECTRICAL"
5935-99-924-7579,INSERT AND SHELL

5935-99-924-8809,"BOLT ASSEMBLY,ELECTRICAL PLUG-SOCKET"
5935-99-932-0953,
5935-99-932-1403,705/1/05391/24
5935-99-932-1732,"RELAY,ELECTROMAGNETIC"
5935-99-932-1912,"CONNECTOR ASSEMBLY,ELECTRICAL"
5935-99-932-1975,"CONNECTOR,PLUG,ELECTRICAL"
5935-99-932-2643,"CONNECTOR,PLUG,ELECTRICAL"
5935-99-932-4049,SOCKET
5935-99-932-4536,BLACK RUBBER PF153
5935-99-932-4770,CONNECTOR SET ELECTRICAL
5935-99-932-4964,"PLUG,ELECTRICAL"
5935-99-932-5977,"CONNECTOR,RECEPTACLE,ELECTRICAL"
5935-99-933-0324,"CONNECTOR,FREE,ELECTRICAL"
5935-99-933-0325,"CONNECTOR,FIXED,ELECTRICAL"
5935-99-933-1423,"CONNECTOR,PLUG,ELECTRICAL"
5935-99-933-2931,"CONTACT,ELECTRICAL"
5935-99-940-1089,SEE 5935-99-972-8255
5935-99-940-1095,"CONNECTOR,FREE,ELECTRICAL"
5935-99-940-1652,ADAPTOR
5935-99-940-1665,R/A PLUG
5935-99-940-1666,SUPERCEDED BY 831-8158
5935-99-940-1668,FREE PLUG 13A
5935-99-940-1669,"CONNECTOR,PLUG,ELECTRICAL"
5935-99-940-1672,"CONNECTOR,PLUG,ELECTRICAL"
5935-99-940-1673,SOCKET SUPERCEDES 940-1673
5935-99-940-1674,R/A SKT SUPERCEDED BY 227-8581
5935-99-940-1675,FIXED SOCKET
5935-99-940-1677,"CONNECTOR,PLUG,ELECTRICAL"
5935-99-940-1680,FIXED SOCKET 80A 440V
5935-99-940-1682,PLUG 13AMP 3 PIN
5935-99-940-1684,SKT 13AMP FLUSH SQ. OUTLINE
5935-99-940-1767," PLUG,TELEPHONE"
5935-99-940-2207,"CONNECTOR,PLUG,ELEC"
5935-99-940-2248,CABLE GLAND
5935-99-940-2249,"GLAND,CABLE"
5935-99-940-8408,PANEL UNIT SOCKET
5935-99-940-8412,"CONNECTOR,PLUG,ELECTRICAL"
5935-99-940-9186,"CONNECTOR,PLUG,ELECTRICAL"
5935-99-940-9239,PLUG
5935-99-940-9244,PLUG
5935-99-940-9312,JACK TELEPHONE
5935-99-940-9665,COVER EL SKT
5935-99-943-4836,GEN1A ITEM 321
5935-99-943-6362,"CONNECTOR,FREE,ELECTRICAL"
5935-99-943-7205,TV PLUG GEN1A ITEM 61
5935-99-943-7276,"ADAPTOR,PLUG TO SOCKET,ELECTRICAL"
5935-99-943-8203,"ADAPTOR,ELECTRICAL PLUG"
5935-99-944-4092,INSERT & SHELL
5935-99-944-8102,SOCKET ELECTRICAL
5935-99-945-2447,"CONNECTOR,PLUG,ELECTRICAL"
5935-99-945-4608,R.F. SOCKET
5935-99-945-4608,"SOCKET,ELECTRICAL"
5935-99-945-8558,ERADB74616S
5935-99-946-3880," CONNECTOR
BODY,RECEPTACLE,ELECTRICAL"
5935-99-947-0172,GEN1A ITEM 300
5935-99-947-2687,"CONTACT,ELECTRICAL"
5935-99-947-4682,"CONNECTOR BODY,PLUG,ELECTRICAL"
5935-99-948-4018,SEE 5935-99-948-4018
5935-99-948-4018,TR/C758890
5935-99-948-5100,PLUG
5935-99-948-6978,"PLUG,ELECTRICAL"
5935-99-948-7729,"CONNECTOR,PLUG,ELECTRICAL"
5935-99-949-0202,"CONNECTOR,RECEPTACLE,ELECTRICAL"

5935-99-949-1940,SKT MIC/TEL
5935-99-949-6270,"CONNECTOR,RECEPTACLE,ELECTRICAL"
5935-99-949-8113,"CAPACITOR,FIXED,PLASTICS DIELECTRIC"
5935-99-950-5494,
5935-99-950-5707,
5935-99-950-5725,"SOCKET,ELECTRICAL"
5935-99-951-0965,
5935-99-951-1776,CONTACT ELECTRICAL B97820-6
5935-99-951-4158,
5935-99-951-6492,
5935-99-951-6808,
5935-99-953-3179,
5935-99-954-0598,
5935-99-954-5107,
5935-99-954-5125,
5935-99-954-6557,GIRDLESTONE
5935-99-955-4722,
5935-99-955-6640,
5935-99-956-3721,"PLUG, ELECTRICAL"
5935-99-956-4313,SOCKET CONTACTS
5935-99-956-7298,
5935-99-956-7299,
5935-99-970-0468,
5935-99-970-2351,
5935-99-970-2683,
5935-99-971-3285,
5935-99-971-3286,
5935-99-971-9086,
5935-99-972-0707,DUMMY PLUG
5935-99-972-0710,WAS 502201-07A-02
5935-99-972-3213,GEN1A ITEM 140
5935-99-972-3213,"CONNECTOR,PLUG,ELECTRICAL"
5935-99-972-4207,"ADAPTER,CONNECTOR"
5935-99-972-5251,
5935-99-972-5458,"SHELL,ELECTRICAL CONNECTOR"
5935-99-972-5841,
5935-99-972-5841,"CONNECTOR
BODY,RECEPTACLE,ELECTRICAL"
5935-99-972-6352,PLUG 7 POLE
5935-99-972-6714,PLUG 7 POLE
5935-99-972-6825,
5935-99-972-8184,
5935-99-972-8186,
5935-99-972-8188,
5935-99-972-8190,
5935-99-972-8193,COVER
5935-99-972-8200,
5935-99-972-8203,
5935-99-972-8204,
5935-99-972-8205,
5935-99-972-8255,SEE 5935-99-940-1089
5935-99-972-8279,SONAR 183 CONNECTOR
5935-99-972-8285,
5935-99-972-8473,508/1/11714
5935-99-972-8534,
5935-99-972-8535,SUPERSEDED BY 972-9196
5935-99-972-9061,
5935-99-972-9062,
5935-99-972-9112,PLUG 7 POLE
5935-99-972-9136,
5935-99-972-9195,508/1/11630
5935-99-972-9196,508/1/11774 SUPERSEDES 972-8535
5935-99-972-9536,
5935-99-972-9650,"COVER,ELECTRICAL CONNECTOR"
5935-99-972-9933,TERMINAL BOARD

5935-99-975-1099,"CHAIN,SHOULDER"
5935-99-987-4845,"SOCKET,FIXED"
5935-99-999-0884,
5935-99-999-0887,
5935-99-999-7518,
5935-99-999-8045,
5935-99-999-8220,SOCKET
5938-01-254-9460,ADAPTOR CABLE CLAMP
5940-01-013-8289,
5940-01-164-4688,
5940-01-164-4689,
5940-01-165-1743,
5940-12-197-3571,TERMINAL FIXED THROUGH
5940-32-012-6358F,LINK 3 WAYS
5940-32-018-5646,
5940-32-060-8229,
5940-99-001-1660,TERMINAL LUG
5940-99-001-1661,
5940-99-001-1662,
5940-99-001-1991,
5940-99-001-5014,
5940-99-011-9650,
5940-99-012-0227,
5940-99-012-0228,
5940-99-012-0230,
5940-99-012-0240,
5940-99-012-0242,BOARD STANDOFF
5940-99-012-4982,
5940-99-012-4984,
5940-99-015-7737,TERMINAL LEAD THROUGH
5940-99-015-7740,TERMINAL POST
5940-99-017-1636,CONNECTOR PROTECTIVE
5940-99-056-0057,TERMINAL LEAD THROUGH
5940-99-056-0084,
5940-99-056-0876,
5940-99-056-0880,
5940-99-056-0882,TERMINAL LEAD THROUGH
5940-99-056-0883,
5940-99-056-0884,TERMINAL LEAD THROUGH
5940-99-100-1400,TERMINAL LUG
5940-99-100-2694,TERMINAL BOARD
5940-99-100-2694,"TERMINAL BOARD, QUICK DISCONNECT"
5940-99-100-2869,TERMINAL BOARD
5940-99-100-2881,TERMINAL POST
5940-99-100-4046,
5940-99-100-5674,"TERMINAL,POST"
5940-99-100-6580,
5940-99-100-6869,TERMINAL BOARD
5940-99-100-7061,
5940-99-100-8619,
5940-99-101-2426,
5940-99-101-3917,
5940-99-102-8196,
5940-99-102-9927,TERMINAL LUGS/POST BINDING ELECT.
5940-99-103-5577,"TERMINAL SET,QUICK"
5940-99-103-9056,
5940-99-104-6152,
5940-99-104-6716,POST BINDING
5940-99-104-7982,"FUSE LINK,CARTRIDGE"
5940-99-105-0363,SPLICE CONDUCTOR
5940-99-105-2375,
5940-99-105-2448,POST BINDING
5940-99-107-3554,TERMINAL LUG
5940-99-107-3555,LISTING 2494 0.06
5940-99-107-3556,

5940-99-107-3557,
5940-99-107-3558,
5940-99-108-4780,
5940-99-109-1662,"TERMINAL,LUG"
5940-99-110-9841,
5940-99-110-9842,
5940-99-110-9845,
5940-99-111-5394,5X7310
5940-99-113-4454,
5940-99-113-7785,RING TONGUE TERM
5940-99-113-7787,RING TONGUE
5940-99-114-7770,TERMINAL LUG
5940-99-115-0926,
5940-99-115-0927,
5940-99-115-0928,
5940-99-115-9803,TERM BOARD PLASTIC KLIPPON 024352
5940-99-117-8804,
5940-99-119-5503,TERMINAL LUG
5940-99-119-6850,"TERMINAL,LUG"
5940-99-142-7960,"TERMINAL,LUG"
5940-99-169-0803,CRIMP BARREL
5940-99-192-6634,"TERMINAL, POST"
5940-99-193-0222,"TERMINAL,LUG"
5940-99-193-0223,"TERMINAL,LUG"
5940-99-193-2923,"SPLICE,CONDUCTOR"
5940-99-193-5492," TERMINAL,LUG"
5940-99-194-7908,
5940-99-194-7912,TERMINAL LUG
5940-99-195-0738,"TERMINAL,LUG"
5940-99-195-0739,"TERMINAL,LUG"
5940-99-195-6101,TERMINAL BOARD
5940-99-195-6979,"TERMINAL,LUG"
5940-99-195-6981,"TERMINAL, LUG"
5940-99-195-6982,"TERMINAL, LUG"
5940-99-195-6983,"TERMINAL, LUG"
5940-99-195-6984,"TERMINAL, LUG"
5940-99-195-8259,"SPLICE,CONDUCTOR"
5940-99-195-9989,TERMINAL BOARD 3 WAY
5940-99-207-3058,LISTING 2470 0.07 AMP
5940-99-214-3811,COVER TERMINAL BOARD
5940-99-223-3085,"SPLICE,CONDUCTOR"
5940-99-223-6923,"TERMINAL,LUG"
5940-99-232-5209,
5940-99-253-2210,TERMINAL LUG
5940-99-283-5281,TERMINAL LUG
5940-99-325-5984,
5940-99-349-9281,TERMINAL LUG
5940-99-373-9285,TERMINAL
5940-99-413-2360,"TERMINAL,LUG"
5940-99-427-7394,LOOPING IN BOX
5940-99-427-7395,LOOPING IN BOX
5940-99-432-9769,LINK TRANSVERSE NICKEL PLAT. COPPER
5940-99-434-0678,TERMINAL BOARD
5940-99-440-9147,CONN BATT POS.
5940-99-440-9148,CONN BATT NEG.
5940-99-444-5081,TERMINAL LUG
5940-99-444-5266,CABLE ALE PLATE CONNECTOR18BI
5940-99-444-5331,SOCKET CRIMP TYPE 2B
5940-99-444-5332,SOCKET CRIMP
5940-99-444-5333,
5940-99-444-5334,LISTING 2471 2.27 17969
5940-99-444-5335,SKT CABLE
5940-99-444-5336,SOCKET CABLE
5940-99-444-5337,SKT CABLE
5940-99-444-5338,"SOCKET,CABLE"

5940-99-444-5339,SOCKET CABLE/CONNECTOR 10BI
5940-99-444-5340,SOCKET CABLE
5940-99-444-5341,LISTING 2472 5.67
5940-99-444-5399,SOCKET CABLE/CONNECTOR 10BI
5940-99-444-5492,TERMINAL BOARD 3 WAY
5940-99-445-8277,CABLE BOX
5940-99-445-8507,JUNCTION BOX
5940-99-445-8514,LOOPING IN BOX
5940-99-445-8537,TERMINAL BOARD
5940-99-467-4052,SPLICE CONDUCTOR
5940-99-468-2512,TERMINAL
5940-99-519-5552,TERMINAL BOARD 3 WAY
5940-99-519-5554,TERMINAL BOARD
5940-99-519-5683,SOCKET
5940-99-520-0912,CONTACT STRIP
5940-99-520-5167,SOLDER SLEEVE
5940-99-521-3092,"SPLICE,CONDUCTOR"
5940-99-521-3095,"SPLICE,CONDUCTOR"
5940-99-521-3109,FERRULE
5940-99-521-3112,"SPLICE,CONDUCTOR"
5940-99-521-3113,"SPLICE,CONDUCTOR"
5940-99-521-3115,FERRULE
5940-99-521-3116,"SPLICE,CONDUCTOR"
5940-99-521-3117,FERRULE
5940-99-521-3118,FERRULE
5940-99-521-3119,"SPLICE,CONDUCTOR"
5940-99-521-3121,"SPLICE,CONDUCTOR"
5940-99-521-3122,"SPLICE,CONDUCTOR"
5940-99-521-3123,"SPLICE,CONDUCTOR"
5940-99-521-3124,"SPLICE,CONDUCTOR"
5940-99-521-5260,"FERRULE,ELECTRICAL CONDUCTOR"
5940-99-521-5261,"FERRULE,ELECTRICAL CONDUCTOR"
5940-99-521-5263,FERRULE
5940-99-521-5264,"FERRULE,ELECTRICAL CONDUCTOR"
5940-99-521-5265,FERRULE
5940-99-521-5266,"FERRULE,ELECTRICAL CONDUCTOR"
5940-99-521-5691,"TERMINAL,LUG"
5940-99-521-5692,"TERMINAL,LUG"
5940-99-522-5013,TERMINAL BOX
5940-99-522-5235,
5940-99-522-5648," TERMINAL,LUG"
5940-99-522-8046,TERMINAL LUG
5940-99-522-8052,"TERMINAL, LUG"
5940-99-522-8053," TERMINAL,LUG"
5940-99-522-8057,"TERMINAL, LUG"
5940-99-522-8059,TERMINAL LUG
5940-99-522-9416,EMERGENCY COUPLING 180A
5940-99-522-9417,EMERGENCY COUPLING
5940-99-522-9419,"CONNECTOR,EMERGENCY BULKHEAD
TERMINALS"
5940-99-522-9420,"CONNECTOR,EMERGENCY BULKHEAD
TERMINALS"
5940-99-522-9421,"CONNECTOR,EMERGENCY BULKHEAD
TERMINALS"
5940-99-523-5785,TERMINAL BOX
5940-99-523-5786,TERMINAL BOX
5940-99-523-5934,FERRULE-BROWN
5940-99-523-6039,"TERMINAL,LUG"
5940-99-523-7008,"TERMINAL,LUG"
5940-99-523-7009,"TERMINAL,LUG"
5940-99-523-9423,ADAPTOR BATTERY TERMINAL POS.
5940-99-524-2116,TERMINAL BOARD 3 WAY
5940-99-524-3910,TERMINAL BOARD
5940-99-525-5235,CABLE LUG
5940-99-525-5236,CABLE LUG

5940-99-525-5237,CABLE LUG
5940-99-525-5238,"TERMINAL,LUG"
5940-99-525-5239,"TERMINAL,LUG"
5940-99-525-5240,"TERMINAL,LUG"
5940-99-525-9143,TERMINAL
5940-99-527-0952,TERMINAL BOARD
5940-99-527-1015,EMFR. BULKHEAD TERMINAL
5940-99-527-6508,SPLICE
5940-99-527-6509,SPLICE
5940-99-527-9908,TERMINAL
5940-99-529-3503,TERMINAL LUG
5940-99-529-5792,
5940-99-531-4492,TERMINAL BOX
5940-99-531-5649,TERMINAL BOX
5940-99-531-5858,FERRULE-BROWN
5940-99-531-5859,"FERRULE,ELECTRICAL CONDUCTOR"
5940-99-531-5860,FERRULE
5940-99-531-5863,FERRULE FLANGE TYPE
5940-99-531-5864,"FERRULE,ELECTRICAL CONDUCTOR"
5940-99-531-5866,FERRULE FLANGE TYPE
5940-99-531-5868,"FERRULE,ELECTRICAL CONDUCTOR"
5940-99-531-5869,"FERRULE,ELECTRICAL CONDUCTOR"
5940-99-531-7331,"TERMINAL,QUICK DISCONNEC"
5940-99-531-9515,TERMINAL ASSY
5940-99-531-9519,TERMINAL ASSY 14 WAY
5940-99-531-9520,"TERMINAL,ASSEMBLY"
5940-99-531-9523,TERMINAL ASSY 28 WAY
5940-99-531-9524,"TERMINAL,ASSEMBLY"
5940-99-531-9526,"TERMINAL,SINGLE WAY,TWO SCREW"
5940-99-531-9532,TERMINAL
5940-99-531-9533,TERMINAL
5940-99-531-9534,TERMINAL
5940-99-531-9535,TERMINAL
5940-99-531-9536,TERMINAL
5940-99-531-9537,TERMINAL
5940-99-531-9538,END BRACKET ASSY
5940-99-531-9540,BRACKET ASSEMBLY
5940-99-531-9543,BAR ASSEMBLY
5940-99-531-9544,BAR ASSEMBLY
5940-99-531-9545,BAR ASSEMBLY
5940-99-531-9546,BAR SCREEN CONNECTION
5940-99-531-9548,BAR ASSEMBLY
5940-99-531-9549,BAR ASSEMBLY
5940-99-531-9555,S'TRIP
5940-99-531-9556,S'TRIP
5940-99-531-9560,LINK PARALLELING
5940-99-531-9574,BAR SCREEN CONNECTION
5940-99-533-1437,SPLICE CONDUCTOR
5940-99-533-1438,SPLICE CONDUCTOR
5940-99-533-1439,"SPLICE,CONDUCTOR"
5940-99-533-1440,"SPLICE,CONDUCTOR"
5940-99-533-2367,TERMINAL BOARD
5940-99-533-2369,TERMINAL BLOCK ASSY
5940-99-537-1217,TERMINAL ASSY
5940-99-537-1220,TERMINAL ASSY
5940-99-537-1221,TERMINAL BOARD
5940-99-537-6126,TERMINAL LUG
5940-99-537-6840,TERMINAL LUG
5940-99-537-8538,WIRE PIN
5940-99-538-0159,"PUMP,CENTRIFUGAL"
5940-99-539-7177,QUICK TERMINAL DISCONNECT
5940-99-539-7375,"SPLICE,CONDUCTOR"
5940-99-543-1738,TERMINAL LUG
5940-99-543-6231,"INSULATION
SLEEVE,ELECTRICAL,SPECIAL PURPOSE"

5940-99-545-2327,U/W CABLE SPLICE
5940-99-547-1115,TERMINAL QUICK DISCONNECT
5940-99-549-1690,TERMINAL LUG
5940-99-549-1691,TERMINAL LUG
5940-99-549-1692,TERMINAL LUG
5940-99-549-1693,"TERMINAL,LUG"
5940-99-549-1694,TERMINAL LUG
5940-99-549-1695,TERMINAL LUG
5940-99-549-1696,"TERMINAL,LUG"
5940-99-549-1697,"TERMINAL,LUG"
5940-99-549-1698,TERMINAL LUG
5940-99-549-1699,TERMINAL LUG
5940-99-549-1700,"TERMINAL,LUG"
5940-99-549-9059,TERMINAL
5940-99-580-4275,TERMINAL BOARD LABEL
5940-99-580-5968,FERRULE
5940-99-591-1522,FERRULE
5940-99-618-2283,SLEEVE SOLDER
5940-99-621-1809,"TERMINAL,LUG"
5940-99-621-7910,TERMINAL LUG
5940-99-621-9857,TERMINAL BOARD
5940-99-622-5782,"TERMINAL, LUG"
5940-99-626-1800,"TERMINAL, LUG"
5940-99-626-7970,REPLACES W070-09
5940-99-631-6148,"TERMINAL,POST"
5940-99-632-1170,TERMINAL
5940-99-636-6941,TERMINAL LUG
5940-99-636-8747,TERMINAL LUG
5940-99-636-8748,TERMINAL LUG
5940-99-636-8749,TERMINAL LUG
5940-99-639-0310,POST BINDING
5940-99-642-0575,TERMINAL LUG
5940-99-642-0590,"TERMINAL,LUG"
5940-99-642-4434,"TERMINAL,LUG"
5940-99-643-6114,TERMINAL LUG
5940-99-643-9834,POST BINDING ELECTRICAL
5940-99-647-6936,"TERMINAL,LUG"
5940-99-647-6937,"TERMINAL,LUG"
5940-99-647-6939,"TERMINAL,LUG"
5940-99-647-6940,"TERMINAL,LUG"
5940-99-647-6941,"TERMINAL,LUG"
5940-99-648-3048,"TERMINAL,LUG"
5940-99-654-1839,"TERMINAL,LUG"
5940-99-654-1840,TERMINAL LUG
5940-99-658-8872,TERMINAL BOARD
5940-99-664-5470,TERMINAL
5940-99-714-0996,"TERMINAL,LUG"
5940-99-718-3520,"TERMINAL,LUG"
5940-99-719-2974,"FUSE,CARTRIDGE"
5940-99-719-3731,"TERMINAL,LUG"
5940-99-721-1112,"TERMINAL,LUG"
5940-99-723-5044,"TERMINAL,LUG"
5940-99-726-6098,TERMINAL POST
5940-99-726-6099,TERMINAL POST
5940-99-726-6100,TERMINAL POST
5940-99-726-9964,"TERMINAL,POST"
5940-99-729-6044,"TERMINAL,LUG"
5940-99-732-6401,GUIDE PIN/NUT/SPRING WASHER KIT
5940-99-733-6979,SOLDER SLEEVE
5940-99-737-8214,UNDERWATER CABLE SPLICE
5940-99-740-8482,U/W CABLE SPLICE
5940-99-740-8483,U/W CABLE SPLICE
5940-99-741-8426,TERMINAL LUG
5940-99-743-3185,FUSE HOLDER
5940-99-748-4846,TERMINAL LUG

5940-99-748-4848,"TERMINAL,LUG"
5940-99-750-6851,"TERMINAL,LUG"
5940-99-757-4499,TERMINAL BOX
5940-99-758-2792,TERMINAL LUG
5940-99-758-2793,TERMINAL LUG
5940-99-758-2794,TERMINAL LUG
5940-99-758-2795,"TERMINAL,LUG"
5940-99-758-2796,TERMINAL LUG
5940-99-760-1791,FERRULE
5940-99-762-5683,TERMINAL
5940-99-764-2811,"TERMINAL,LUG"
5940-99-764-2812,TERMINAL LUG
5940-99-764-2813,TERMINAL LUG
5940-99-766-8164,TERMINAL POST
5940-99-768-2543,TERMINAL LUG
5940-99-768-2544,"TERMINAL,LUG"
5940-99-768-2545,TERMINAL LUG
5940-99-768-2546,"TERMINAL,LUG"
5940-99-776-6173,TERMINAL BOARD
5940-99-776-6174,TERMINAL BOARD
5940-99-776-6176,TERMINAL BOARD
5940-99-776-6180,TERMINAL BOARD
5940-99-776-6181,TERMINAL BOARD
5940-99-776-6182,TERMINAL BOARD
5940-99-776-6183,TERMINAL BOARD
5940-99-776-6184,TERMINAL BOARD
5940-99-776-6185,TERMINAL BOARD
5940-99-776-6186,TERMINAL BOARD
5940-99-788-2020,WAVEGUIDE ASSEMBLY
5940-99-788-2700,"TERMINAL,LUG"
5940-99-788-2701,"TERMINAL,LUG"
5940-99-795-3061,TERMINAL LUG
5940-99-795-3062,TERMINAL LUG
5940-99-795-8937,TERMINAL LUG
5940-99-795-9314,TERMINAL LUG
5940-99-795-9315,TERMINAL
5940-99-795-9316,TERMINAL
5940-99-800-8704,"TERMINAL,LUG"
5940-99-800-8706,TERMINAL LUG
5940-99-800-8708,TERMINAL LUG
5940-99-802-9440,TERMINAL LUG
5940-99-803-1727,SPLICE
5940-99-806-3503,"TERMINAL,LUG"
5940-99-814-0841,"TERMINAL,LUG"
5940-99-818-4819,"TERMINAL,LUG"
5940-99-826-9449,TERMINAL LUG
5940-99-865-7420,TERMINAL BOX
5940-99-900-4564,LINK BATTERY TERMINAL
5940-99-900-4645,TERMINAL LUG
5940-99-901-0030,TERMINAL BOARD
5940-99-901-0262,"TERMINAL, POST"
5940-99-901-0430,"TERMINAL, LUG"
5940-99-901-0703,"COVER,INSULATING,ELECTRICAL CLIP"
5940-99-901-1647,SUPERCEDES 5940-99-113-4454
5940-99-901-2186,TERMINAL POST
5940-99-901-2226,TERMINAL LUG
5940-99-901-2953,"TERMINAL,LUG"
5940-99-901-3119,"POST, BINDING, ELECTRICAL"
5940-99-901-4369,TERMINAL BOARD
5940-99-901-4629,"TERMINAL, LUG"
5940-99-901-6996,TERMINAL BOARD
5940-99-901-6998,CABLE CONNECTOR
5940-99-911-4098,TERMINAL LEAD THROUGH
5940-99-911-6448,FERRULE
5940-99-912-9318,"TERMINAL,LUG"

5940-99-913-0516,006-1 TII: M HAZ: 0 SMD: F
5940-99-913-4087,"TERMINAL, LUG"
5940-99-913-9293,
5940-99-914-1829,
5940-99-914-5372,
5940-99-914-5373,TAG
5940-99-914-7524,
5940-99-915-7251,
5940-99-923-5426,COVER TERM BOX
5940-99-923-5728,TERMINAL BOX
5940-99-924-6155,TERMINAL LUG
5940-99-932-1827,
5940-99-932-2896,
5940-99-932-3678,TERMINAL BOARD
5940-99-932-4926,
5940-99-940-0055,FERRULE
5940-99-940-0079,
5940-99-940-0080,TERMINATION LUG CRIMPING NO. 14
5940-99-940-0081,TERMINATION LUG CRIMPING NO. 15
5940-99-940-0083,
5940-99-940-0088,
5940-99-940-0090,
5940-99-940-0093,
5940-99-940-0097,
5940-99-940-0107,
5940-99-940-0450,TERMINAL BOARD
5940-99-940-0995,
5940-99-940-2148,TERMINAL BOARD
5940-99-940-2361,TERMINAL BOARD
5940-99-940-2367,TERMINAL BOARD
5940-99-940-2622,TERMINAL LUG
5940-99-940-2624,TERMINATION CONDUCTOR
5940-99-940-2630,TERMINAL LUG
5940-99-940-2631,TERMINATION CONDUCTOR
5940-99-940-3304,TERMINAL LUG
5940-99-940-3310,
5940-99-940-3456,
5940-99-940-9290,TERMINAL BOARD
5940-99-940-9352,
5940-99-940-9459,TERMINAL PLUG
5940-99-941-3958," SCREW,GRUB"
5940-99-943-3666,TERMINAL BLOCK
5940-99-943-7360,
5940-99-943-8570,"TERMINAL, LUG"
5940-99-945-0326,"COVER,TERMINAL BOARD"
5940-99-945-0396,
5940-99-945-3834,
5940-99-945-3837,
5940-99-945-3907,
5940-99-945-3910,TERMINAL LUG
5940-99-945-4995,
5940-99-945-5072,
5940-99-945-7626,TERMINAL LUG
5940-99-945-7634,
5940-99-945-8553,
5940-99-946-2951,
5940-99-946-2952,TERMINATION RING
5940-99-948-2491,
5940-99-949-3079,
5940-99-949-7339,"BOX CONNECTOR,ELECTRICAL"
5940-99-949-8488,
5940-99-952-2158,
5940-99-952-2381,HOLDER FUSE
5940-99-952-7649,
5940-99-952-9188,TERMINAL POST

5940-99-953-0251,
5940-99-954-1570,
5940-99-955-3738,TERMINAL BOARD 3 WAY
5940-99-967-9445,
5940-99-971-0274,"FERRULE,ELECTRICAL CONDUCTOR"
5940-99-971-7817,TERMINAL QUICK DISCONNECT
5940-99-971-9170,TAPER PIN
5940-99-971-9171,FERRULE PART OF Z560039
5940-99-972-2266,TAPER PIN
5940-99-972-7296,
5940-99-972-7300,TERMINAL LUG
5940-99-972-7304,TERMINAL LUG
5940-99-972-7305,
5940-99-972-7306,
5940-99-972-7307,TERMINAL LUG
5940-99-972-7308,
5940-99-972-7309,TERMINAL LUG
5940-99-972-7465,TERMINAL LUG
5940-99-972-7466,TERMINAL LUG
5940-99-972-8713,
5940-99-972-9806,TERMINAL BOARD
5940-99-976-1178,U/WATER CABLE SPLICE
5940-99-977-7559,SPLICE CONDUCTOR
5940-99-999-2231,TERMINAL CONDUCTOR
5940-99-999-3982,
5940-99-999-7726,
5940-99-999-7800,TERMINAL LUG
5945-99-011-2299,RELAY SWITCH 5A
5945-99-208-4901,RELAY ARMATURE
5945-99-223-2468,CONTACT ASSY ELECTRICAL
5945-99-461-3207,RETARDER CLOCKWORK TYPE
5945-99-461-3350,RACK END UNIT
5945-99-461-3394,RETARDER
5945-99-461-3407,SPARKER BRACKET FIXED
5945-99-461-3469,CLIP BACKING
5945-99-461-3475,BLADE FLICKER & HINGE
5945-99-461-3531,TIMER UNIT
5945-99-461-3532,TIMER UNIT
5945-99-463-6872,CLOCKWORK RETARDER
5945-99-539-0641,CIRCUIT BREAKER
5945-99-539-0642,CIRCUIT BREAKER
5945-99-539-0648,CIRCUIT BREAKER
5945-99-539-0649,CIRCUIT BREAKER
5945-99-539-0650,CIRCUIT BREAKER
5945-99-541-2037,305-001-345-621
5945-99-541-2064,
5945-99-620-1056,HEATER THERMAL RELEASE
5945-99-638-7175,RELAY REED
5945-99-920-6666,
5945-99-923-6944,FLASHER TERMINAL
5945-99-932-2123,

